



IBM NetVista 2200w Phase I

Creating an RDP session with Phase I
Functionality



Creating an RDP connection

Follow these steps to create an RDP connection:

- ◆ From the WTS Connection Wizard dialog box, enter a name for the new connection and either the network name or IP address of the terminal server, and click **Next**.
- ◆ If you plan to use this connection across a slow network connection, check the **Low Speed Connection** box.



Creating an RDP connection

- ◆ To enable automatic logon for the new connection, check the **Automatic Logon** box, enter the correct values for the required fields, and then click **Next**. If you do not plan to enable automatic logon, leave the fields blank, and click **Next**.



Creating an RDP connection

- ◆ Select the display interface for the new connection, and click **Next**. Your selection determines the display interface that runs when you connect and logon to your terminal server. You have the following options:
 - ◆ **Desktop**--The terminal server desktop displays when you connect and logon successfully to your terminal server.
 - ◆ **Application file name** -- A specific application automatically runs and displays its graphical user interface when you connect and logon successfully to your terminal server.



Creating an RDP connection

- ◆ Click **Finish** to save your new terminal server connection.
 - ◆ The Terminal Connection Manager window lists the new RDP connection on both the Connections tab and the Configure tab.
 - ◆ To connect to a terminal server through an RDP connection, see "Connecting to a terminal server" on page 22 of the Reference Guide for information.
 - ◆ To edit an RDP connection, see "Editing an RDP connection" on page 28 of the Reference Guide for information.



Questions?

