

**NAME**

kl - KL-11 or DL-11 asynchronous interface

**DESCRIPTION**

The discussion of typewriter I/O given in *ty(4)* applies to these devices.

Since they run at a constant speed, attempts to change the speed via *ioctl(2)* are ignored.

The on-line console typewriter is normally interfaced using a KL-11 or DL-11.

The system console can be accessed via three different methods. They are as follows:

*ln00* is an entry in the lines file to allow a *who(1)* command to identify the line. This entry is here for historical reasons only.

*Systty* is the real system console that is physically attached to the KL-11 or DL-11. This is where all the system error messages are printed.

*Syscon* is the virtual console that can be linked to another line for remote reboot. *init(1M)* and *reboot(1M)* talk to this device.

Normally, *systty*, *syscon* and *ln00* are all linked together. *Telinit(1M)* will change this arrangement if changing run level to level 7 causes the current terminal to become *syscon*.

**FILES**

/dev/ln00  
/dev/systty  
/dev/syscon

**SEE ALSO**

*ty(4)*, *who(1)*, *telinit(1)*, *reboot(1)*, *init(1M)*

**BUGS**

Modem control for the DL-11E is not implemented.