

ThinkCentre

Hardware Maintenance Manual

Types 8290, 8291, 8292, 8293, 8294, 8295

Types 9214, 9215, 9216, 9217, 9218, 9219

ThinkCentre

Hardware Maintenance Manual

Types 8290, 8291, 8292, 8293, 8294, 8295

Types 9214, 9215, 9216, 9217, 9218, 9219

Note: Before using this information and the product it supports, be sure to read the information under “Notices,” on page 189.

First Edition (September 2005)

© Copyright Lenovo 2005.

Portions © Copyright International Business Machines Corporation 2005.

All rights reserved.

U.S. GOVERNMENT USERS – RESTRICTED RIGHTS: Our products and/or services are provided with RESTRICTED RIGHTS. Use, duplication or disclosure by the Government is subject to the GSA ADP Schedule contract with Lenovo Group Limited, if any, or the standard terms of this commercial license, or if the agency is unable to accept this Program under these terms, then we provide this Program under the provisions set forth in Commercial Computer Software–Restricted Rights at FAR 52.227-19, when applicable, or under Rights in Data-General, FAR 52.227.14 (Alternate III).

Contents

Chapter 1. About this manual 1

Important Safety Information	1
Important information about replacing RoHS compliant FRUs	2

Chapter 2. Safety information 3

General safety	3
Electrical safety	3
Safety inspection guide	5
Handling electrostatic discharge-sensitive devices	6
Grounding requirements	6
Safety notices (multi-lingual translations)	7

Chapter 3. General information 39

The Access IBM program	39
Additional information resources	39
Specifications	40
Machine types 8290, 8291, 8292, 9214, 9215, and 9216	40
Machine types 8293, 8294, 8295, 9217, 9218, and 9219	40

Chapter 4. General Checkout 43

Problem determination tips	43
--------------------------------------	----

Chapter 5. Diagnostics using PC-Doctor for DOS 45

Starting PC-Doctor from the Rescue and Recovery workspace	45
Starting PC-Doctor from a diagnostic diskette or CD-ROM	46
Diagnostics program download	46
Navigating through the diagnostics programs	46
Running diagnostics tests	46
Test selection	47
Test results	47
Fixed disk advanced test (FDAT)	47
Quick and Full erase - hard drive	49
Viewing the test log	50

Chapter 6. Using the CMOS Setup Utility 51

Starting the CMOS Setup Utility program	51
Viewing and changing settings	51
Using passwords	51
User Password	51
Administrator Password	52
Selecting a startup device	53
Selecting a temporary startup device	53
Changing the startup device sequence	53
Exiting from the CMOS Setup Utility program	53

Chapter 7. Symptom-to-FRU Index 55

Hard disk drive boot error	55
Power Supply Problems	55

Diagnostic error codes	57
Beep symptoms	78
POST error codes	79
Miscellaneous error messages	81
Undetermined problems	82

Chapter 8. Replacing FRUs (Types 8290, 8291, 8292, 9214, 9215, and 9216 85

Rear connectors	86
Removing the covers	86
Locations	88
Identifying parts on the system board (Types 8290, 8291, and 8292	89
Identifying parts on the system board (Types 9214, 9215, and 9216	90
Removing and replacing the front bezel	90
Replacing a memory module	91
Replacing a PCI adapter	92
Replacing the CMOS battery	93
Replacing the power supply	94
Replacing the system board	95
Replacing the microprocessor	99
Replacing the primary hard disk drive	104
Replacing an optical drive	105
Replacing the diskette drive	106
Replacing the power switch/ LED assembly	107
Replacing the front panel card	108
Completing the FRU replacement	109

Chapter 9. Replacing FRUs (Types 8293, 8294, 8295, 9217, 9218, and 9219 111

Rear connectors	112
Removing the cover	112
Locations	113
Identifying parts on the system board (Types 8293, 8294, and 8295	114
Identifying parts on the system board (Types 9217, 9218, and 9219	115
Removing and replacing the drive bay assembly	116
Replacing a memory module	117
Replacing a PCI adapter	118
Replacing the CMOS battery	120
Replacing the power supply	121
Replacing the system board	122
Replacing the microprocessor	126
Replacing the hard disk drive	131
Replacing an optical drive	132
Replacing the diskette drive	133
Replacing the power switch/ LED assembly	134
Replacing the front panel card	135
Completing the FRU replacement	135

Chapter 10. FRU lists 137

Machine Type 8291	137
Machine Type 8292	142

Machine Type 8293	146
Machine Type 8294	149
Machine Type 8295	154
Machine Type 9214	158
Machine Type 9215	161
Machine Type 9216	167
Machine Type 9217	171
Machine Type 9218	174
Machine Type 9219	178

Chapter 11. Additional Service Information 183

Security features	183
Hardware controlled Passwords	183
Operating system password	183
Vital product data	183

Management Information Format (MIF)	183
BIOS levels	184
Flash update procedures.	184
Updating (flashing) BIOS from a diskette	184
Recovering from a POST/BIOS update failure	184
Power management	186
Automatic configuration and power interface (ACPI) BIOS.	186
Automatic Power-On features	186
Recovering software using the Rescue and Recovery program.	187
Starting the Rescue and Recovery workspace	187

Appendix. Notices 189

Television output notice	190
Trademarks	190

Chapter 1. About this manual

This manual contains service and reference information for ThinkCentre® computers listed on the cover. It is intended only for trained servicers who are familiar with Lenovo computer products.

Before servicing a Lenovo product, be sure to read the Safety Information. See Chapter 2, "Safety information," on page 3.

The Symptom-to-FRU Index and Additional Service Information chapters are not specific to any machine type and are applicable to all ThinkCentre computers.

This manual includes a complete FRU part number listing for each machine type and model listed on the cover. If you have internet access, FRU part numbers are also available at:

<http://www.lenovo.com/think/support>

Important Safety Information

Be sure to read all caution and danger statements in this book before performing any of the instructions.

Veillez lire toutes les consignes de type DANGER et ATTENTION du présent document avant d'exécuter les instructions.

Lesen Sie unbedingt alle Hinweise vom Typ "ACHTUNG" oder "VORSICHT" in dieser Dokumentation, bevor Sie irgendwelche Vorgänge durchführen

Leggere le istruzioni introdotte da ATTENZIONE e PERICOLO presenti nel manuale prima di eseguire una qualsiasi delle istruzioni

Certifique-se de ler todas as instruções de cuidado e perigo neste manual antes de executar qualquer uma das instruções

Es importante que lea todas las declaraciones de precaución y de peligro de este manual antes de seguir las instrucciones.

. تأكد من قراءة كل التحذيرات الموجودة في هذا الكتاب قبل اتباع هذه التعليمات .

执行任何说明之前，请确保已阅读本书中的所有警告和危险声明。

執行任何指示前，請確實閱讀本書中的所有警告及危險聲明。

. ודאו שקראתם את כל הודעות האזהרה והסכנה במסמך זה לפני שתבצעו פעולה כלשהי.

본 사용 설명서에 기재된 내용을 실행하기 전에 모든 주의사항 및 위험사항을 숙지하십시오.

Important information about replacing RoHS compliant FRUs

RoHS, The Restriction of Hazardous Substances in Electrical and Electronic Equipment Directive (2002/95/EC) is a European Union legal requirement affecting the global electronics industry. RoHS requirements must be implemented on Lenovo products placed on the market after June 2006. Products on the market before June 2006 are not required to have RoHS compliant parts. So, if the parts are not compliant originally, replacement parts can also be noncompliant, but in all cases, if the parts are compliant, the replacement parts must also be compliant.

Lenovo plans to transition to RoHS compliance well before the implementation date and expects its suppliers to be ready to support Lenovo's requirements and schedule. Products sold in 2005, will contain some RoHS compliant FRUs. The following statement pertains to these products and any product Lenovo produces containing RoHS compliant parts.

RoHS compliant ThinkCentre parts have unique FRU part numbers. Before or after June, 2006, failed RoHS compliant parts must always be replaced using RoHS compliant FRUs, so only the FRUs identified as compliant in the system HMM or direct substitutions for those FRUs can be used.

Products marketed before June 2006		Products marketed after June 2006	
Current or original part	Replacement FRU	Current or original part	Replacement FRU
Non-RoHS	Can be Non-RoHS	Must be RoHS	Must be RoHS
Non-RoHS	Can be RoHS		
Non-RoHS	Can sub to RoHS		
RoHS	Must be RoHS		

Note: A direct substitution is a part with a different FRU part number that is automatically shipped by the distribution center at the time of order.

Related Web URLs are:

- Lenovo information for Suppliers website:
<http://www-03.ibm.com/procurement/proweb.nsf/ContentDocsByTitle/United+States~Information+for+suppliers>
- RoHS Directive:
http://europa.eu.int/eur-lex/pri/en/oj/dat/2003/l_037/l_03720030213en00190023.pdf
- California Senate Bills 20, 50:
<http://www.ciwmb.ca.gov/HHW/Events/AnnualConf/2004/presentation/MPaparian.pdf>

Chapter 2. Safety information

This chapter contains the safety information that you need to be familiar with before servicing a computer.

General safety

Follow these rules to ensure general safety:

- Observe good housekeeping in the area of the machines during and after maintenance.
- When lifting any heavy object:
 1. Ensure you can stand safely without slipping.
 2. Distribute the weight of the object equally between your feet.
 3. Use a slow lifting force. Never move suddenly or twist when you attempt to lift.
 4. Lift by standing or by pushing up with your leg muscles; this action removes the strain from the muscles in your back. *Do not attempt to lift any objects that weigh more than 16 kg (35 lb) or objects that you think are too heavy for you.*
- Do not perform any action that causes hazards to the customer, or that makes the equipment unsafe.
- Before you start the machine, ensure that other service representatives and the customer's personnel are not in a hazardous position.
- Place removed covers and other parts in a safe place, away from all personnel, while you are servicing the machine.
- Keep your tool case away from walk areas so that other people will not trip over it.
- Do not wear loose clothing that can be trapped in the moving parts of a machine. Ensure that your sleeves are fastened or rolled up above your elbows. If your hair is long, fasten it.
- Insert the ends of your necktie or scarf inside clothing or fasten it with a nonconductive clip, approximately 8 centimeters (3 inches) from the end.
- Do not wear jewelry, chains, metal-frame eyeglasses, or metal fasteners for your clothing.

Remember: Metal objects are good electrical conductors.
- Wear safety glasses when you are: hammering, drilling soldering, cutting wire, attaching springs, using solvents, or working in any other conditions that might be hazardous to your eyes.
- After service, reinstall all safety shields, guards, labels, and ground wires. Replace any safety device that is worn or defective.
- Reinstall all covers correctly before returning the machine to the customer.

Electrical safety



CAUTION:

Electrical current from power, telephone, and communication cables can be hazardous. To avoid personal injury or equipment damage, disconnect the attached power cords, telecommunication systems, networks, and modems before you open the server/workstation covers, unless instructed otherwise in the installation and configuration procedures.

Observe the following rules when working on electrical equipment.

Important: Use only approved tools and test equipment. Some hand tools have handles covered with a soft material that does not insulate you when working with live electrical currents.

Many customers have, near their equipment, rubber floor mats that contain small conductive fibers to decrease electrostatic discharges. Do not use this type of mat to protect yourself from electrical shock.

- Find the room emergency power-off (EPO) switch, disconnecting switch, or electrical outlet. If an electrical accident occurs, you can then operate the switch or unplug the power cord quickly.
- Do not work alone under hazardous conditions or near equipment that has hazardous voltages.
- Disconnect all power before:
 - Performing a mechanical inspection
 - Working near power supplies
 - Removing or installing main units
- Before you start to work on the machine, unplug the power cord. If you cannot unplug it, ask the customer to power-off the wall box that supplies power to the machine and to lock the wall box in the off position.
- If you need to work on a machine that has exposed electrical circuits, observe the following precautions:
 - Ensure that another person, familiar with the power-off controls, is near you.
Remember: Another person must be there to switch off the power, if necessary.
 - Use only one hand when working with powered-on electrical equipment; keep the other hand in your pocket or behind your back.
Remember: There must be a complete circuit to cause electrical shock. By observing the above rule, you may prevent a current from passing through your body.
 - When using testers, set the controls correctly and use the approved probe leads and accessories for that tester.
 - Stand on suitable rubber mats (obtained locally, if necessary) to insulate you from grounds such as metal floor strips and machine frames.

Observe the special safety precautions when you work with very high voltages; these instructions are in the safety sections of maintenance information. Use extreme care when measuring high voltages.

- Regularly inspect and maintain your electrical hand tools for safe operational condition.
- Do not use worn or broken tools and testers.
- *Never assume* that power has been disconnected from a circuit. First, *check* that it has been powered-off.

- Always look carefully for possible hazards in your work area. Examples of these hazards are moist floors, nongrounded power extension cables, power surges, and missing safety grounds.
- Do not touch live electrical circuits with the reflective surface of a plastic dental mirror. The surface is conductive; such touching can cause personal injury and machine damage.
- Do not service the following parts with the power on when they are removed from their normal operating places in a machine:
 - Power supply units
 - Pumps
 - Blowers and fans
 - Motor generators
 and similar units. (This practice ensures correct grounding of the units.)
- If an electrical accident occurs:
 - Use caution; do not become a victim yourself.
 - Switch off power.
 - Send another person to get medical aid.

Safety inspection guide

The intent of this inspection guide is to assist you in identifying potentially unsafe conditions on these products. Each machine, as it was designed and built, had required safety items installed to protect users and service personnel from injury. This guide addresses only those items. However, good judgment should be used to identify potential safety hazards due to attachment of features or options not covered by this inspection guide.

If any unsafe conditions are present, you must determine how serious the apparent hazard could be and whether you can continue without first correcting the problem.

Consider these conditions and the safety hazards they present:

- Electrical hazards, especially primary power (primary voltage on the frame can cause serious or fatal electrical shock).
- Explosive hazards, such as a damaged CRT face or bulging capacitor
- Mechanical hazards, such as loose or missing hardware

The guide consists of a series of steps presented in a checklist. Begin the checks with the power off, and the power cord disconnected.

Checklist:

1. Check exterior covers for damage (loose, broken, or sharp edges).
2. Power-off the computer. Disconnect the power cord.
3. Check the power cord for:
 - a. A third-wire ground connector in good condition. Use a meter to measure third-wire ground continuity for 0.1 ohm or less between the external ground pin and frame ground.
 - b. The power cord should be the appropriate type as specified in the parts listings.
 - c. Insulation must not be frayed or worn.
4. Remove the cover.

5. Check for any obvious alterations. Use good judgment as to the safety of any alterations.
6. Check inside the unit for any obvious unsafe conditions, such as metal filings, contamination, water or other liquids, or signs of fire or smoke damage.
7. Check for worn, frayed, or pinched cables.
8. Check that the power-supply cover fasteners (screws or rivets) have not been removed or tampered with.

Handling electrostatic discharge-sensitive devices

Any computer part containing transistors or integrated circuits (ICs) should be considered sensitive to electrostatic discharge (ESD). ESD damage can occur when there is a difference in charge between objects. Protect against ESD damage by equalizing the charge so that the machine, the part, the work mat, and the person handling the part are all at the same charge.

Notes:

1. Use product-specific ESD procedures when they exceed the requirements noted here.
2. Make sure that the ESD protective devices you use have been certified (ISO 9000) as fully effective.

When handling ESD-sensitive parts:

- Keep the parts in protective packages until they are inserted into the product.
- Avoid contact with other people.
- Wear a grounded wrist strap against your skin to eliminate static on your body.
- Prevent the part from touching your clothing. Most clothing is insulative and retains a charge even when you are wearing a wrist strap.
- Use the black side of a grounded work mat to provide a static-free work surface. The mat is especially useful when handling ESD-sensitive devices.
- Select a grounding system, such as those listed below, to provide protection that meets the specific service requirement.

Note: The use of a grounding system is desirable but not required to protect against ESD damage.

- Attach the ESD ground clip to any frame ground, ground braid, or green-wire ground.
- Use an ESD common ground or reference point when working on a double-insulated or battery-operated system. You can use coax or connector-outside shells on these systems.
- Use the round ground-prong of the ac plug on ac-operated computers.

Grounding requirements

Electrical grounding of the computer is required for operator safety and correct system function. Proper grounding of the electrical outlet can be verified by a certified electrician.

Safety notices (multi-lingual translations)

The caution and danger safety notices in this section are provided in the following languages:

- English
- Arabic
- Brazilian/Portuguese
- Chinese (simplified)
- Chinese (traditional)
- French
- German
- Hebrew
- Italian
- Korean
- Spanish



DANGER

Electrical current from power, telephone and communication cables is hazardous.

To avoid a shock hazard:

- **Do not connect or disconnect any cables or perform installation, maintenance, or reconfiguration of this product during an electrical storm.**
- **Connect all power cords to a properly wired and grounded electrical outlet.**
- **Connect to properly wired outlets any equipment that will be attached to this product.**
- **When possible, use one hand only to connect or disconnect signal cables.**
- **Never turn on any equipment when there is evidence of fire, water, or structural damage.**
- **Disconnect the attached power cords, telecommunications systems, networks, and modems before you open the device covers, unless instructed otherwise in the installation and configuration procedures.**
- **Connect and disconnect cables as described in the following table when installing, moving, or opening covers on this product or attached devices.**

To Connect	To Disconnect
<ol style="list-style-type: none">1. Turn everything OFF.2. First, attach all cables to devices.3. Attach signal cables to connectors.4. Attach power cords to outlet.5. Turn device ON.	<ol style="list-style-type: none">1. Turn everything OFF.2. First, remove power cords from outlet.3. Remove signal cables from connectors.4. Remove all cables from devices.



CAUTION:

When replacing the lithium battery, use only Part Number 33F8354 or an equivalent type battery recommended by the manufacturer. If your system has a module containing a lithium battery, replace it only with the same module type made by the same manufacturer. The battery contains lithium and can explode if not properly used, handled, or disposed of.

Do not:

- Throw or immerse into water
- Heat to more than 100°C (212°F)
- Repair or disassemble

Dispose of the battery as required by local ordinances or regulations.



CAUTION:

When laser products (such as CD-ROMs, DVD-ROM drives, fiber optic devices, or transmitters) are installed, note the following:

- Do not remove the covers. Removing the covers of the laser product could result in exposure to hazardous laser radiation. There are no serviceable parts inside the device.
- Use of controls or adjustments or performance of procedures other than those specified herein might result in hazardous radiation exposure.



DANGER: Some laser products contain an embedded Class 3A or Class 3B laser diode. Note the following:

Laser radiation when open. Do not stare into the beam, do not view directly with optical instruments, and avoid direct exposure to the beam.



≥18 kg (37 lbs)



≥32 kg (70.5 lbs)



≥55 kg (121.2 lbs)


CAUTION:

Use safe practices when lifting.



CAUTION:

The power control button on the device and the power switch on the power supply do not turn off the electrical current supplied to the device. The device also might have more than one power cord. To remove all electrical current from the device, ensure that all power cords are disconnected from the power source.



CAUTION:



خطر

التيار الكهربى الموجود بمصدر الطاقة أو أجهزة التليفون أو أسلاك الإتصالات يشكل خطورة.

لتفادي مخاطر الصدمات الكهربائية:

لا تحاول توصيل أو فصل أي أسلاك أو القيام بعمليات تركيب أو صيانة أو إعادة توصيف لهذا المنتج أثناء وجود عاصفة كهربائية.

يجب توصيل كل أسلاك الكهرباء في مخارج كهرباء ذات توصيلات أسلاك وتوصيلات أرضية صحيحة
يجب توصيل أي جهاز سيتم الحاقه بهذا المنتج في مخارج كهرباء ذات توصيلات أسلاك صحيحة.

وإن أمكن يجب استخدام يد واحدة فقط في توصيل أو فصل أسلاك الإشارة.

لا تحاول تشغيل أي جهاز إذا كان هناك أثر لحرق أو مياه أو تلف بالمكونات

يجب فصل أسلاك الكهرباء وأنظمة الاتصالات وشبكات الاتصال وأجهزة المودم الملحقة قبل فتح أغطية الجهاز، ما لم يتم طلب خلاف ذلك في التعليمات الخاصة بالتركيب والتوصيف.

قم بتوصيل وفصل الأسلاك كما هو موضح في الجدول التالي وذلك عند القيام بعمليات التركيب أو النقل أو فتح أغطية هذا المنتج أو الأجهزة الملحقة.

للتوصيل:

قم بإيقاف كل شيء.

أولاً، قم بتوصيل كل الأسلاك بالأجهزة.

قم بتوصيل أسلاك الإشارة في لموصلات.

قم بتوصيل أسلاك الكهرباء في المخارج.

قم بتشغيل الجهاز.

للفصل:

قم بإيقاف كل شيء.

أولاً، قم بفصل كل أسلاك الكهرباء من المخرج.

قم بفصل أسلاك الإشارة من الموصلات.

قم بفصل كل الأسلاك من الأجهزة.



تنبيه :

عند استبدال البطارية الليثيوم، استخدم فقط رقم الجزء الخاص **Part Number 33F8354** أو نوع آخر يكون على نفس مستوى الكفاءة يحدده لك المصنع.
إذا كان النظام الخاص يستخدم معه بطارية ليثيوم قم باستبدالها بنفس النوع الذي تم صناعته من خلال نفس المصنع. تحتوي البطارية على مادة الليثيوم ويمكن أن تنفجر في حالة عدم استخدامها أو التعامل معها بطريقة صحيحة أو عند التخلص منها بطريقة خطأ.

لا تقم بـ:

- الفاء البطارية أو غمرها في الماء
- تسخينها أعلى من ١٠٠ درجة مئوية و(٢١٢ ° فهرنهايت)
- بتصليحها أو فكها

تخلص من البطارية طبقاً للقانون أو النظام المحلي .



تنبيه :

أثناء تركيب منتجات ليزر (مثل CD-ROMs أو وحدة تشغيل DVD أو أجهزة Fiber Optic أو وحدات الإرسال) يجب مراعاة الآتي:

لا تنزع الأغطية. قد ينتج عن نزع أغطية منتج الليزر انفجار أشعة الليزر شديدة الخطورة.
لا يوجد أجزاء يمكن تغييرها داخل الجهاز. قد ينتج عن استخدام تحكيمات أو تعديلات أو عمل أي تصرفات أخرى تخالف ما هو محدد هنا إلى انفجار أشعة شديدة الخطورة.



خطر

تحتوي بعض منتجات الليزر على الفئة دايود ليزر مدمج من الفئة **Class 3A** أو **Class 3B**. يجب مراعاة الآتي .

أشعة الليزر عند الفتح. لا تحدد إلى الإشعاع و لا تنظر إليه مباشرة بواسطة أي أجهزة مرئية وتجنب التعرض المباشر للإشعاع .



≥18 kg (37 lbs)



≥32 kg (70.5 lbs)




≥55 kg (121.2 lbs)



تنبيه :
يجب استخدام ممارسات آمنة عند الرفع



تنبيهه :
لا يقرم زر التحكم في التشغيل الموجود على الجهاز والمفتاح الكهربائي الموجود على لوحة التحكم بإيقاف التيار الكهربائي المار بالجهاز. قد يكون للجهاز أكثر من سلك كهربائي واحد. لايقاف التيار الكهربائي المار بالجهاز، تأكد من فصل جميع أسلاك الكهرباء من مصدر الكهرباء .



تنبيهه :
لا تضع أي عنصر يزن أكثر من ٨٢ كيلوجرام (١٨٠ رطل) أعلى سطح الأجهزة.





PERIGO

A corrente elétrica proveniente de cabos de alimentação, de telefone e de comunicações é perigosa.

Para evitar risco de choque elétrico:

- Não conecte nem desconecte nenhum cabo ou execute instalação, manutenção ou reconfiguração deste produto durante uma tempestade com raios.
- Conecte todos os cabos de alimentação a tomadas elétricas corretamente instaladas e aterradas.
- Todo equipamento que for conectado a este produto deve ser conectado a tomadas corretamente instaladas.
- Quando possível, utilize apenas uma das mãos para conectar ou desconectar cabos de sinal.
- Nunca ligue nenhum equipamento quando houver evidência de fogo, água ou danos estruturais.
- Antes de abrir tampas de dispositivos, desconecte cabos de alimentação, sistemas de telecomunicação, redes e modems conectados, a menos que especificado de maneira diferente nos procedimentos de instalação e configuração.
- Conecte e desconecte os cabos conforme descrito na tabela apresentada a seguir ao instalar, mover ou abrir tampas deste produto ou de dispositivos conectados.

Para Conectar:	Para Desconectar:
<ol style="list-style-type: none">1. DESLIGUE Tudo.2. Primeiramente, conecte todos os cabos aos dispositivos.3. Conecte os cabos de sinal aos conectores.4. Conecte os cabos de alimentação às tomadas.5. LIGUE os dispositivos.	<ol style="list-style-type: none">1. DESLIGUE Tudo.2. Primeiramente, remova os cabos de alimentação das tomadas.3. Remova os cabos de sinal dos conectores.4. Remova todos os cabos dos dispositivos.



CUIDADO:

Ao substituir a bateria de lítio, utilize apenas uma bateria com Número de Peça 33F8354 ou um tipo de bateria equivalente recomendado pelo Se o seu sistema possui um módulo com uma bateria de lítio, substitua-o apenas por um módulo do mesmo tipo e do mesmo fabricante. A bateria contém lítio e pode explodir se não for utilizada, manuseada ou descartada de maneira correta.

Não:

- Jogue ou coloque na água
- Aqueça a mais de 100°C (212°F)
- Conserte nem desmonte

Descarte a bateria conforme requerido pelas leis ou regulamentos locais.



PRECAUCIÓN:

Quando produtos a laser (como unidades de CD-ROMs, unidades de DVD-ROM, dispositivos de fibra ótica ou transmissores) estiverem instalados, observe o seguinte:

- Não remova as tampas. A remoção das tampas de um produto a laser pode resultar em exposição prejudicial à radiação de laser. Não existem peças que podem ser consertadas no interior do dispositivo.
- A utilização de controles ou ajustes ou a execução de procedimentos diferentes dos especificados aqui pode resultar em exposição prejudicial à radiação.

PERIGO

Alguns produtos a laser contêm diodo de laser integrado da Classe 3A ou da Classe 3B. Observe o seguinte:

Radiação a laser quando aberto. Não olhe diretamente para o feixe a olho nu ou com instrumentos ópticos e evite exposição direta ao feixe.



≥18 kg (37 lbs)



≥32 kg (70.5 lbs)



≥55 kg (121.2 lbs)


CUIDADO:

Utilize procedimentos de segurança para levantar equipamentos.



CUIDADO:

O botão de controle de alimentação do dispositivo e o botão para ligar/desligar da fonte de alimentação não desligam a corrente elétrica fornecida ao dispositivo. O dispositivo também pode ter mais de um cabo de alimentação. Para remover toda a corrente elétrica do dispositivo, assegure que todos os cabos de alimentação estejam desconectados da fonte de alimentação.

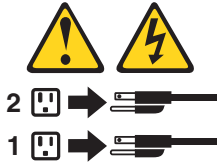

CUIDADO:



危险

电源、电话和通信电缆中的电流是危险的。

为避免电击危险：

- 请勿在雷电期间连接或断开任何电缆的连接，或者对本产品进行安装、维护或重新配置。
- 将所有电源线连接到正确连线和妥善接地的电源插座。
- 将所有要连接到该产品的设备连接到正确连线的插座。
- 如果可能，请仅使用一只手来连接或断开信号电缆的连接。
- 切勿在有火、水、结构损坏迹象的情况下开启任何设备。
- 在打开设备外盖之前请断开已连接的电源线、远程通信系统、网络和调制解调器，除非在安装和配置过程中另有说明。
- 当安装、移动或打开该产品或连接设备的外盖时，请按照下表所述来连接或断开电缆的连接。

要连接	要断开连接
<ol style="list-style-type: none">1. 切断所有电源。2. 首先将所有电缆连接到设备。3. 将信号电缆连接到接口。4. 将电源线连接到插座。5. 开启设备。	<ol style="list-style-type: none">1. 切断所有电源。2. 首先从插座上拔出电源线。3. 从接口上拔出信号电缆。4. 从设备上拔出所有电缆。



警告：
更换锂电池时，请仅使用部件号为 33F8354 的电池或制造商推荐的同类电池。如果您的系统有包含锂电池的模块，请仅使用同一制造商生产的相同模块类型来替换该模块。该电池中含有锂，如果使用、操作或处理不当，可能会发生爆炸。

切勿：

- 投入或浸入水中
- 加热到 100 °C (212 °F) 以上
- 维修或拆卸

请按照当地法令或条例的要求处理电池。



警告：
安装激光产品（例如 CD-ROM、DVD-ROM 驱动器、光纤设备或发射设备）时，
请注意以下声明：

- 请勿卸下外盖。卸下激光产品的外盖可能导致遭受激光辐射的危险。该设备内没有可维修的部件。
- 如果不按照此处指定的过程进行控制、调整或操作，则有可能导致遭受辐射的危险。



危险

某些激光产品包含嵌入式 3A 类或 3B 类激光二极管。请注意以下声明：

打开后有激光辐射。请勿注视光束，请勿直接用光学仪器查看，并请避免直接暴露在光束中。



≥18 千克 (37 磅)



≥32 千克 (70.5 磅)



≥55 千克 (121.2 磅)

警告：
抬起时请采取安全措施。



警告：
设备上的电源控制按钮和电源上的电源开关不会切断供给该设备的电流。该设备还可能有多条电源线。要切断该设备的所有电流，请确保所有电源线都与电源断开连接。





警告:

切勿在机架安装设备的顶部放置任何重量超过 82 千克（180 磅）的物体。





危險

電源、電話及通訊纜線上的電流都具有危險性。

若要避免觸電危險：

- 請勿在雷雨期間，連接或拔除纜線、執行安裝、維護或重新配置本產品。
- 將所有電源線連接到正確配線及接地的電源插座。
- 任何與本產品連接的設備都必須連接到配線妥當的電源插座。
- 請盡可能用單手連接或拔除信號線。
- 發生火災、水災或結構損害時，絕對不要開啟任何設備。
- 除非在安裝及配置程序中另有指示，否則在開啟裝置機蓋之前，請拔掉連接的電源線、電信系統、網路及數據機。
- 安裝、移動或開啟本產品或附屬裝置的機蓋時，請遵循下列說明連接及拔掉纜線。

連線	切斷連線
<ol style="list-style-type: none">1. 關閉所有開關。2. 首先，連接所有接線到裝置。3. 連接信號線到接頭。4. 連接電源線到插座。5. 開啟裝置。	<ol style="list-style-type: none">1. 關閉所有開關。2. 首先，拔掉插座上的電源線。3. 拔掉接頭上的信號線。4. 拔掉裝置上所有接線。



警告：

更換鋰電池時，請僅使用產品編號 **33F8354** 或製造商所建議的同類型電池。
如果您的系統中含有鋰電池模組，請僅使用同一家製造商所生產的相同模組進行更換。
如果未以正確方式使用、處理或棄置含鋰的電池，會有爆炸的危險。
請勿：

- 沾溼或浸入水中
 - 置於 **100C (212F)** 以上的高溫環境
 - 修理或拆開
- 請按照各地區有關廢棄電池的法令和規定處理舊電池。



警告：

- 請勿移除機蓋。移除雷射產品的機蓋，可能會導致暴露在危險的雷射輻射中。裝置內部並無可自行維修的零件。
- 利用或執行非本文中所指定的控制、調整及執行程序，可能會導致危險的輻射外洩。



危險

部分雷射產品含有內嵌式 **Class 3A** 或 **Class 3B** 雷射二極體。請注意下列事項：
在開啟光碟機時，會發生雷射輻射。請勿直視光束或用光學儀器直接檢視，並避免直接暴露在光束中。



≥ 18 公斤 (37 磅)



≥ 32 公斤 (70.5 磅)



≥ 55 公斤 (121.2 磅)

警告：
搬運時請注意安全。



警告：
裝置上的電源控制按鈕及電源供應器上的電源開關，無法關閉裝置所產生的電流。
該裝置可能有多條電源線。若要除去裝置流出的所有電流，請確認已切斷所有電源線的電源。



警告：

請勿堆放重量超過 **82 公斤 (180 磅)** 的物體於框架裝載式裝置上。





DANGER

Le courant électrique provenant de l'alimentation, du téléphone et des câbles de transmission peut présenter un danger.

Pour éviter tout risque de choc électrique :

- Ne manipulez aucun câble et n'effectuez aucune opération d'installation, d'entretien ou de reconfiguration de ce produit au cours d'un orage.
- Branchez tous les cordons d'alimentation sur un socle de prise de courant correctement câblé et mis à la terre.
- Branchez sur des socles de prise de courant correctement câblés tout équipement connecté à ce produit.
- Lorsque cela est possible, n'utilisez qu'une seule main pour connecter ou déconnecter les câbles d'interface.
- Ne mettez jamais un équipement sous tension en cas d'incendie ou d'inondation, ou en présence de dommages matériels.
- Avant de retirer les carters de l'unité, mettez celle-ci hors tension et déconnectez ses cordons d'alimentation, ainsi que les câbles qui la relient aux réseaux, aux systèmes de télécommunication et aux modems (sauf instruction contraire mentionnée dans les procédures d'installation et de configuration).
- Lorsque vous installez, que vous déplacez, ou que vous manipulez le présent produit ou des périphériques qui lui sont raccordés, reportez-vous aux instructions ci-dessous pour connecter et déconnecter les différents cordons.

Connexion	Déconnexion
1. Mettez les unités HORS TENSION.	1. Mettez les unités HORS TENSION.
2. Commencez par brancher tous les cordons sur les unités.	2. Débranchez les cordons d'alimentation des prises.
3. Branchez les câbles d'interface sur des connecteurs.	3. Débranchez les câbles d'interface des connecteurs.
4. Branchez les cordons d'alimentation sur des prises.	4. Débranchez tous les câbles des unités.
5. Mettez les unités SOUS TENSION.	



ATTENTION:

Remplacer la pile au lithium usagée par une pile de référence identique exclusivement, (référence 33F8354), ou suivre les instructions du fabricant qui en définit les équivalences. Si votre système est doté d'un module contenant une pile au lithium, vous devez le remplacer uniquement par un module identique, produit par le même fabricant. La pile contient du lithium et peut exploser en cas de mauvaise utilisation, de mauvaise manipulation ou de mise au rebut inappropriée.

Ne pas :

- la jeter à l'eau,
- l'exposer à des températures supérieures à 100°C,
- chercher à la réparer ou à la démonter.

Ne pas mettre la pile à la poubelle. Pour la mise au rebut, se reporter à la réglementation en vigueur.



ATTENTION:

Si des produits à laser (tels que des unités de CD-ROM, de DVD-ROM, des unités à fibres optiques, ou des émetteurs) sont installés, prenez connaissance des informations suivantes :

- Ne retirez pas le carter. En ouvrant l'unité de CD-ROM ou de DVD-ROM, vous vous exposez au rayonnement dangereux du laser. Aucune pièce de l'unité n'est réparable.
- Pour éviter tout risque d'exposition au rayon laser, respectez les consignes de réglage et d'utilisation des commandes, ainsi que les procédures décrites dans le présent manuel.



DANGER

Certains produits à laser contiennent une diode à laser intégrée de classe 3A ou 3B. Prenez connaissance des informations suivantes:

Rayonnement laser lorsque le carter est ouvert. Evitez toute exposition directe au rayon laser. Evitez de regarder fixement le faisceau ou de l'observer à l'aide d'instruments optiques.



≥18 kg (37 lbs)



≥32 kg (70.5 lbs)



≥55 kg (121.2 lbs)

ATTENTION:

Soulevez la machine avec précaution.



ATTENTION:

L'interrupteur de contrôle d'alimentation de l'unité et l'interrupteur dubloc d'alimentation ne coupent pas le courant électrique alimentant l'unité. En outre, le système peut être équipé de plusieurs cordons d'alimentation. Pour mettre l'unité hors tension, vous devez déconnecter tous les cordons de la source d'alimentation.



ATTENTION:



VORSICHT

An Netz-, Telefon- und Datenleitungen können gefährliche Spannungen anliegen.

Aus Sicherheitsgründen:

- Bei Gewitter an diesem Gerät keine Kabel anschließen oder lösen. Ferner keine Installations-, Wartungs- oder Rekonfigurationsarbeiten durchführen.
- Gerät nur an eine Schutzkontaktsteckdose mit ordnungsgemäß geerdetem Schutzkontakt anschließen.
- Alle angeschlossenen Geräte ebenfalls an Schutzkontaktsteckdosen mit ordnungsgemäß geerdetem Schutzkontakt anschließen.
- Die Signalkabel nach Möglichkeit einhändig anschließen oder lösen, um einen Stromschlag durch Berühren von Oberflächen mit unterschiedlichem elektrischem Potenzial zu vermeiden.
- Geräte niemals einschalten, wenn Hinweise auf Feuer, Wasser oder Gebäudeschäden vorliegen.
- Die Verbindung zu den angeschlossenen Netzkabeln, Telekommunikationssystemen, Netzwerken und Modems ist vor dem Öffnen des Gehäuses zu unterbrechen, sofern in den Installations- und Konfigurationsprozeduren keine anders lautenden Anweisungen enthalten sind.
- Zum Installieren, Transportieren und Öffnen der Abdeckungen des Computers oder der angeschlossenen Einheiten die Kabel gemäß der folgenden Tabelle anschließen und abziehen.

Zum Anschließen der Kabel gehen Sie wie folgt vor	Zum Abziehen der Kabel gehen Sie wie folgt vor
<ol style="list-style-type: none">1. Schalten Sie alle Einheiten AUS.2. Schließen Sie erst alle Kabel an die Einheiten an.3. Schließen Sie die Signalkabel an die Buchsen an.4. Schließen Sie die Netzkabel an die Steckdose an.5. Schalten Sie die Einheit EIN.	<ol style="list-style-type: none">1. Schalten Sie alle Einheiten AUS.2. Ziehen Sie zuerst alle Netzkabel aus den Netzsteckdosen.3. Ziehen Sie die Signalkabel aus den Buchsen.4. Ziehen Sie alle Kabel von den Einheiten ab.



CAUTION:

Eine verbrauchte Lithiumbatterie nur durch eine Batterie mit der Teilenummer 33F8354 oder eine gleichwertige, vom Hersteller empfohlene Batterie ersetzen. Enthält das System ein Modul mit einer Lithiumbatterie, dieses nur durch ein Modul desselben Typs und von demselben Hersteller ersetzen. Die Batterie enthält Lithium und kann bei unsachgemäßer Verwendung, Handhabung oder Entsorgung explodieren.

Die Batterie nicht:

- mit Wasser in Berührung bringen.
- über 100 C erhitzen.
- reparieren oder zerlegen.

Die örtlichen Bestimmungen für die Entsorgung von Sondermüll beachten.



ACHTUNG:

Bei der Installation von Lasergeräten (wie CD-ROM-Laufwerken, DVD-Laufwerken, Einheiten mit Lichtwellenleitertechnik oder Sendern) Folgendes beachten:

- Die Abdeckungen nicht entfernen. Durch Entfernen der Abdeckungen des Lasergeräts können gefährliche Laserstrahlungen freigesetzt werden. Das Gerät enthält keine zu wartenden Teile.
- Werden Steuerelemente, Einstellungen oder Durchführungen von Prozeduren anders als hier angegeben verwendet, kann gefährliche Laserstrahlung auftreten.



VORSICHT

Einige Lasergeräte enthalten eine Laserdiode der Klasse 3A oder 3B. Beachten Sie Folgendes:

Laserstrahlung bei geöffneter Verkleidung. Nicht in den Strahl blicken. Keine Lupen oder Spiegel verwenden. Strahlungsbereich meiden.



≥18 kg



≥32 kg



≥55 kg

ACHTUNG:

Arbeitsschutzrichtlinien beim Anheben der Maschine beachten.



ACHTUNG:

Mit dem Netzschalter an der Einheit und am Netzteil wird die Stromversorgung für die Einheit nicht unterbrochen. Die Einheit kann auch mit mehreren Netzkabeln ausgestattet sein. Um die Stromversorgung für die Einheit vollständig zu unterbrechen, müssen alle zum Gerät führenden Netzkabel vom Netz getrennt werden.



ACHTUNG:



סכנה

זרם חשמלי המועבר בכבלי חשמל, טלפון ותקשורת הוא מסוכן.

כדי להימנע מסכנת התחשמלות:

- אל תחברו או תנתקו כבלים, ואל תבצעו פעולת התקנה, תחזוקה או שינוי תצורה במוצר זה במהלך סופת ברקים.
- חברו את כל כבלי החשמל לשקע חשמל מחווט ומוארק כהלכה.
- חברו כל ציוד שיחובר למוצר זה לשקעי חשמל מחוטים כהלכה.
- במידת האפשר, השתמשו ביד אחת בלבד לחיבור או לניתוק של כבלי אותות.
- לעולם אל תפעילו ציוד כלשהו כאשר יש עדות לנזק מבני או לנזק כתוצאה מאש או ממים.
- נתקו את כבלי החשמל, מערכות התקשורת, התקני הרשת והמודמים המחוברים לפני פתיחת כיסויי ההתקן, אלא אם הליכי ההתקנה וקביעת התצורה מורים אחרת.
- בעת התקנה, העברה או פתיחת כיסויים במוצר זה או בהתקנים המחוברים, חברו ונתקו את הכבלים כמתואר בטבלה שלהלן.

כדי לחבר	כדי לנתק
1. כבו הכל.	1. כבו הכל.
2. ראשית, חברו את כל הכבלים להתקנים.	2. ראשית, נתקו את כבלי החשמל מהשקעים.
3. חברו את כבלי האותות למחברים.	3. נתקו את כבלי האותות מהמחברים.
4. חברו את כבלי החשמל לשקעים.	4. הסירו את כל הכבלים מההתקנים.
5. הפעילו את ההתקן.	



זהירות:

בעת החלפת סוללת הליתיום, השתמשו רק בסוללה בעלת מק"ט 33F8354 או בסוג תואם שהומלץ על ידי היצרן. אם המערכת כוללת מודול המכיל סוללת ליתיום, החליפו אותו רק במודול מאותו סוג ומתוצרת אותו יצרן. הסוללה מכילה ליתיום, ועלולה להתפוצץ אם לא משתמשים ומטפלים בה או משליכים אותה כראוי.

לעולם:

- אל תטבלו במים

- אל תחממו לטמפרטורה הגבוהה מ-100°C (212°F)

- אל תתקנו או תפרקו

השליכו את הסוללה כנדרש לפי התקנות והחוקים המקומיים.



זהירות:

בעת התקנת מוצרי לייזר (כגון כונני תקליטורים ו-DVD, התקני סיב אופטי או משדרים), שימו לב לאזהרות הבאות:

- אל תסירו את הכיסויים. הסרת הכיסויים של מוצר הלייזר עלולה לגרום לחשיפה לקרינת לייזר מסוכנת. אין חלקים ברי טיפול בתוך ההתקן.

- שינויים, שימוש בבקרות או ביצוע הליכים אחרים מאלה המתוארים כאן, עלולים לגרום לחשיפה לקרינה מסוכנת.



סכנה

מוצרי לייזר מסוימים מכילים דיודת לייזר מסוג Class 3A או Class 3B. שימו לב לאזהרה הבאה:

כאשר הוא פתוח, המוצר פולט קרינת לייזר. אל תביטו ישירות בקרן, אל תביטו ישירות בעזרת ציוד אופטי, והימנעו מחשיפה לקרן.



$18 \leq$ ק"ג (37 ליב')



$32 \leq$ ק"ג (70.5 ליב')



$55 \leq$ ק"ג (121.2 ליב')

זהירות:
השתמשו בהליכים
הנאותים בעת
הרמת הציוד.



זהירות:

לחצן הפעלה של ההתקן ומתג הפעלה של ספק החשמל אינם מפסיקים את זרם החשמל המסופק להתקן. בנוסף, ההתקן עשוי לכלול יותר מכבל חשמל אחד. כדי לסלק את כל הזרם החשמלי מההתקן, ודאו שכל כבלי החשמל מנותקים ממקור החשמל.



זהירות:

אל תניחו חפץ כלשהו השוקל יותר מ-82 ק"ג (180 ליב') על התקנים המחוברים למעמד מסגרת.





PERICOLO

La corrente elettrica proveniente dai cavi di alimentazione, del telefono e di comunicazione può essere pericolosa.

Per evitare il rischio di scosse elettriche:

- **Non collegare o scollegare qualsiasi cavo oppure effettuare l'installazione, la manutenzione o la riconfigurazione del prodotto durante un temporale.**
- **Collegare tutti i fili elettrici a una presa di alimentazione correttamente cablata e dotata di messa a terra.**
- **Collegare alle prese elettriche appropriate tutte le apparecchiature che verranno utilizzate per questo prodotto.**
- **Se possibile, utilizzare solo una mano per collegare o scollegare i cavi di segnale.**
- **Non accendere assolutamente apparecchiature in presenza di incendi, perdite d'acqua o danno strutturale.**
- **Scollegare i cavi di alimentazione, i sistemi di telecomunicazione, le reti e il modem prima di aprire i coperchi del dispositivo, salvo istruzioni contrarie relative alle procedure di installazione e configurazione.**
- **Collegare e scollegare i cavi come descritto nella seguente tabella quando vengono effettuate operazioni di installazione, spostamento o apertura dei coperchi di questo prodotto o delle unità collegate.**

Per collegarsi	Per scollegarsi
1. SPEGNERE le apparecchiature.	1. SPEGNERE le apparecchiature.
2. Innanzitutto, collegare tutti i cavi alle unità.	2. Innanzitutto, rimuovere i cavi di alimentazione dalla presa.
3. Collegare i cavi di segnale ai connettori.	3. Rimuovere i cavi di segnale dai connettori.
4. Collegare i cavi di alimentazione alla presa.	4. Rimuovere tutti i cavi dalle unità.
5. Accendere l'unità.	



ATTENZIONE:

Quando si sostituisce la batteria al litio, utilizzare solo il Numero parte 33F8354 o un tipo di batteria equivalente consigliato dal produttore. Se sul sistema è presente un modulo che contiene una batteria al litio, sostituirlo solo con un tipo di modulo dello stesso tipo della stessa casa di produzione. La batteria contiene litio e può esplodere se usata, maneggiata o smaltita in modo non corretto.

Non:

- Gettare o immergere la batteria nell'acqua
- Riscaldarla ad una temperatura superiore ai 100 gradi C (212 gradi F)
- Smontarla, ricaricarla o tentare di ripararla

Le batterie usate vanno smaltite in accordo alla normativa in vigore (DPR 915/82 e successive disposizioni e disposizioni locali).



ATTENZIONE:

Quando vengono installati prodotti laser (quali CD-ROM, unità DVD-ROM, unità a fibre ottiche o trasmettenti), tener presente quanto segue:

- Non rimuovere gli sportelli. L'apertura di un'unità laser può determinare l'esposizione a radiazioni laser pericolose. All'interno dell'unità non vi sono parti su cui effettuare l'assistenza tecnica.
- L'utilizzo di controlli, regolazioni o l'esecuzione di procedure non descritti nel presente manuale possono provocare l'esposizione a radiazioni pericolose.



PERICOLO

Alcune unità laser contengono un diodo laser di Classe 3A o Classe 3B. Tener presente quanto segue:

Aperto l'unità vengono emesse radiazioni laser. Non fissare il fascio, non guardarlo direttamente con strumenti ottici ed evitare l'esposizione al fascio.



≥18 kg



≥32 kg



≥55 kg

ATTENZIONE:

Prestare attenzione nel sollevare l'apparecchiatura.



ATTENZIONE:

Il pulsante di controllo dell'alimentazione presente sull'unità e l'interruttore dell'alimentatore non disattivano l'alimentazione corrente fornita all'unità. E' possibile che l'unità disponga di più cavi di alimentazione. Per disattivare l'alimentazione dall'unità, accertarsi che tutti i cavi di alimentazione siano scollegati dalla fonte di alimentazione.



ATTENZIONE:



위험

전원, 전화, 통신 케이블의 전류는 위험합니다.

감전의 위험을 피하려면 다음과 같이 하십시오.

- 번개가 치는 날에는 케이블을 연결 또는 분리하거나 본 제품을 설치, 보수, 재구성하지 마십시오.
- 모든 전원 코드는 올바르게 접지된 전기 콘센트에 연결하십시오.
- 본 제품에 연결될 장치는 올바르게 배선된 콘센트에 연결하십시오.
- 신호 케이블을 연결 또는 분리할 때 가능하면 한 손만을 사용하십시오.
- 불 또는 물로 인한 손상이나 구조적인 손상이 있을 경우 장치의 전원을 절대 켜지 마십시오.
- 설치 및 구성 과정에 별도의 지시 사항이 없는 경우, 장치의 덮개를 열기 전에 연결된 전원 코드, 원격 통신 시스템, 네트워크, 모뎀을 분리하십시오.
- 본 제품이나 연결된 장치를 설치, 이동하거나 덮개를 열 때 다음 표와 같은 순서로 케이블을 연결하거나 분리하십시오.

연결할 때:	분리할 때:
<ol style="list-style-type: none"> 1. 모든 장치의 전원을 끄십시오. 2. 먼저 모든 케이블을 장치에 연결하십시오. 3. 커넥터에 신호 케이블을 연결하십시오. 4. 콘센트에 전원 코드를 연결하십시오. 5. 장치의 전원을 켜십시오. 	<ol style="list-style-type: none"> 1. 모든 장치의 전원을 끄십시오. 2. 먼저 콘센트에서 전원 코드를 분리하십시오. 3. 커넥터에서 신호 케이블을 분리하십시오. 4. 장치에서 모든 케이블을 분리하십시오.



주의:

배터리를 교환할 때는 Part Number 33F8354 또는 제조업체에서 지정한 동일한 종류의 제품을 사용하십시오. 사용자의 시스템이 리튬 배터리를 포함하는 모듈일 경우, 동일한 제조업체에서 동일한 모듈 유형으로 생산된 제품으로 교체하십시오. 배터리에는 리튬이 함유되어 있어 잘못 사용, 취급 또는 폐기할 경우 폭발의 위험이 있습니다.

사고를 방지하려면 다음 사항을 준수하십시오.

- 배터리를 물 속에 던지거나 침수시키지 마십시오.
- 100℃(212°F) 이상 가열하지 마십시오.
- 수리하거나 분해하지 마십시오.

배터리를 폐기할 때는 법령 또는 회사의 안전 수칙에 따라 폐기하십시오.



주의:

CD-ROM, DVD-ROM 장치, 광섬유 장치 또는 송신 장치와 같은 레이저 제품을 설치할 때, 다음과 같은 취급 주의사항을 참고하십시오.

- 덮개를 열지 마십시오. 덮개를 열면 레이저 복사 에너지에 노출될 위험이 있습니다. 장치 내부에는 사용자가 조정하거나 수리할 수 있는 부품이 없습니다.
- 규정된 것 이외의 절차 수행, 제어 조정 등의 행위로 인해 해로운 레이저 복사에 노출될 수 있습니다.



위험

일부 장비에는 임베디드 클래스 3A 또는 클래스 3B 레이저 다이오드가 있습니다. 다음 주의사항에 유의하십시오.

드라이브가 열리면 레이저 복사 에너지가 방출됩니다. 광선이 눈에 직접 쏘이지 않도록 하십시오. 나안 또는 광학 기구를 착용한 상태에서 광선을 직접 바라보지 않도록 하십시오.



≥ 18 kg (37 lbs)



≥ 32 kg (70.5 lbs)



≥ 55 kg (121.2 lbs)

주의:

제품을 들어 올릴 때 안전 규제를 따르십시오.



주의:

장치의 전원 제어 버튼 및 전원 공급 장치의 전원 스위치를 사용하여 장치에 공급되는 전기를 차단하지 마십시오. 장치는 둘 이상의 코드를 가지고 있을 수 있습니다. 장치에서 모든 전원을 차단하려면 콘센트에서 코드가 모두 분리되어 있는지 확인하십시오.





주의:

랙 마운트 장치 위에 무게가 82 kg (180 lbs.) 이상인 물체를 올려 두지 마십시오.





PELIGRO

La corriente eléctrica procedente de cables de alimentación, teléfonos y cables de comunicación puede ser peligrosa.

Para evitar el riesgo de descarga eléctrica:

- **No conecte ni desconecte los cables ni realice ninguna tarea de instalación, mantenimiento o reconfiguración de este producto durante una tormenta eléctrica.**
- **Conecte todos los cables de alimentación a tomas de corriente debidamente cableadas y conectadas a tierra.**
- **Cualquier equipo que se conecte a este producto también debe conectarse a tomas de corriente debidamente cableadas.**
- **Siempre que sea posible, utilice una sola mano para conectar o desconectar los cables de señal.**
- **No encienda nunca un equipo cuando hay señales de fuego, agua o daños estructurales.**
- **Desconecte los cables de alimentación, los sistemas de telecomunicaciones, las redes y los módems conectados antes de abrir las cubiertas de los dispositivos, a menos que se indique lo contrario en los procedimientos de instalación y configuración.**
- **Conecte y desconecte los cables, como se describe en la tabla siguiente, cuando instale, mueva o abra las cubiertas de este producto o de los dispositivos conectados.**

Para conectar	Para desconectar
<ol style="list-style-type: none">1. APÁGUELO todo.2. En primer lugar, conecte todos los cables a los dispositivos.3. Conecte los cables de señal a los conectores.4. Enchufe los cables de alimentación a las tomas de corriente.5. Encienda el dispositivo.	<ol style="list-style-type: none">1. APÁGUELO todo.2. En primer lugar, desenchufe los cables de alimentación de las tomas de corriente.3. Desconecte los cables de señal de los conectores.4. Desconecte todos los cables de los dispositivos.



PRECAUCIÓN:

Cuando sustituya una batería de litio, utilice solamente una batería número de pieza 33F8354 u otra de tipo equivalente recomendada por el fabricante. Si su sistema dispone de un módulo que contiene una batería de litio, reemplácelo sólo con el mismo tipo de módulo, del mismo fabricante. La batería contiene litio y puede explotar si no se utiliza, manipula o desecha correctamente.

No debe:

- Arrojarla al agua o sumergirla en ella
- Exponerla a temperaturas superiores a 100°C (212°F)
- Repararla o desmontarla

Deshágase de la batería según especifiquen las leyes o normas locales.



PRECAUCIÓN:

Cuando haya productos láser (como unidades de CD-ROM, unidades de DVD, dispositivos de fibra óptica o transmisores) instalados, tenga en cuenta lo siguiente:

- No quite las cubiertas. Si quita las cubiertas del producto láser, podría quedar expuesto a radiación láser peligrosa. Dentro del dispositivo no existe ninguna pieza que requiera servicio técnico.
- Si usa controles o ajustes o realiza procedimientos que no sean los especificados aquí, podría exponerse a radiaciones peligrosas.



PELIGRO

Algunos productos láser tienen incorporado un diodo láser de clase 3A o clase 3B. Tenga en cuenta lo siguiente:

Cuando se abre, queda expuesto a radiación láser. No mire directamente al rayo láser, ni siquiera con instrumentos ópticos, y evite exponerse directamente al rayo láser.



≥18 kg



≥32 kg



≥55 kg

PRECAUCIÓN:

Adopte procedimientos seguros al levantar el equipo.



PRECAUCIÓN:

El botón de control de alimentación del dispositivo y el interruptor de alimentación de la fuente de alimentación no desconectan la corriente eléctrica suministrada al dispositivo. Además, el dispositivo podría tener más de un cable de alimentación. Para suprimir toda la corriente eléctrica del dispositivo, asegúrese de que todos los cables de alimentación estén desconectados de la toma de corriente.



PRECAUCIÓN:

Chapter 3. General information

This chapter provides general information that applies to all machine types supported by this publication.

The Access IBM program

Use the Access IBM[®] program for general information about the use, operation, and maintenance of the computer. The Access IBM program also contains information to help solve problems and get repair service or other technical assistance. The Access IBM program is preinstalled on most ThinkCentre products.

Additional information resources

If you have Internet access, the most up-to-date information for your computer is available from the World Wide Web.

You can find the following information:

- CRU removal and installation instructions
- Publications
- Troubleshooting information
- Parts information
- Downloads and drivers
- Links to other useful sources of information

To access this information, point your browser to <http://www.lenovo.com/think/support/>.

Specifications

This section lists the physical specifications for your computer.

Machine types 8290, 8291, 8292, 9214, 9215, and 9216

<p>Dimensions</p> <p>Width: 180 mm (7.09 in.) Height: 374 mm (14.72 in.) Depth: 458 mm (18.03 in.)</p> <p>Weight</p> <p>Minimum configuration as shipped: 9.1kg (20.06 lbs) Maximum configuration: 10.2 kg (22.5 lbs)</p> <p>Environment</p> <p>Air temperature:</p> <p>Operating at 0 - 3000 ft (914.4 m): 10° to 35°C (50° to 95°F) Operating at 3000 - 7000 ft (2134 m): 10° to 32°C (50° to 89.6°F) Non-operating: 10° to 43°C (50° to 110°F)</p> <p>Humidity:</p> <p>Operating: 10% to 80% Non-operating: 10% to 90% Transit: 8% to 90%</p> <p>Maximum altitude: 7000 ft (2134 m)</p> <p>Electrical input</p> <p>Input voltage:</p> <p>Low range:</p> <p>Minimum: 100 V ac Maximum: 127 V ac Input frequency: 50-60 Hz Voltage switch setting: 115 V ac</p> <p>High range:</p> <p>Minimum: 200 V ac Maximum: 240V ac Input frequency: 50-60 Hz Voltage switch setting: 230 V ac</p> <p>Input kilovolt-amperes (kVA) (approximate):</p> <p>Minimum configuration as shipped: 0.158 kVA Maximum configuration: 0.213 kVA</p>	<p>Heat output (approximate) in British thermal units (Btu) per hour:</p> <p>Minimum configuration: 256 Btu/hr (75 watts) Maximum configuration: 854 Btu/hr (250 watts)</p> <p>Airflow</p> <p>Approximately 66 cubic feet (2.45 cubic meters) per minute</p> <p>Acoustical noise-emission values</p> <p>Average sound-pressure levels:</p> <p>At operator position (XX meters):</p> <p>Idle: 32 dBA Operating: 42 dBA</p> <p>At bystander position - 1 meter (3.3 ft):</p> <p>Idle: 28 dBA Operating: 36 dBA</p> <p>Declared (upper limit) sound-power levels:</p> <p>Idle: 4.2 bels Operating: 4.7 bels</p> <p>Note: These levels were measured in controlled acoustical environments according to the procedures specified by the American National Standards Institute (ANSI) S12.10 and ISO 7779 and are reported in accordance with ISO 9296. Actual sound-pressure levels in a given location might exceed the average values stated because of room reflections and other nearby noise sources. The declared sound-power levels indicate an upper limit, below which a large number of computers will operate.</p>
---	---

Machine types 8293, 8294, 8295, 9217, 9218, and 9219

This section lists the physical specifications for your computer.

<p>Dimensions</p> <p>Width: 325 mm (12.8 in.) Height: 107 mm (4.21 in.) Depth: 410 mm (16.14 in.)</p> <p>Weight</p> <p>Minimum configuration as shipped: 8.2 kg (18 lbs) Maximum configuration: 10.4 kg (23 lbs)</p> <p>Environment</p> <p>Air temperature:</p> <p>Operating at 0 - 3000 ft (914.4 m): 10° to 60°C (50° to 140°F) Operating at 3000 ft - 7000 ft (2134 m): 10° to 32°C (50° to 89.6°F) Non-operating: 10° to 43°C (50° to 110°F)</p> <p>Humidity:</p> <p>Operating: 10% to 80% Non-operating: 10% to 90% Transit: 8% to 90%</p> <p>Maximum altitude: 7000 ft (2133.6 m)</p> <p>Electrical input</p> <p>Input voltage:</p> <p>Low range:</p> <p>Minimum: 100 V ac Maximum: 127 V ac Input frequency: 50/60 Hz Voltage switch setting: 115 V ac</p> <p>High range:</p> <p>Minimum: 200 V ac Maximum: 240V ac Input frequency: 50/60 Hz Voltage switch setting: 230 V ac</p> <p>Input kilovolt-amperes (kVA) (approximate):</p> <p>Minimum configuration as shipped: 0.09 kVA Maximum configuration: 0.23 kVA</p>	<p>Heat output (approximate) in British thermal units (Btu) per hour:</p> <p>Minimum configuration: 256 Btu/hr (75 watts) Maximum configuration: 615 Btu/hr (180 watts)</p> <p>Airflow</p> <p>Approximately 22 cubic feet (0.62 cubic meters) per minute</p> <p>Acoustical noise-emission values</p> <p>Attention: Acoustical values were not available at the time this <i>User Guide</i> was produced. To obtain a copy of the latest <i>User Guide</i> with the acoustical values, go to http://www.lenovo.com/think/support/.</p>
--	---

Chapter 4. General Checkout

Attention

The drives in the computer you are servicing might have been rearranged or the drive startup sequence changed. Be extremely careful during write operations such as copying, saving, or formatting. Data or programs can be overwritten if you select an incorrect drive.

General error messages appear if a problem or conflict is found by an application program, the operating system, or both. For an explanation of these messages, refer to the information supplied with that software package.

Before replacing any FRUs, ensure that the latest level of BIOS is installed on the system. A down-level BIOS might cause false errors and unnecessary replacement of the system board. For more information on how to determine and obtain the latest level BIOS, see “BIOS levels” on page 184.

Use the following procedure to help determine the cause of the problem:

1. Power-off the computer and all external devices.
2. Check all cables and power cords.
3. Set all display controls to the middle position.
4. Power-on all external devices.
5. Power-on the computer.
 - Look for displayed error codes
 - Listen for beep codes
 - Look for readable instructions or a main menu on the display.If you **did not** receive the correct response, proceed to step 6.
If you **do** receive the correct response, proceed to step 7.
6. Look at the following conditions and follow the instructions:
 - If you hear beep codes during POST, go to “Beep symptoms” on page 78.
 - If the computer displays a POST error, go to “POST error codes” on page 79.
 - If the computer hangs and no error is displayed, continue at step 7.
7. Run the Diagnostic programs. See Chapter 5, “Diagnostics using PC-Doctor for DOS,” on page 45.
 - If you receive an error, replace the part that the diagnostic program calls out or go to “Diagnostic error codes” on page 57.
 - If the test stops and you cannot continue, replace the last device tested.

Problem determination tips

Due to the variety of hardware and software combinations that can be encountered, use the following information to assist you in problem determination. If possible, have this information available when requesting assistance from Service Support and Engineering functions.

- Machine type and model
- Processor or hard disk upgrades
- Failure symptom
 - Do diagnostics indicate a failure?

- What, when, where, single, or multiple systems?
- Is the failure repeatable?
- Has this configuration ever worked?
- If it has been working, what changes were made prior to it failing?
- Is this the original reported failure?
- Diagnostics version
 - Type and version level
- Hardware configuration
 - Print (print screen) configuration currently in use
 - BIOS level
- Operating system software
 - Type and version level

Note: To eliminate confusion, identical systems are considered identical only if they:

1. Are the exact machine type and models
2. Have the same BIOS level
3. Have the same adapters/attachments in the same locations
4. Have the same address jumpers/terminators/cabling
5. Have the same software versions and levels
6. Have the same Diagnostic Diskettes (version)
7. Have the same configuration options set in the system
8. Have the same setup for the operating system control files

Comparing the configuration and software set-up between “working and non-working” systems will often lead to problem resolution.

Chapter 5. Diagnostics using PC-Doctor for DOS

Diagnostics are provided by the PC-Doctor program for DOS. These include a full range of diagnostic utilities to determine the operating condition of the computer's hardware components.

You can run diagnostics from the Rescue and Recovery™ workspace or you can create a bootable diagnostic diskette from the Rescue and Recovery workspace. Alternatively, you can download either a diskette image or a startable CD-ROM image (.iso file) from the Customer Support Web site and run diagnostics using them.

The latest version of the diagnostics program is available from <http://www.lenovo.com/think/support> on the World Wide Web. Type your machine type into the **Use Quick path** field and click **Go** to find the downloadable files that are specific to the computer. See "Diagnostics program download" on page 46.

Diagnostic error messages appear when a test program finds a problem with a hardware option. For the test programs to properly determine if a test *Passed*, *Failed* or *Aborted*, the test programs check the error-return code at test completion. See "Diagnostic error codes" on page 57.

If an installed device is not recognized by the diagnostics program, that device might be defective.

Starting PC-Doctor from the Rescue and Recovery workspace

This procedure describes how to start PC-Doctor from the Rescue and Recovery workspace.

1. If your computer is already on when you start this procedure, shut down the operating system and turn off the computer.
2. To launch the Rescue and Recovery workspace, repeatedly press the F11 key or the Enter key as you turn on the computer.

Note: If a user password or an administrator password has been set, the Rescue and Recovery workspace is not displayed until you type the password.

3. When the Rescue and Recovery workspace is displayed, look for "Troubleshoot" on the left side of the screen. Click **Diagnose hardware**.

Notes:

- a. Additional diagnostic information is available from the Rescue and Recovery workspace, such as a diagnostic overview. Refer to the Rescue and Recovery help system for details.
- b. After selecting Diagnose hardware, make sure the computer is restarted using the restart button on the Rescue and Recovery workspace. Do not use the power switch to start the reboot.
- c. You can also create a set of diagnostic disks from the Rescue and Recovery workspace by clicking **Create diagnostic disks** from the Rescue and Recovery menu.

Starting PC-Doctor from a diagnostic diskette or CD-ROM

Note: If your computer has no internal diskette drive, an external USB diskette drive is required when using the diagnostic diskette.

1. If your computer is already on when you start this procedure, shut down the operating system and turn off the computer.
2. Insert the diskette or CD-ROM in the appropriate drive.
3. Turn on the computer.

Note: If the PC-Doctor program fails to start, make sure that the startup device sequence is configured to allow startup from the diskette or CD-ROM drive. See “Selecting a startup device” on page 53.

Diagnostics program download

If you have access to the internet, you can download a diskette image or a startable CD-ROM image (.iso file) of the diagnostics.

To download the latest diagnostics program from the WWW, do the following:

- Go to <http://www.lenovo.com/think/support>.
- Type the machine type in the “Use Quick Path” field and click **Go**.
- Click **Downloads and drivers** and scroll down to locate the Enhanced diagnostics.

Navigating through the diagnostics programs

Use the cursor movement keys to navigate within the menus.

- The **Enter** key is used to select a menu item.
- The **Esc** key is used to back up to the previous menu.
- For online help select **F1**.

Running diagnostics tests

There are four ways to run the diagnostic tests.

- Using the cursor movement keys, highlight **Run Normal Test** or **Run Quick Test** from the Diagnostics menu and then press **Enter**.

This automatically runs a pre-defined group of tests from each test category. **Run Normal Test** runs a more extensive set of tests than does **Run Quick Test** and takes longer to complete.

- Press **F5** to automatically run all selected tests in all categories. See “Test selection” on page 47.
- From within a test category, press **Ctrl-Enter** to automatically run only the selected tests in that category. See “Test selection” on page 47.
- Using the cursor movement keys, highlight a single test within a test category, and then press **Enter**. This runs only that test.

Press **Esc** at any time to stop the testing process.

Test results (N/A, PASSED, FAILED, ABORTED) are displayed in the field beside the test description and in the test log. See “Viewing the test log” on page 50.

Test selection

To select one or more tests, use the following procedure.

1. Open the corresponding test category.
2. Using the cursor movement keys, highlight the desired test.
3. Press the space bar.
A selected test is marked by >>. Pressing the space bar again de-selects a test and removes the >>.
4. Repeat steps 2 and 3 above to select all desired tests.

Test results

Diagnostics test results produce the following error code format:

Function Code	Failure Type	DeviceID	Date	ChkDigits	Text
---------------	--------------	----------	------	-----------	------

- **Function Code:**
Represents the feature or function within the PC.
- **Failure Type:**
Represents the type of error encountered.
- **DeviceID:**
Contains the component's unit-ID which corresponds to either a fixed disk drive, removable media drive, serial or parallel port, processor, specific RIMM, or a device on the PCI bus.
- **Date:**
Contains the date when the diagnostic test was run. The date is retrieved from CMOS and displayed using the YYYYMMDD format.
- **ChkDigits:**
Contains a 2-digit check-digit value to ensure the following:
 - Diagnostics were run on the specified date.
 - Diagnostics were run on the specified computer.
 - The diagnostic error code is recorded correctly.
- **Text:**
Description of the error.

Note: See "Diagnostic error codes" on page 57 for error code listings.

Fixed disk advanced test (FDAT)

PC-Doctor Fixed-Disk¹ Advanced Test module (FDAT) is a full-featured highly configurable fixed-disk test suite. The configurable capabilities of FDAT allow users to enable or disable specific tests, enable or disable testing features, control the test log detail, alter testing parameters, and so on. FDAT tests for and reports most commonly found errors on a fixed-disk drive and is able to test up to 128 SCSI and 4 IDE drives (up to 132 total drives).

Drive information is gathered through FDAT's enumeration of available devices and user specific configuration parameters located in the FDAT.INI. FDAT uses information supplied by these features to indicate specifically what devices are

1. The terms fixed disk and hard disk are used interchangeably.

available for test, what tests are available for the device, device properties, and so on. To change testing parameters, you modify the FDAT.INI file in PC Doctor for DOS.

FDAT consists of the following subtests and features.

Fixed-Disk Tests:

- *Seek Tests:* - checks the physical operation of the drive head.
 - Linear Seek
 - Random Seek
 - Min-Max Seek
 - Butterfly Seek
- *Verify Tests:* - checks the integrity of the data present on the media.
 - Linear Verify
 - Random Verify
- *Surface Scan Tests:* - checks the drive media for defects.
 - Surface Scan (Linear)
 - Surface Scan (Aggressive) - this is disabled for normal customer use.
 - Surface Scan (Random)
- Self-monitoring, Analysis and Reporting Technology (SMART) - checks the SMART functionality for drives that support SMART.
 - Start SMART Self-Test

Other Test Features:

- *Write-Splice Repair* - detects and corrects Error Correction Code errors during Verify tests.
- *Auto Spin Down* - a gradual spin down of the drive platters to avoid damaging the media.
- *Manufacturer Log* - an in-depth manufacturer supported log of errors on the drive.

Multitasking:

To allow simultaneous testing of multiple hard drives whenever possible, the FDAT module is written as a set of multitasking functions. Each drive under test can run the same test or run a different test at the same time. Each subtest is written to handle a single test pass and all test variables are kept track of in a structure unique for each drive.

However, when testing IDE drives, FDAT will not perform simultaneous testing of IDE drives that are attached to the same IDE cable. For example, if FDAT is testing four IDE drives on a PC, it will perform simultaneous testing on drives 1 and 3 first (master drives), then perform tests on 2 and 4 (slave drives). FDAT will also perform simultaneous testing on a master and slave that are on separate IDE cables, but will not perform simultaneous tests on a master and slave on the same IDE cable. This generally increases the amount of time needed to test multiple IDE drives.

Another limitation of FDAT'S multitasking capability is the use of Ultra DMA (UDMA). Only one drive at a time can access the UDMA channel and the UDMA

channel buffer must be kept high in order to maintain a speed advantage over other data transfer modes. In order to use the UDMA channel during testing, users must disable the multitasking feature.

Destructive versus non-destructive testing:

Most of the tests found in FDAT are non-destructive. This means that PC-Doctor program will preserve any data that is present on the tested media prior to beginning any destructive operations (such as write operations). However, users can run certain tests in destructive mode (i.e. surface scan tests). Destructive tests will speed up testing because FDAT does not preserve the data on the media prior to the test beginning. Unlike non-destructive tests, any data present on the media prior to the test beginning is lost.

FDAT allows for enabling or disabling destructive tests, as well as specifying a range of destructive and non-destructive sectors on the tested drive. This is done through the configuration of the FDAT.INI. If destructive and non-destructive ranges somehow overlap, then the overlapped area is considered non-destructive. For example, if users specify both destructive and non-destructive ranges as the same, then the entire drive is tested as non-destructive.

Quick and Full erase - hard drive

The diagnostics program offers two hard drive format utilities:

- Quick Erase Hard Drive
- Full Erase Hard Drive

The Quick Erase Hard Drive provides a DOS utility that performs the following:

- Destroys the Master Boot Record (MBR) on the hard drive.
- Destroys all copies of the FAT Table on all partitions (both the master and backup).
- Destroys the partition table.
- Provides messages that warn the user that this is a non-recoverable process.

The Full Erase Hard Drive provides a DOS utility that performs the following:

- Performs all the steps in Quick Erase.
- Provides a DOS utility that writes random data to all sectors of the hard drive.
- Provides an estimate of time to completion along with a visual representation of completion status.
- Provides messages that warn the user about non-recoverable process.

<p>Important: Make sure that all data is backed up before using the Quick or Full Erase functions.</p>

To select the Quick Erase or Full Erase Hard Drive utility, use the following procedure:

1. Select the UTILITY option on the toolbar and press **Enter**.
2. Select either the QUICK ERASE or FULL ERASE HARD DISK option and follow the instructions.

Viewing the test log

Errors reported by the diagnostic test will be displayed by the program as a failed test.

To view details of a failure or to view a list of test results, use the following procedure from any test category screen:

1. Press **F3** to activate the log file.
2. Press **F3** again to save the file to diskette or press **F2** to print the file.

Chapter 6. Using the CMOS Setup Utility

The CMOS Setup Utility program is stored in the electrically erasable programmable read-only memory (EEPROM) of your computer. The CMOS Setup Utility program is used to view and change the configuration settings of your computer, regardless of which operating system you are using. However, the operating-system settings might override any similar settings in the CMOS Setup Utility program.

Starting the CMOS Setup Utility program

To start the CMOS Setup Utility program, do the following:

1. If your computer is already on when you start this procedure, shut down the operating system and turn off the computer.
2. Press and hold the F1 key then turn on the computer. When you hear multiple beeps, release the F1 key.

Notes:

- a. If you are using a USB keyboard and the CMOS Setup Utility program does not display using this method, repeatedly press and release the F1 key rather than leaving it pressed when turning on the computer.
- b. If a user password or an administrator password has been set, the CMOS Setup Utility program menu is not displayed until you type your password. See “Using passwords” for more information.

The CMOS Setup Utility might start automatically when POST detects that hardware has been removed or new hardware has been installed in your computer.

Viewing and changing settings

The CMOS Setup Utility program menu lists items that identify system configuration topics.

When working with the CMOS Setup Utility program menu, you must use the keyboard. The keys used to perform various tasks are displayed at the bottom of each screen.

Using passwords

You can use passwords to provide security for your computer and data. There are two kinds of passwords: a user password and an administrator password. You do not have to set a password of either type to use your computer. However, if you decide to set either one, read the following sections.

User Password

The user password feature deters unauthorized persons from gaining access to your computer.

Setting, changing, and deleting a user password

To set, change, or delete a user password, do the following:

Note: A password can be any combination of up to eight characters (A- Z, a-z, and 0-9).

1. Start the CMOS Setup Utility program (see “Starting the CMOS Setup Utility program” on page 51).
2. From the CMOS Setup Utility program menu, select **Set User Password** and press Enter.
3. The password dialog box will be displayed. Type the new password, and press Enter.
4. When prompted to confirm the password, type the password again. If you type the password in correctly, the password will be installed.

To delete a previously set user password, do the following:

Note: When prompted for a password, you can type either your user or administrator password.

1. From the CMOS Setup Utility program menu, select **Set User Password** and press Enter. A message will display that indicates the password has been disabled.
2. Press any key to continue.

Administrator Password

Setting an Administrator Password deters unauthorized persons from changing configuration settings. If you are responsible for maintaining the settings of several computers, you might want to set an Administrator Password.

After you set an Administrator Password, a password prompt is displayed each time you try to access the CMOS Setup Utility program. If you type the wrong password, you will see an error message. If you type the wrong password three times, you must turn the computer off and start again.

If both the user and administrator passwords are set, you can type either password. However, to change any configuration settings, you must use your administrator password.

Setting, changing, and deleting an administrator password

To set, change, or delete an administrator password, do the following:

Note: A password can be any combination of up to eight characters (A- Z, a-z, and 0-9).

1. Start the CMOS Setup Utility program (see “Starting the CMOS Setup Utility program” on page 51).
2. From the CMOS Setup Utility program menu, select **Set Administrator Password** and press Enter.
3. The password dialog box will be displayed. Type the new password, and press Enter.
4. When prompted to confirm the password, type the password again. If you type the password correctly, the password will be installed.

To delete a previously set administrator password, do the following:

Note: When prompted for a password, you must type your administrator password.

1. From the CMOS Setup Utility program menu, select **Set Administrator Password** and press Enter. A message will display that indicates the password has been disabled.
2. Press any key to continue.

Selecting a startup device

If your computer does not start up (boot) from a device such as the CD-ROM, diskette, or hard disk as expected, use one of the following procedures to select a startup device.

Selecting a temporary startup device

Use this procedure to startup from any boot device.

Note: Not all CDs, hard disks, and diskettes are startable (bootable).

1. Turn off your computer.
2. Press and hold the F12 key then turn on the computer. When the Startup Device Menu (Boot Menu) appears, release the F12 key.

Note: If you are using a USB keyboard and the Startup Device Menu does not display using this method, repeatedly press and release the F12 key rather than leaving it pressed when turning on the computer.

3. Select the desired startup device from the Startup Device Menu and press Enter to begin.

Note: Selecting a startup device from the Startup Device (Boot) menu does not permanently change the startup sequence.

Changing the startup device sequence

To view or change the primary or automatic power-on startup sequence, do the following:

1. Start the CMOS Setup Utility program (see “Starting the CMOS Setup Utility program” on page 51).
2. Select **Advanced BIOS features**.
3. Select the sequence of devices for the First Boot Device, the Second Boot Device, and the Third Boot Device.
4. Press Esc to return to the CMOS Setup Utility program menu.
5. Select **Save & Exit Setup**.

If you have changed these settings and want to return to the default settings, press (N) when the Save and Exit dialog box is displayed.

Exiting from the CMOS Setup Utility program

When you finish viewing or changing settings, press Esc to return to the CMOS Setup Utility program menu (you might have to press Esc several times). If you want to save the new settings, select **Save & Exit Setup** before you exit. Otherwise, your changes will not be saved.

Chapter 7. Symptom-to-FRU Index

The Symptom-to-FRU index lists error symptoms and possible causes. The most likely cause is listed first. Always begin with Chapter 4, "General Checkout," on page 43. This index can also be used to help you decide which FRUs to have available when servicing a computer. If you are unable to correct the problem using this index, go to "Undetermined problems" on page 82.

Notes:

- If you have both an error message and an incorrect audio response, diagnose the error message first.
- If you cannot run the diagnostic tests or you get a diagnostic error code when running a test, but did receive a POST error message, diagnose the POST error message first.
- If you did not receive any error message, look for a description of your error symptoms in the first part of this index.
- For types 8290, 8291, 8292, 9214, 9215, and 9216 only: make sure that the hard disk drive is jumpered as a master and the optical drive is jumpered as a slave.

Hard disk drive boot error

A hard disk drive boot error (error codes 1962 and I999030X) can have the following causes.

Error	FRU/Action
The start-up drive is not in the boot sequence in configuration.	Check the configuration and ensure the start-up drive is in the boot sequence.
No operating system installed on the boot drive.	Install an operating system on the boot drive.
The boot sector on the start-up drive is corrupted.	The drive must be formatted, do the following: <ol style="list-style-type: none">1. Attempt to back-up the data on the failing hard disk drive.2. Using the operating systems programs, format the hard disk drive.
The drive is defective.	Replace the hard disk drive.

Power Supply Problems

If you suspect a power problem, use the following procedures.

Check/Verify	FRU/Action
Check the following for proper installation. <ul style="list-style-type: none">• Power Cord• On/Off Switch connector• On/Off Switch Power Supply connector• System Board Power Supply connectors• Microprocessor(s) connection	Reseat connectors
Check the power cord for continuity.	Power Cord

Check/Verify	FRU/Action
Check the power-on switch for continuity.	Power-on Switch

Diagnostic error codes

Refer to the following diagnostic error codes when using the diagnostic tests. See “Running diagnostics tests” on page 46 for the specific type for information about the Diagnostic programs.

In the following index, X can represent any number.

Diagnostic Error Code	FRU/Action
000-000-XXX BIOS Test Passed	No action
000-002-XXX BIOS Timeout	<ol style="list-style-type: none"> Flash the system. See “Flash update procedures” on page 184 System board
000-024-XXX BIOS Addressing test failure	<ol style="list-style-type: none"> Flash the system. See “Flash update procedures” on page 184 System board
000-025-XXX BIOS Checksum Value error	<ol style="list-style-type: none"> Flash the system. See “Flash update procedures” on page 184 System board
000-026-XXX FLASH data error	<ol style="list-style-type: none"> Flash the system. See “Flash update procedures” on page 184 System board
000-027-XXX BIOS Configuration/Setup error	<ol style="list-style-type: none"> Run Setup Flash the system. See “Flash update procedures” on page 184 System board
000-034-XXX BIOS Buffer Allocation failure	<ol style="list-style-type: none"> Reboot the system Flash the system. See “Flash update procedures” on page 184 Run memory test System board
000-035-XXX BIOS Reset Condition detected	<ol style="list-style-type: none"> Flash the system. See “Flash update procedures” on page 184 System board
000-036-XXX BIOS Register error	<ol style="list-style-type: none"> Flash the system. See “Flash update procedures” on page 184 System board
000-038-XXX BIOS Extension failure	<ol style="list-style-type: none"> Flash the system. See “Flash update procedures” on page 184 Adapter card System board
000-039-XXX BIOS DMI data error	<ol style="list-style-type: none"> Flash the system. See “Flash update procedures” on page 184 System board
000-195-XXX BIOS Test aborted by user	Information only Re-start the test, if necessary

Diagnostic Error Code	FRU/Action
000-196-XXX BIOS test halt, error threshold exceeded	<ol style="list-style-type: none"> 1. Press F3 to review the log file 2. Re-start the test to reset the log file
000-197-XXX BIOS test warning	<ol style="list-style-type: none"> 1. Make sure the component that is called out is connected and/or enabled. See Chapter 6, "Using the CMOS Setup Utility," on page 51 2. Re-run test 3. Replace the component that is called out in warning statement 4. Replace the component under test
000-198-XXX BIOS test aborted	<ol style="list-style-type: none"> 1. Make sure the component that is called out is connected and/or enabled. See Chapter 6, "Using the CMOS Setup Utility," on page 51 2. Flash the system and retest. See "Flash update procedures" on page 184 3. Go to "Undetermined problems" on page 82
000-199-XXX BIOS test failed, cause unknown	<ol style="list-style-type: none"> 1. Go to "Undetermined problems" on page 82 2. Flash the system and re-test 3. Replace component under function test
000-250-XXX BIOS APM failure	<ol style="list-style-type: none"> 1. Flash the system. See "Flash update procedures" on page 184 2. System board
000-270-XXX BIOS ACPI failure	<ol style="list-style-type: none"> 1. Flash the system. See "Flash update procedures" on page 184 2. System board
001-000-XXX System Test Passed	No action
001-00X-XXX System Error	System board
001-01X-XXX System Error	System board
001-024-XXX System Addressing test failure	System board
001-025-XXX System Checksum Value error	<ol style="list-style-type: none"> 1. Flash the system. See "Flash update procedures" on page 184 2. System board
001-026-XXX System FLASH data error	<ol style="list-style-type: none"> 1. Flash the system. See "Flash update procedures" on page 184 2. System board
001-027-XXX System Configuration/Setup error	<ol style="list-style-type: none"> 1. Run Setup 2. Flash the system. See "Flash update procedures" on page 184 3. System board

Diagnostic Error Code	FRU/Action
001-032-XXX System Device Controller failure	System board
001-034-XXX System Device Buffer Allocation failure	<ol style="list-style-type: none"> 1. Reboot the system 2. Flash the system. See “Flash update procedures” on page 184 3. Run memory test 4. System board
001-035-XXX System Device Reset condition detected	System board
001-036-XXX System Register error	System board
001-038-XXX System Extension failure	<ol style="list-style-type: none"> 1. Adapter card 2. System board
001-039-XXX System DMI data structure error	<ol style="list-style-type: none"> 1. Flash the system. See “Flash update procedures” on page 184 2. System board
001-040-XXX System IRQ failure	<ol style="list-style-type: none"> 1. Power-off/on system and re-test 2. System board
001-041-XXX System DMA failure	<ol style="list-style-type: none"> 1. Power-off/on system and re-test 2. System board
001-195-XXX System Test aborted by user	Information only Re-start the test, if necessary
001-196-XXX System test halt, error threshold exceeded	<ol style="list-style-type: none"> 1. Press F3 to review the log file 2. Re-start the test to reset the log file
001-197-XXX System test warning	<ol style="list-style-type: none"> 1. Make sure the component that is called out is connected and/or enabled. See Chapter 6, “Using the CMOS Setup Utility,” on page 51 2. Re-run test 3. Replace the component that is called out in warning statement 4. Replace the component under test
001-198-XXX System test aborted	<ol style="list-style-type: none"> 1. If a component is called out, make sure it is connected and/or enabled. See Chapter 6, “Using the CMOS Setup Utility,” on page 51 2. Flash the system and retest. See “Flash update procedures” on page 184 3. Go to “Undetermined problems” on page 82
001-199-XXX System test failed, cause unknown	<ol style="list-style-type: none"> 1. Go to “Undetermined problems” on page 82 2. Flash the system and re-test 3. Replace component under function test
001-250-XXX System ECC error	System board

Diagnostic Error Code	FRU/Action
001-254-XXX 001-255-XXX 001-256-XXX 001-257-XXX System DMA error	System board
001-260-XXX 001-264-XXX System IRQ error	System board
001-268-XXX System IRQ1 failure	1. Device on IRQ1 2. System board
001-269-XXX System IRQ2 failure	1. Device on IRQ2 2. System board
001-270-XXX System IRQ3 failure	1. Device on IRQ3 2. System board
001-271-XXX System IRQ4 failure	1. Device on IRQ4 2. System board
001-272-XXX System IRQ5 failure	1. Device on IRQ5 2. System board
001-273-XXX System IRQ6 (diskette drive) failure	1. Diskette Cable 2. Diskette drive 3. System board
001-274-XXX System IRQ7 failure	1. Device on IRQ7 2. System board
001-275-XXX System IRQ8 failure	1. Device on IRQ8 2. System board
001-276-XXX System IRQ9 failure	1. Device on IRQ9 2. System board
001-277-XXX System IRQ10 failure	1. Device on IRQ10 2. System board
001-278-XXX System IRQ11 failure	1. Device on IRQ11 2. System board
001-279-XXX System IRQ12 failure	1. Device on IRQ12 2. System board
001-280-XXX System IRQ13 failure	1. Device on IRQ13 2. System board
001-281-XXX System IRQ14 (hard disk drive) failure	1. Hard disk drive cable 2. Hard disk drive 3. System board
001-282-XXX System IRQ15 failure	1. Device on IRQ15 2. System board

Diagnostic Error Code	FRU/Action
001-286-XXX 001-287-XXX 001-288-XXX System Timer failure	System board
001-292-XXX System CMOS RAM error	1. Run Setup and re-test 2. System board
001-293-XXX System CMOS Battery	1. CMOS Battery 2. System board
001-298-XXX System RTC date/time update failure	1. Flash the system. See “Flash update procedures” on page 184 2. System board
001-299-XXX System RTC periodic interrupt failure	System board
001-300-XXX System RTC Alarm failure	System board
001-301-XXX System RTC Century byte error	1. Flash the system. See “Flash update procedures” on page 184 2. System board
005-000-XXX Video Test Passed	No action
005-00X-XXX Video error	1. Video card, if installed 2. System board
005-010-XXX 005-011-XXX 005-012-XXX 005-013-XXX Video Signal failure	1. Video card, if installed 2. System board
005-016-XXX Video Simple Pattern test failure	1. Video Ram 2. Video card, if installed 3. System board
005-024-XXX Video Addressing test failure	1. Video card, if installed 2. System board
005-025-XXX Video Checksum Value error	1. Video card, if installed 2. System board
005-027-XXX Video Configuration/Setup error	1. Run Setup 2. Video drivers update 3. Video card, if installed 4. System board
005-031-XXX Video Device Cable failure	1. Video cable 2. Monitor 3. Video card, if installed 4. System board
005-032-XXX Video Device Controller failure	1. Video card, if installed 2. System board

Diagnostic Error Code	FRU/Action
005-036-XXX Video Register error	<ol style="list-style-type: none"> 1. Video card, if installed 2. System board
005-038-XXX System BIOS extension failure	<ol style="list-style-type: none"> 1. Video card, if installed 2. System board
005-040-XXX Video IRQ failure	<ol style="list-style-type: none"> 1. Video card, if installed 2. System board
005-195-XXX Video Test aborted by user	Information only Re-start the test, if necessary
005-196-XXX Video test halt, error threshold exceeded	<ol style="list-style-type: none"> 1. Press F3 to review the log file 2. Re-start the test to reset the log file
005-197-XXX Video test warning	<ol style="list-style-type: none"> 1. Make sure the component that is called out is connected and/or enabled. See Chapter 6, "Using the CMOS Setup Utility," on page 51 2. Re-run test 3. Replace the component called out in warning statement 4. Replace the component under test
005-198-XXX Video test aborted	<ol style="list-style-type: none"> 1. If a component is called out, make sure it is connected and/or enabled. See Chapter 6, "Using the CMOS Setup Utility," on page 51 2. Flash the system and re-test. See "Flash update procedures" on page 184 3. Go to "Undetermined problems" on page 82
005-199-XXX Video test failed, cause unknown	<ol style="list-style-type: none"> 1. Go to "Undetermined problems" on page 82 2. Flash the system and re-test. See "Flash update procedures" on page 184 3. Replace component under function test
005-2XX-XXX 005-3XX-XXX Video subsystem error	<ol style="list-style-type: none"> 1. Video card, if installed 2. System board
006-000-XXX Diskette interface Test Passed	No action
006-0XX-XXX Diskette interface error	<ol style="list-style-type: none"> 1. Diskette drive Cable 2. Diskette drive 3. System board
006-195-XXX Diskette interface Test aborted by user	Information only Re-start the test, if necessary
006-196-XXX Diskette interface test halt, error threshold exceeded	<ol style="list-style-type: none"> 1. Press F3 to review the log file 2. Re-start the test to reset the log file

Diagnostic Error Code	FRU/Action
006-197-XXX Diskette interface test warning	<ol style="list-style-type: none"> 1. If a component is called out, make sure it is connected and/or enabled 2. Re-run test 3. Replace the component that is called out in warning statement 4. Replace the component under test
006-198-XXX Diskette interface test aborted	<ol style="list-style-type: none"> 1. If a component is called out, make sure it is connected and/or enabled 2. Flash the system and re-test. See "Flash update procedures" on page 184 3. Go to "Undetermined problems" on page 82
006-199-XXX Diskette interface test failed, cause unknown	<ol style="list-style-type: none"> 1. Go to "Undetermined problems" on page 82 2. Flash the system and re-test 3. Replace component under function test
006-25X-XXX Diskette interface Error	<ol style="list-style-type: none"> 1. Diskette drive cable 2. Diskette drive 3. System board
011-000-XXX Serial port Interface Test Passed	No action
011-001-XXX Serial port Presence	<ol style="list-style-type: none"> 1. Remove external serial device, if present 2. Run setup, enable port 3. System board
011-002-XXX 011-003-XXX Serial port Timeout/Parity error	System board
011-013-XXX 011-014-XXX Serial port Control Signal/Loopback test failure	System board
011-015-XXX Serial port External Loopback failure	<ol style="list-style-type: none"> 1. Wrap plug 2. System board
011-027-XXX Serial port Configuration/Setup error	<ol style="list-style-type: none"> 1. Run Setup, enable port 2. Flash the system. See "Flash update procedures" on page 184 3. System board
011-03X-XXX 011-04X-XXX Serial port failure	System board
011-195-XXX Serial port Test aborted by user	Information only Re-start the test, if necessary
011-196-XXX Serial port test halt, error threshold exceeded	<ol style="list-style-type: none"> 1. Press F3 to review the log file 2. Re-start the test to reset the log file

Diagnostic Error Code	FRU/Action
011-197-XXX Serial port test warning	<ol style="list-style-type: none"> 1. Make sure the component that is called out is connected and/or enabled. See Chapter 6, "Using the CMOS Setup Utility," on page 51 2. Re-run test 3. Replace the component that is called out in warning statement 4. Replace the component under test
011-198-XXX Serial port test aborted	<ol style="list-style-type: none"> 1. If a component is called out, make sure it is connected and/or enabled. See Chapter 6, "Using the CMOS Setup Utility," on page 51 2. Flash the system and re-test. See "Flash update procedures" on page 184 3. Go to "Undetermined problems" on page 82
011-199-XXX Serial port test failed, cause unknown	<ol style="list-style-type: none"> 1. Go to "Undetermined problems" on page 82 2. Flash the system and re-test. See "Flash update procedures" on page 184 3. Replace component under function test
011-2XX-XXX Serial port signal failure	<ol style="list-style-type: none"> 1. External serial device 2. System board
014-000-XXX Parallel port Interface Test Passed	No action
014-001-XXX Parallel port Presence	<ol style="list-style-type: none"> 1. Remove external parallel device, if present 2. Run setup, enable port 3. System board
014-002-XXX 014-003-XXX Parallel port Timeout/Parity error	System board
014-013-XXX 014-014-XXX Parallel port Control Signal/Loopback test failure	System board
014-015-XXX Parallel port External Loopback failure	<ol style="list-style-type: none"> 1. Wrap plug 2. System board
014-027-XXX Parallel port Configuration/Setup error	<ol style="list-style-type: none"> 1. Run Setup, enable port 2. Flash the system. See "Flash update procedures" on page 184 3. System board
014-03X-XXX 014-04X-XXX Parallel port failure	System board
014-195-XXX Parallel port Test aborted by user	Information only Re-start the test, if necessary

Diagnostic Error Code	FRU/Action
014-196-XXX Parallel port test halt, error threshold exceeded	<ol style="list-style-type: none"> 1. Press F3 to review the log file 2. Re-start the test to reset the log file
014-197-XXX Parallel port test warning	<ol style="list-style-type: none"> 1. Make sure the component that is called out is connected and/or enabled. See Chapter 6, "Using the CMOS Setup Utility," on page 51 2. Re-run test 3. Replace the component that is called out in warning statement 4. Replace the component under test
014-198-XXX Parallel port test aborted	<ol style="list-style-type: none"> 1. If a component is called out, make sure it is connected and/or enabled 2. Flash the system and re-test. See "Flash update procedures" on page 184 3. Go to "Undetermined problems" on page 82
014-199-XXX Parallel port test failed, cause unknown	<ol style="list-style-type: none"> 1. Go to "Undetermined problems" on page 82 2. Flash the system and re-test. See "Flash update procedures" on page 184 3. Replace component under function test
014-2XX-XXX 014-3XX-XXX Parallel port failure	<ol style="list-style-type: none"> 1. External parallel device 2. System board
015-000-XXX USB port Interface Test Passed	No action
015-001-XXX USB port Presence	<ol style="list-style-type: none"> 1. Remove USB device(s) and re-test 2. System board
015-002-XXX USB port Timeout	<ol style="list-style-type: none"> 1. Remove USB device(s) and re-test 2. System board
015-015-XXX USB port External Loopback failure	<ol style="list-style-type: none"> 1. Remove USB device(s) and re-test 2. System board
015-027-XXX USB port Configuration/Setup error	<ol style="list-style-type: none"> 1. Flash the system. See "Flash update procedures" on page 184 2. System board
015-032-XXX USB port Device Controller failure	System board
015-034-XXX USB port buffer allocation failure	<ol style="list-style-type: none"> 1. Reboot the system 2. Flash the system and re-test. See "Flash update procedures" on page 184 3. Run memory test 4. System board
015-035-XXX USB port Reset condition detected	<ol style="list-style-type: none"> 1. Remove USB device(s) and re-test 2. System board

Diagnostic Error Code	FRU/Action
015-036-XXX USB port Register error	System board
015-040-XXX USB port IRQ failure	<ol style="list-style-type: none"> 1. Run setup and check for conflicts 2. Flash the system. See "Flash update procedures" on page 184 3. System board
015-195-XXX USB port Test aborted by user	Information only Re-start the test, if necessary
015-196-XXX USB port test halt, error threshold exceeded	<ol style="list-style-type: none"> 1. Press F3 to review the log file 2. Re-start the test to reset the log file
015-197-XXX USB port test warning	<ol style="list-style-type: none"> 1. Make sure the component that is called out is connected and/or enabled. See Chapter 6, "Using the CMOS Setup Utility," on page 51 2. Re-run test 3. Replace the component that is called out in warning statement 4. Replace the component under test
015-198-XXX USB port test aborted	<ol style="list-style-type: none"> 1. If a component is called out, make sure it is connected and/or enabled. See Chapter 6, "Using the CMOS Setup Utility," on page 51 2. Flash the system and re-test. See "Flash update procedures" on page 184 3. Go to "Undetermined problems" on page 82
015-199-XXX USB port test failed, cause unknown	<ol style="list-style-type: none"> 1. Go to "Undetermined problems" on page 82 2. Flash the system and re-test. See "Flash update procedures" on page 184 3. Replace component under function test
018-000-XXX PCI Card Test Passed	No action
018-0XX-XXX PCI Card Failure	<ol style="list-style-type: none"> 1. Riser card, if installed 2. System board
018-195-XXX PCI Card Test aborted by user	<ol style="list-style-type: none"> 1. PCI card 2. Information only Re-start the test, if necessary
018-196-XXX PCI Card test halt, error threshold exceeded	<ol style="list-style-type: none"> 1. Press F3 to review the log file 2. Re-start the test to reset the log file

Diagnostic Error Code	FRU/Action
018-197-XXX PCI Card test warning	<ol style="list-style-type: none"> 1. Make sure the component that is called out is connected and/or enabled. See Chapter 6, "Using the CMOS Setup Utility," on page 51 2. Re-run test 3. Replace the component that is called out in warning statement 4. Replace the component under test
018-198-XXX PCI Card test aborted	<ol style="list-style-type: none"> 1. If a component is called out, make sure it is connected and/or enabled. See Chapter 6, "Using the CMOS Setup Utility," on page 51 2. Flash the system and re-test. See "Flash update procedures" on page 184 3. Go to "Undetermined problems" on page 82
018-199-XXX PCI Card test failed, cause unknown	<ol style="list-style-type: none"> 1. Go to "Undetermined problems" on page 82 2. Flash the system and re-test. See "Flash update procedures" on page 184 3. Replace component under function test
018-250-XXX PCI Card Services error	<ol style="list-style-type: none"> 1. PCI card 2. Riser card, if installed 3. System board
020-000-XXX PCI Interface Test Passed	No action
020-0XX-XXX PCI Interface error	<ol style="list-style-type: none"> 1. PCI card 2. Riser card, if installed 3. System board
020-195-XXX PCI Test aborted by user	Information only Re-start the test, if necessary
020-196-XXX PCI test halt, error threshold exceeded	<ol style="list-style-type: none"> 1. Press F3 to review the log file 2. Re-start the test to reset the log file
020-197-XXX PCI test warning	<ol style="list-style-type: none"> 1. Make sure the component that is called out is connected and/or enabled. See Chapter 6, "Using the CMOS Setup Utility," on page 51 2. Re-run test 3. Replace the component that is called out in warning statement 4. Replace the component under test

Diagnostic Error Code	FRU/Action
020-198-XXX PCI test aborted	<ol style="list-style-type: none"> 1. If a component is called out, make sure it is connected and/or enabled. See Chapter 6, "Using the CMOS Setup Utility," on page 51 2. Flash the system and re-test. See "Flash update procedures" on page 184 3. Go to "Undetermined problems" on page 82
020-199-XXX PCI test failed, cause unknown	<ol style="list-style-type: none"> 1. Go to "Undetermined problems" on page 82 2. Flash the system and re-test. See "Flash update procedures" on page 184 3. Replace component under function test
020-262-XXX PCI system error	<ol style="list-style-type: none"> 1. PCI card 2. Riser card, if installed 3. System board
025-000-XXX IDE interface Test Passed	No action
025-00X-XXX 025-01X-XXX IDE interface failure	<ol style="list-style-type: none"> 1. IDE signal cable 2. Check power supply voltages 3. Reseat IDE signal cable 4. IDE device 5. System board
025-027-XXX IDE interface Configuration/Setup error	<ol style="list-style-type: none"> 1. IDE signal cable 2. Flash the system. See "Flash update procedures" on page 184 3. Reseat IDE signal cable 4. IDE device 5. System board
025-02X-XXX 025-03X-XXX 025-04X-XXX IDE Interface failure	<ol style="list-style-type: none"> 1. IDE signal cable 2. Check power supply 3. Reseat IDE signal cable 4. IDE device 5. System board
025-195-XXX IDE interface Test aborted by user	Information only Re-start the test, if necessary
025-196-XXX IDE interface test halt, error threshold exceeded	<ol style="list-style-type: none"> 1. Press F3 to review the log file 2. Re-start the test to reset the log file
025-197-XXX IDE interface test warning	<ol style="list-style-type: none"> 1. Make sure the component that is called out is connected and/or enabled. See Chapter 6, "Using the CMOS Setup Utility," on page 51 2. Re-run test 3. Replace the component that is called out in warning statement 4. Replace the component under test

Diagnostic Error Code	FRU/Action
025-198-XXX IDE interface test aborted	<ol style="list-style-type: none"> 1. If a component is called out, make sure it is connected and/or enabled. See Chapter 6, "Using the CMOS Setup Utility," on page 51 2. Flash the system and re-test. See "Flash update procedures" on page 184 3. Go to "Undetermined problems" on page 82
025-199-XXX IDE interface test failed, cause unknown	<ol style="list-style-type: none"> 1. Go to "Undetermined problems" on page 82 2. Flash the system and re-test. See "Flash update procedures" on page 184 3. Replace component under function test
030-000-XXX SCSI interface Test Passed	No action
030-00X-XXX 030-01X-XXX SCSI interface failure	<ol style="list-style-type: none"> 1. SCSI signal cable 2. Check power supply 3. SCSI device 4. SCSI adapter card, if installed 5. System board
030-027-XXX SCSI interface Configuration/Setup error	<ol style="list-style-type: none"> 1. SCSI signal cable 2. Flash the system. See "Flash update procedures" on page 184 3. SCSI device 4. SCSI adapter card, if installed 5. System board
030-03X-XXX 030-04X-XXX SCSI interface error	<ol style="list-style-type: none"> 1. SCSI signal cable 2. Check power supply 3. SCSI device 4. SCSI adapter card, if installed 5. System board
030-195-XXX SCSI interface Test aborted by user	Information only Re-start the test, if necessary
030-196-XXX SCSI interface test halt, error threshold exceeded	<ol style="list-style-type: none"> 1. Press F3 to review the log file 2. Re-start the test to reset the log file
030-197-XXX SCSI interface test warning	<ol style="list-style-type: none"> 1. Make sure the component that is called out is connected and/or enabled. See Chapter 6, "Using the CMOS Setup Utility," on page 51 2. Re-run test 3. Replace the component that is called out in warning statement 4. Replace the component under test

Diagnostic Error Code	FRU/Action
030-198-XXX SCSI interface test aborted	<ol style="list-style-type: none"> 1. If a component is called out, make sure it is connected and/or enabled. See Chapter 6, "Using the CMOS Setup Utility," on page 51 2. Flash the system and re-test. See "Flash update procedures" on page 184 3. Go to "Undetermined problems" on page 82
030-199-XXX SCSI interface test failed, cause unknown	<ol style="list-style-type: none"> 1. Go to "Undetermined problems" on page 82 2. Flash the system and re-test. See "Flash update procedures" on page 184 3. Replace component under function test
035-000-XXX RAID interface Test Passed	No action
035-0XX-XXX RAID interface Failure	<ol style="list-style-type: none"> 1. RAID signal cable 2. RAID device 3. RAID adapter card, if installed 4. System board
035-195-XXX RAID interface Test aborted by user	Information only Re-start the test, if necessary
035-196-XXX RAID interface test halt, error threshold exceeded	<ol style="list-style-type: none"> 1. Press F3 to review the log file 2. Re-start the test to reset the log file
035-197-XXX RAID interface test warning	<ol style="list-style-type: none"> 1. Make sure the component that is called out is connected and/or enabled. See Chapter 6, "Using the CMOS Setup Utility," on page 51 2. Re-run test 3. Replace the component that is called out in warning statement 4. Replace the component under test
035-198-XXX RAID interface test aborted	<ol style="list-style-type: none"> 1. If a component is called out, make sure it is connected and/or enabled. See Chapter 6, "Using the CMOS Setup Utility," on page 51 2. Flash the system and re-test. See "Flash update procedures" on page 184 3. Go to "Undetermined problems" on page 82
035-199-XXX RAID interface test failed, cause unknown	<ol style="list-style-type: none"> 1. See "Undetermined problems" on page 82 2. Flash the system and re-test. See "Flash update procedures" on page 184 3. Replace component under function test
071-000-XXX Audio port Interface Test Passed	No action

Diagnostic Error Code	FRU/Action
071-00X-XXX 071-01X-XXX 071-02X-XXX Audio port error	<ol style="list-style-type: none"> 1. Run Setup 2. Flash the system. See "Flash update procedures" on page 184 3. System board
071-03X-XXX Audio port failure	<ol style="list-style-type: none"> 1. Speakers 2. Microphone 3. Audio card, if installed 4. System board
071-04X-XXX Audio port failure	<ol style="list-style-type: none"> 1. Run Setup 2. Audio card, if installed 3. System board
071-195-XXX Audio port Test aborted by user	Information only Re-start the test, if necessary
071-196-XXX Audio port test halt, error threshold exceeded	<ol style="list-style-type: none"> 1. Press F3 to review the log file 2. Re-start the test to reset the log file
071-197-XXX Audio port test warning	<ol style="list-style-type: none"> 1. Make sure the component that is called out is connected and/or enabled. See Chapter 6, "Using the CMOS Setup Utility," on page 51 2. Re-run test 3. Replace the component that is called out in warning statement 4. Replace the component under test
071-198-XXX Audio port test aborted	<ol style="list-style-type: none"> 1. If a component is called out, make sure it is connected and/or enabled. See Chapter 6, "Using the CMOS Setup Utility," on page 51 2. Flash the system and re-test. See "Flash update procedures" on page 184 3. Go to "Undetermined problems" on page 82
071-199-XXX Audio port test failed, cause unknown	<ol style="list-style-type: none"> 1. See "Undetermined problems" on page 82 2. Flash the system and re-test. See "Flash update procedures" on page 184 3. Replace component under function test
071-25X-XXX Audio port failure	<ol style="list-style-type: none"> 1. Speakers 2. Audio card, if installed 3. System board
080-000-XXX Game Port interface Test Passed	No action
080-XXX-XXX Game Port interface Error	<ol style="list-style-type: none"> 1. Remove the game port device and re-test the system
080-195-XXX Game Port interface Test aborted by user	Information only Re-start the test, if necessary

Diagnostic Error Code	FRU/Action
080-196-XXX Game Port interface test halt, error threshold exceeded	<ol style="list-style-type: none"> 1. Press F3 to review the log file 2. Re-start the test to reset the log file
080-197-XXX Game Port interface test warning	<ol style="list-style-type: none"> 1. Make sure the component that is called out is connected and/or enabled. See Chapter 6, "Using the CMOS Setup Utility," on page 51 2. Re-run test 3. Replace the component that is called out in warning statement 4. Replace the component under test
080-198-XXX Game Port interface test aborted	<ol style="list-style-type: none"> 1. If a component is called out, make sure it is connected and/or enabled. See Chapter 6, "Using the CMOS Setup Utility," on page 51 2. Flash the system and re-test. See "Flash update procedures" on page 184 3. Go to "Undetermined problems" on page 82
080-199-XXX Game Port interface test failed, cause unknown	<ol style="list-style-type: none"> 1. See "Undetermined problems" on page 82 2. Flash the system and re-test. See "Flash update procedures" on page 184 3. Replace component under function test
086-000-XXX Mouse Port interface Test Passed	No action
086-001-XXX Mouse Port interface Presence	<ol style="list-style-type: none"> 1. Mouse 2. System board
086-032-XXX Mouse Port interface Device controller failure	<ol style="list-style-type: none"> 1. Mouse 2. System board
086-035-XXX Mouse Port interface Reset	<ol style="list-style-type: none"> 1. Mouse 2. System board
086-040-XXX Mouse Port interface IRQ failure	<ol style="list-style-type: none"> 1. Run Setup 2. Mouse 3. System board
086-195-XXX Mouse Port interface Test aborted by user	Information only Re-start the test, if necessary
086-196-XXX Mouse Port interface test halt, error threshold exceeded	<ol style="list-style-type: none"> 1. Press F3 to review the log file 2. Re-start the test to reset the log file

Diagnostic Error Code	FRU/Action
086-197-XXX Mouse Port interface test warning	<ol style="list-style-type: none"> 1. Make sure the component that is called out is connected and/or enabled. See Chapter 6, "Using the CMOS Setup Utility," on page 51 2. Re-run test 3. Replace the component that is called out in warning statement 4. Replace the component under test
086-198-XXX Mouse Port interface test aborted	<ol style="list-style-type: none"> 1. If a component is called out, make sure it is connected and/or enabled. See Chapter 6, "Using the CMOS Setup Utility," on page 51 2. Flash the system and re-test. See "Flash update procedures" on page 184 3. Go to "Undetermined problems" on page 82
086-199-XXX Mouse Port interface test failed, cause unknown	<ol style="list-style-type: none"> 1. See "Undetermined problems" on page 82 2. Flash the system and re-test. See "Flash update procedures" on page 184 3. Replace component under function test
089-000-XXX Microprocessor Test Passed	No action
089-XXX-XXX Microprocessor failure	<ol style="list-style-type: none"> 1. Microprocessor(s) 2. System board
089-195-XXX Microprocessor Test aborted by user	Information only Re-start the test, if necessary
089-196-XXX Microprocessor test halt, error threshold exceeded	<ol style="list-style-type: none"> 1. Press F3 to review the log file 2. Re-start the test to reset the log file
089-197-XXX Microprocessor test warning	<ol style="list-style-type: none"> 1. Make sure the component that is called out is connected and/or enabled. See Chapter 6, "Using the CMOS Setup Utility," on page 51 2. Re-run test 3. Replace the component that is called out in warning statement 4. Replace the component under test
089-198-XXX Microprocessor test aborted	<ol style="list-style-type: none"> 1. Flash the system. See "Flash update procedures" on page 184 2. Go to "Undetermined problems" on page 82
089-199-XXX Microprocessor test failed, cause unknown	<ol style="list-style-type: none"> 1. See "Undetermined problems" on page 82 2. Flash the system and re-test. See "Flash update procedures" on page 184 3. Replace component under function test
170-000-XXX Voltage Sensor(s) Test Passed	No action

Diagnostic Error Code	FRU/Action
170-0XX-XXX Voltage Sensor(s) failure	<ol style="list-style-type: none"> 1. Flash system 2. System board
170-195-XXX Voltage Sensor(s) Test aborted by user	Information only Re-start the test, if necessary
170-196-XXX Voltage Sensor(s) test halt, error threshold exceeded	<ol style="list-style-type: none"> 1. Press F3 to review the log file 2. Re-start the test to reset the log file
170-197-XXX Voltage Sensor(s) test warning	<ol style="list-style-type: none"> 1. Make sure the component that is called out is connected and/or enabled. See Chapter 6, "Using the CMOS Setup Utility," on page 51 2. Re-run test 3. Replace the component that is called out in warning statement 4. Replace the component under test
170-198-XXX Voltage Sensor(s) test aborted	<ol style="list-style-type: none"> 1. If a component is called out, make sure it is connected and/or enabled. See Chapter 6, "Using the CMOS Setup Utility," on page 51 2. Flash the system and re-test. See "Flash update procedures" on page 184 3. Go to "Undetermined problems" on page 82
170-199-XXX Voltage Sensor(s) test failed, cause unknown	<ol style="list-style-type: none"> 1. See "Undetermined problems" on page 82 2. Flash the system and re-test. See "Flash update procedures" on page 184 3. Replace component under function test
170-250-XXX 170-251-XXX Voltage Sensor(s) Voltage limit error	<ol style="list-style-type: none"> 1. Power supply 2. System board
170-254-XXX Voltage Sensor(s) Voltage Regulator Module error	<ol style="list-style-type: none"> 1. Voltage Regulator Module (VRM) 2. Microprocessor 3. System board
175-000-XXX Thermal Sensor(s) Test Passed	No action
175-0XX-XXX Thermal Sensor(s) failure	<ol style="list-style-type: none"> 1. Flash system 2. System board
175-195-XXX Thermal Sensor(s) Test aborted by user	Information only Re-start the test, if necessary
175-196-XXX Thermal Sensor(s) test halt, error threshold exceeded	<ol style="list-style-type: none"> 1. Press F3 to review the log file 2. Re-start the test to reset the log file

Diagnostic Error Code	FRU/Action
175-197-XXX Thermal Sensor(s) test warning	<ol style="list-style-type: none"> 1. Make sure the component that is called out is connected and/or enabled. See Chapter 6, "Using the CMOS Setup Utility," on page 51 2. Re-run test 3. Replace the component that is called out in warning statement 4. Replace the component under test
175-198-XXX Thermal Sensor(s) test aborted	<ol style="list-style-type: none"> 1. If a component is called out, make sure it is connected and/or enabled 2. Flash the system and re-test. See "Flash update procedures" on page 184 3. Go to "Undetermined problems" on page 82
175-199-XXX Thermal Sensor(s) test failed, cause unknown	<ol style="list-style-type: none"> 1. See "Undetermined problems" on page 82 2. Flash the system and re-test. See "Flash update procedures" on page 184 3. Replace component under function test
175-250-XXX 175-251-XXX Thermal Sensor(s) limit error	<ol style="list-style-type: none"> 1. Check fans 2. Check Power supply voltages 3. Microprocessor 4. System board
185-000-XXX Asset Security Test Passed	No action
185-XXX-XXX Asset Security failure	<ol style="list-style-type: none"> 1. Flash system 2. System board
185-278-XXX Asset Security Chassis Intrusion	<ol style="list-style-type: none"> 1. Assure Asset Security Enabled 2. C2 Cover Switch 3. System board
201-000-XXX System Memory Test Passed	No action
201-XXX-XXX System Memory error	<ol style="list-style-type: none"> 1. Replace the memory module called out by the test 2. System board
202-000-XXX System Cache Test Passed	No action
202-XXX-XXX System Cache error	<ol style="list-style-type: none"> 1. Cache, if removable 2. System board 3. Microprocessor
206-000-XXX Diskette Drive Test Passed	No action
206-XXX-XXX Diskette Drive error	<ol style="list-style-type: none"> 1. Diskette Drive Cable 2. Check power supply voltages 3. Diskette drive 4. System board

Diagnostic Error Code	FRU/Action
215-000-XXX CD-ROM Drive Test Passed	No action
215-XXX-XXX CD-ROM Drive error	<ol style="list-style-type: none"> 1. CD-ROM Drive Cable 2. Check power supply voltages 3. CD-ROM drive 4. System board
217-000-XXX Hard Disk Drive Test Passed	No action
217-25X-XXX 217-26X-XXX Hard Disk Drive (IDE) error	<ol style="list-style-type: none"> 1. Hard Disk Drive Cable 2. Check power supply voltages 3. Reseat the hard disk drive cable 4. Hard Disk drive (IDE) 5. System board
217-28X-XXX 217-29X-XXX Hard Disk Drive (SCSI) error	<ol style="list-style-type: none"> 1. Hard Disk Drive Cable 2. Check power supply voltages 3. Reseat the hard disk drive cable 4. Hard Disk drive (SCSI) 5. SCSI adapter card 6. System board
220-000-XXX Hi-Capacity Cartridge Drive Test Passed	No action
220-XXX-XXX Hi-Capacity Cartridge Drive error	<ol style="list-style-type: none"> 1. Remove the Hi-Capacity Cartridge Drive and re-test the system
301-XXX-XXX Keyboard error	<ol style="list-style-type: none"> 1. Keyboard 2. Check and test mouse 3. System board
301-000-XXX Keyboard Test Passed	No action
302-000-XXX Mouse Test Passed	No action
302-XXX-XXX Mouse error	<ol style="list-style-type: none"> 1. Mouse 2. Check and test Keyboard 3. System board
303-000-XXX Joystick Test Passed	No action
303-XXX-XXX Joystick error	Remove the Joystick and re-test the system
305-000-XXX Monitor DDC Test Passed	No action
305-250-XXX Monitor DDC self test failure	<ol style="list-style-type: none"> 1. Run Setup to enable DDC 2. Cable 3. Monitor 4. Video card 5. System board

Diagnostic Error Code	FRU/Action
415-000-XXX Modem Test Passed	No action
415-XXX-XXX Modem error	Remove the Modem and re-test the system

Beep symptoms

Beep symptoms are tones or a series of tones separated by pauses (intervals without sound) during POST.

The following table describes beep symptoms.

Beep Symptom	FRU/Action
2 short beeps CMOS setting error	Perform the following actions in order. <ol style="list-style-type: none">1. Start the CMOS Setup Utility program and press F10 to Save and exit. See Chapter 6, "Using the CMOS Setup Utility," on page 51.2. Start the CMOS Setup Utility program and press F7 to load defaults and then press F10 to Save and exit.3. Perform a Boot block recovery. See "Recovering from a POST/BIOS update failure" on page 184.
1 long and 2 short beeps Monitor or video adapter card error	Perform the following actions in order. <ol style="list-style-type: none">1. Make sure the monitor is properly connected to the computer.2. Replace the video adapter card (if present).3. Replace the system board.
1 long and 3 short beeps Keyboard error	Perform the following actions in order. <ol style="list-style-type: none">1. Make sure the keyboard is properly connected to the keyboard connector.2. Replace the keyboard.3. Replace the system board.
1 long and 9 short beeps BIOS ROM error	Perform the following actions in order. <ol style="list-style-type: none">1. Start the CMOS Setup Utility program and press F7 to load defaults and then press F10 to Save and exit. See Chapter 6, "Using the CMOS Setup Utility," on page 51.2. Perform a Boot block recovery. See "Recovering from a POST/BIOS update failure" on page 184.3. Replace the system board.
Continuous long beeps DRAM memory error	Perform the following actions in order. <ol style="list-style-type: none">1. Make sure the memory module(s) are properly seated in the connector(s).2. Replace the memory module(s).3. Replace the system board.

POST error codes

Each time you power-on the system, it performs a series of tests that check the operation of the system and some options. This series of tests is called the *Power-On Self-Test*, or *POST*. POST does the following operations.

- Checks some basic system-board operations
- Checks the memory operation
- Starts the video operation
- Verifies that the boot drive is working

If the POST detects a problem, an error message appears on the screen. A single problem can cause several error messages to appear. When you correct the cause of the first error message, the other error messages probably will not appear on the screen the next time you turn on the system.

POST Error Message	Description/Action
CMOS battery failed	The CMOS battery is no longer functional. Replace the battery.
CMOS checksum error - defaults loaded	Checksum of CMOS is incorrect. The computer loads the default configuration settings. This error might indicate that CMOS has become corrupt due to a weak CMOS battery.
CPU at nnnn	nnnn is the running speed of the microprocessor.
Press Esc to skip memory test	Pressing Esc skips the full memory test
HARD DISK INSTALL FAILURE	Cannot find or initialize the hard disk drive controller or the drive. Make sure the hard disk drive is correctly installed. If no hard disk drives are installed, make sure the hard disk drive selection in Setup is set to NONE.
Keyboard error or no keyboard present	Cannot initialize the keyboard. Make sure the keyboard is properly connected to the computer and that no keys are held pressed during POST. To purposely configure the computer without a keyboard, set the error halt condition in Setup to HALT ON ALL, BUT KEYBOARD. The BIOS then ignores the missing keyboard during POST.
Memory Test:	This message displays during a full memory test, counting down the memory areas being tested.
Memory test fail	If POST detects an error during memory testing, additional information appears. This information gives specifics about the type and location of the memory error.

POST Error Message	Description/Action
Press TAB to show POST screen	Pressing the TAB key permits the user to toggle between the default POST display screen and a custom POST display screen.
Error: Non-System disk or disk error Replace and press any key when ready	<p>The BIOS was unable to find a suitable boot device.</p> <p>Make sure the boot drive is properly connected to the computer.</p> <p>Make sure you have bootable media.</p>

Miscellaneous error messages

Message/Symptom	FRU/Action
Changing display colors	Display/Monitor
Computer will <i>not</i> power-off. See "Power Supply Problems" on page 55.	<ol style="list-style-type: none"> Power Switch System Board Riser card
Computer will <i>not</i> RPL from server	<ol style="list-style-type: none"> Ensure that network is in startup sequence as first device or first device after diskette Ensure that network adapter is enabled for RPL Network adapter (Advise network administrator of new MAC address)
Computer will <i>not</i> perform a Wake On LAN [®] (if applicable)	<ol style="list-style-type: none"> Check power supply and signal cable connections to network adapter Ensure that the operating system settings are set to enable Wake on LAN[®] Ensure Wake On LAN feature is enabled in Setup/Configuration (see "Starting the CMOS Setup Utility program" on page 51) Ensure network administrator is using correct MAC address Ensure no interrupt or I/O address conflicts Network adapter (advise network administrator of new MAC address)
Dead computer. See "Power Supply Problems" on page 55.	<ol style="list-style-type: none"> Power Supply System Board
Diskette drive in-use light remains on or does not light when drive is active.	<ol style="list-style-type: none"> Diskette Drive System Board Diskette Drive Cable
Flashing cursor with an otherwise blank display.	<ol style="list-style-type: none"> System Board Primary Hard Disk Drive Hard Disk Drive Cable
Incorrect memory size during POST	<ol style="list-style-type: none"> Run the Memory tests Memory Module System Board
"Insert a Diskette" icon appears with a known-good diagnostics diskette in the first 3.5-inch diskette drive.	<ol style="list-style-type: none"> System Board Diskette Drive Cable Network Adapter
Intensity or color varies from left to right of characters and color bars	<ol style="list-style-type: none"> Display Video adapter (if present) System Board
No power or fan not running	<ol style="list-style-type: none"> See "Power Supply Problems" on page 55.

Message/Symptom	FRU/Action
Non-system disk or disk error-type message with a known-good diagnostic diskette.	<ol style="list-style-type: none"> 1. Diskette Drive 2. System Board 3. Diskette Drive Cable
Other display symptoms not listed above (including blank or illegible display)	<ol style="list-style-type: none"> 1. Display 2. System Board
Power-on indicator or hard disk drive in-use light not on, but computer works correctly	<ol style="list-style-type: none"> 1. Power switch/LED assembly 2. System Board
Printer problems	<ol style="list-style-type: none"> 1. Printer 2. System Board
Program loads from the hard disk with a known-good diagnostics diskette in the first 3.5-inch diskette drive	<ol style="list-style-type: none"> 1. Run Setup and check Startup sequence. 2. Diskette Drive 3. Diskette Drive Cable 4. System Board 5. Power Supply
RPL computer cannot access programs from its own hard disk.	<ol style="list-style-type: none"> 1. If network administrator is using LCCM Hybrid RPL, check startup sequence: <ol style="list-style-type: none"> a. First device - network b. Second device - hard disk 2. Hard disk drive
RPL computer does not RPL from server	<ol style="list-style-type: none"> 1. Check startup sequence 2. Check the network adapter LED status
Serial or parallel port device failure (system board port)	<ol style="list-style-type: none"> 1. External Device Self-Test OK? 2. External Device 3. Cable 4. System Board
Serial or parallel port device failure (adapter port)	<ol style="list-style-type: none"> 1. External Device Self-Test OK? 2. External Device 3. Cable 4. Alternate Adapter 5. System Board
Some or all keys on the keyboard do not work	<ol style="list-style-type: none"> 1. Keyboard 2. Keyboard Cable 3. System Board

Undetermined problems

If this computer has a parallel ATA hard disk drive, make sure that the hard disk drive is jumpered as a master and the optical drive is jumpered as a slave.

1. Power-off the computer.
2. Remove or disconnect the following components (if installed) one at a time.
 - a. External devices (modem, printer, or mouse)
 - b. Any adapters

- c. Memory modules
 - d. Extended video memory
 - e. External Cache
 - f. External Cache RAM
 - g. Hard disk drive
 - h. Diskette drive
3. Power-on the computer to re-test the system.
 4. Repeat steps 1 through 3 until you find the failing device or adapter.

If all devices and adapters have been removed, and the problem continues, replace the system board.

Chapter 8. Replacing FRUs (Types 8290, 8291, 8292, 9214, 9215, and 9216)

Important


Before you replace any FRU, read Chapter 2, "Safety information," on page 3. These precautions and guidelines will help you work safely.

FRU replacements are to be done by trained service technicians only.

This chapter does not contain a remove and replace procedure for all FRUs. Only the major FRUs are documented.

Rear connectors

The following illustration shows the locations of the connectors on the rear of the computer.

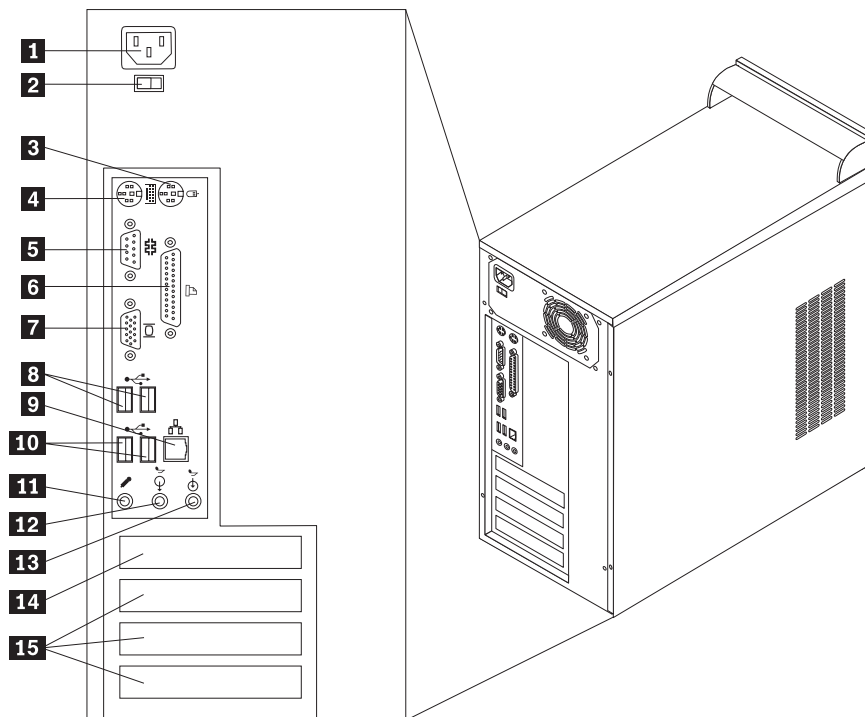

- | | |
|-----------------------------------|---------------------------------------|
| 1 Power connector | 9 Ethernet connector |
| 2 Voltage selection switch | 10 USB connectors |
| 3 Mouse connector | 11 Microphone connector |
| 4 Keyboard connector | 12 Audio line out connector |
| 5 Serial connector | 13 Audio line in connector |
| 6 Parallel connector | 14 AGP connector (some models) |
| 7 VGA monitor connector | 15 PCI adapter slots |
| 8 USB connectors | |

Removing the covers


Important

Read Chapter 2, "Safety information," on page 3 and "Handling electrostatic discharge-sensitive devices" on page 6 before opening the cover.

Some FRU replacements require the removal of only the left-side cover. Others require removal of both the left-side and the right-side covers.

1. Shut down the operating system, remove any media (DVDs, CDs, or tapes) from the drives, and turn off all attached devices.
2. Unplug all power cords from electrical outlets.
3. Disconnect all cables attached to the computer. This includes power cords, input/output (I/O) cables, and any other cables that are connected to the computer.


4. Remove the two thumb screws at the rear of the left-side cover and slide the cover to the rear to remove.

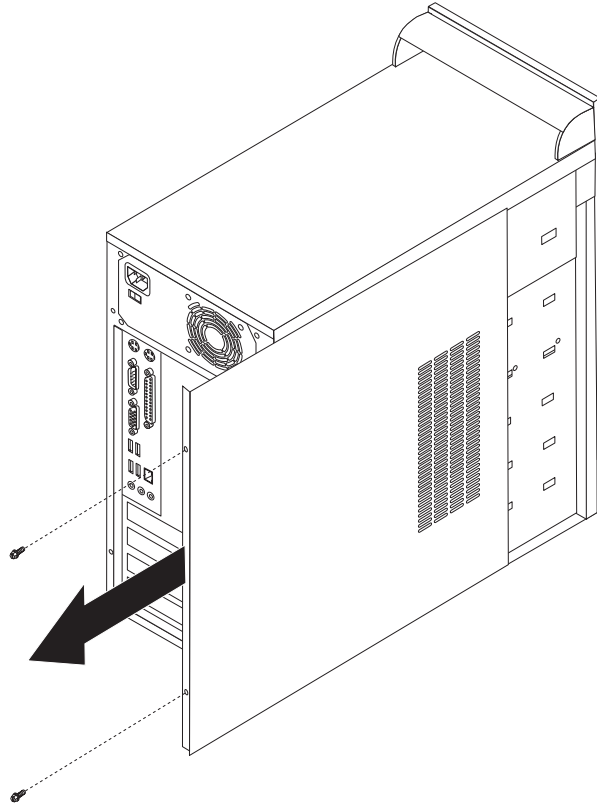

5. If necessary, remove the right-side cover in the same manner.

Locations


The following illustration will help you locate the major FRUs in the computer.

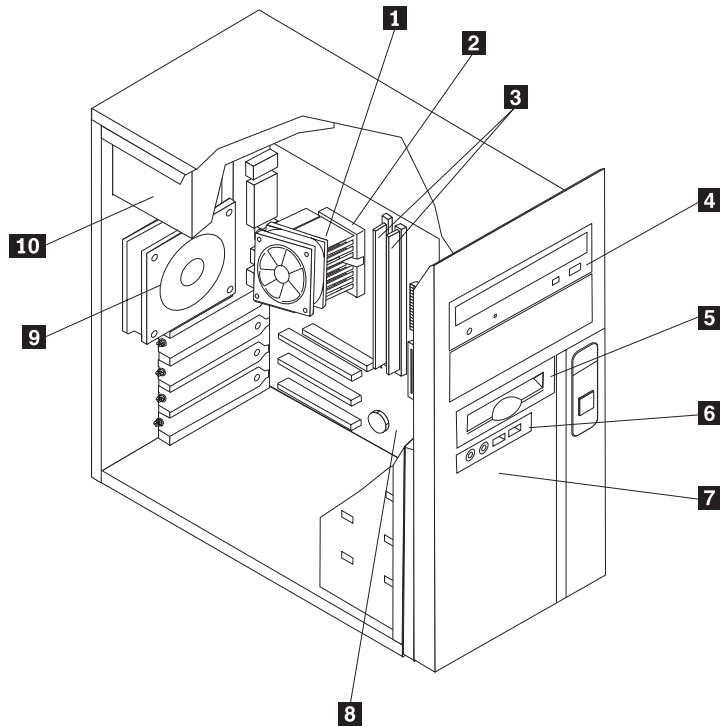

- 1** Heat sink and fan
- 2** Microprocessor
- 3** Memory modules
- 4** Optical drive
- 5** Diskette drive


- 6** Front panel card
- 7** Hard disk drive
- 8** System board
- 9** System fan
- 10** Power supply

Identifying parts on the system board (Types 8290, 8291, and 8292)

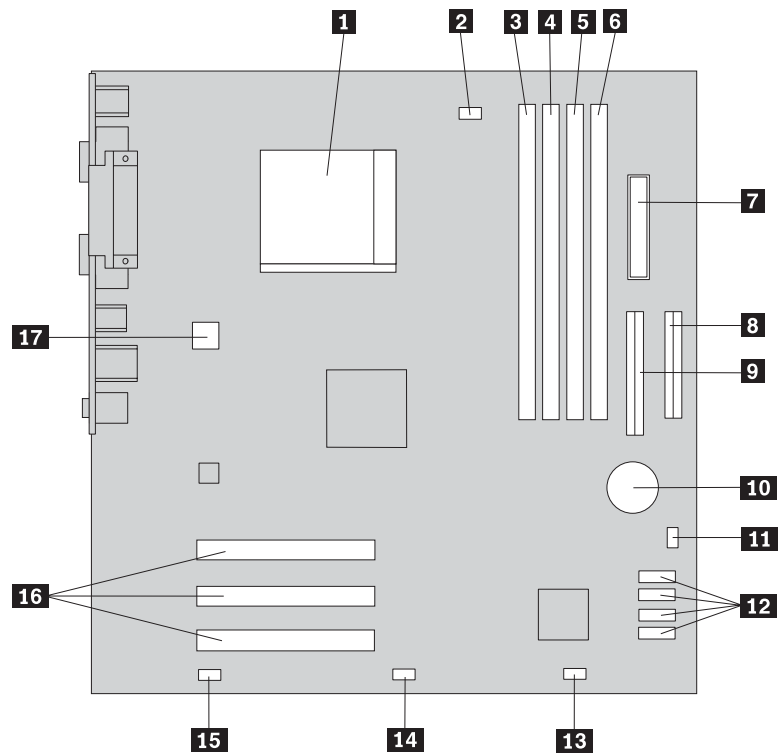

- | | |
|-----------------------------------|--------------------------------------|
| 1 Microprocessor | 10 CMOS battery |
| 2 Fan connector | 11 Clear CMOS/Recovery jumper |
| 3 Memory connector 1 | 12 SATA connectors (4) |
| 4 Memory connector 2 | 13 Power switch/LED connector |
| 5 Memory connector 3 | 14 Front USB connector |
| 6 Memory connector 4 | 15 Front Audio connector |
| 7 Power supply connector | 16 PCI connectors |
| 8 Diskette drive connector | 17 12V power connector |
| 9 Primary IDE connector | |

Identifying parts on the system board (Types 9214, 9215, and 9216)

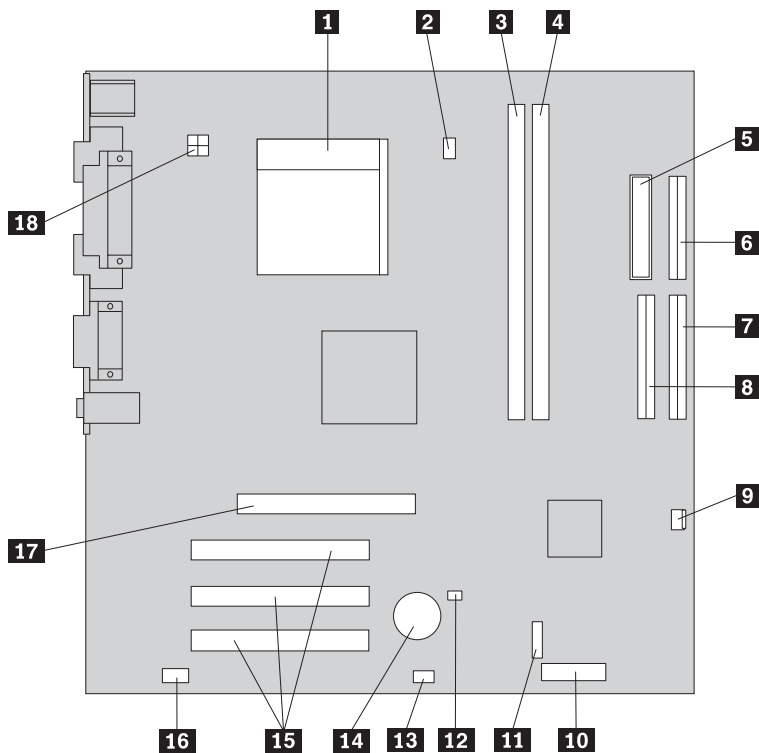


- | | |
|---------------------------------------|--------------------------------------|
| 1 Microprocessor and heat sink | 10 Front panel connector |
| 2 Microprocessor fan connector | 11 Power switch/LED connector |
| 3 Memory connector 1 | 12 Clear CMOS/Recovery jumper |
| 4 Memory connector 2 | 13 Front USB connector |
| 5 Power connector | 14 CMOS battery |
| 6 Diskette drive connector | 15 PCI connectors |
| 7 Primary IDE connector | 16 Front audio connector |
| 8 Secondary IDE connector | 17 AGP connector |
| 9 Fan connector | 18 12V power connector |

Removing and replacing the front bezel

The front bezel must be removed to replace some FRUs.

1. Remove both the left-side and right-side covers. See “Removing the covers” on page 86.
2. Disconnect the cable for the power switch/LED assembly from the system board. See “Identifying parts on the system board (Types 8290, 8291, and 8292)” on page 89 or “Identifying parts on the system board (Types 9214, 9215, and 9216)” for the connector location.
3. Remove the four screws that secure the bezel. There are two on each side located as shown.

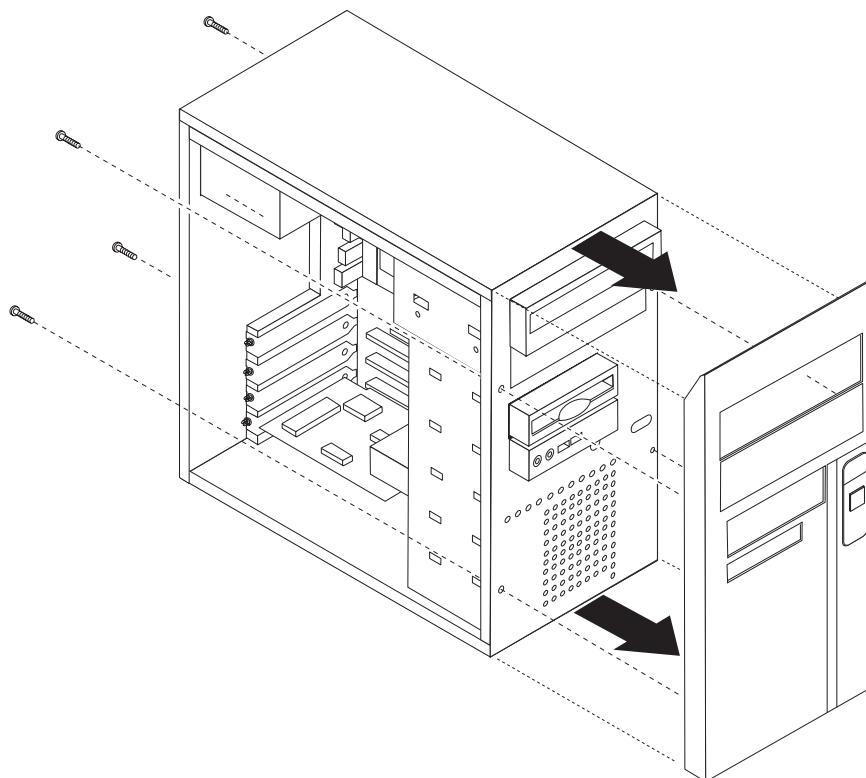

4. There are three plastic tabs on each side of the bezel. While applying pressure on the top of the bezel, release each tab starting with the tabs at the top.

Note: The power switch/LED assembly cable is connected inside the bezel. Be careful to not damage the cable and connectors when removing the bezel from the chassis.


5. When the tabs are all released, remove the bezel from the chassis.

To replace the bezel:


6. Route the power switch/LED cable through the hole in the chassis and to the system board.
7. Align the tabs in the chassis and snap it into position. Install the two screws on each side to secure the bezel.
8. Reconnect the power switch/LED cable to the system board.

Replacing a memory module

1. Remove the left-side cover. See “Removing the covers” on page 86.
2. Locate the memory connectors. See or “Identifying parts on the system board (Types 8290, 8291, and 8292” on page 89 or “Identifying parts on the system board (Types 9214, 9215, and 9216” on page 90.
3. Open the retaining clips and remove the failing memory module.

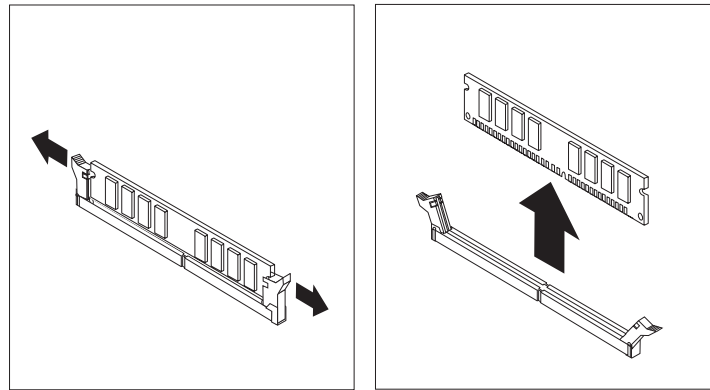


4. Make sure the notch **1** on the new memory module is aligned correctly with the connector key **2** on the socket. Insert the memory module straight down into the connector until it snaps into position and the retaining clips are closed.

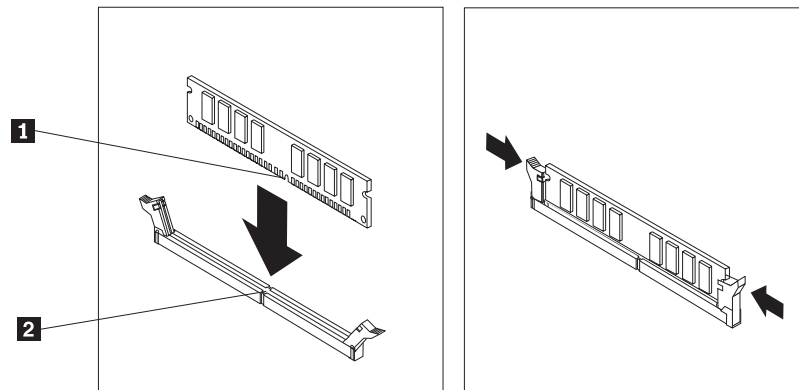

5. Go to “Completing the FRU replacement.” on page 109.

Replacing a PCI adapter

1. Remove the left-side cover. See “Removing the covers” on page 86.
2. Remove the screw securing the adapter being replaced.
3. Pull the adapter straight out of the PCI connector.
4. Remove the new adapter from its static-protective package.
5. Install the new adapter into the appropriate PCI connector.

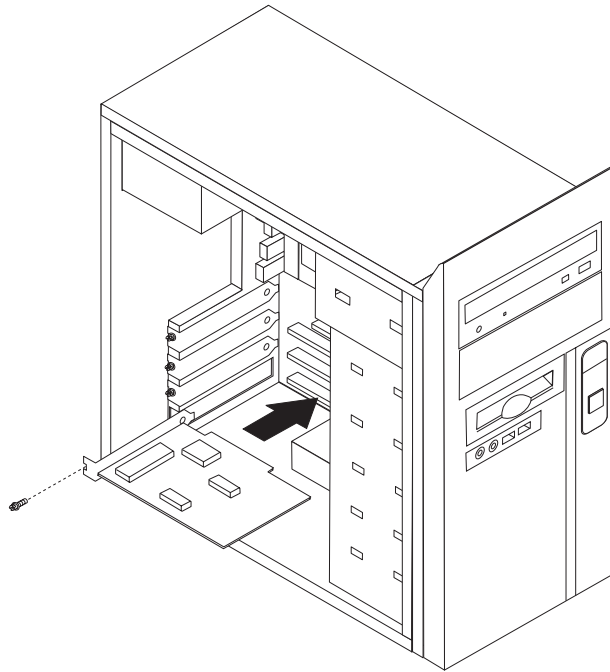


6. Install the screw to secure the new adapter.
7. Go to “Completing the FRU replacement.” on page 109.

Replacing the CMOS battery


If the CMOS battery fails, the date, time, and configuration information (including passwords) are lost. An error message is displayed when you turn on the computer.

Refer to “Safety notices (multi-lingual translations)” on page 7 for information about replacing and disposing of the battery.

1. Turn off the computer and all attached devices.
2. Remove the left-side cover. See “Removing the covers” on page 86.
3. Locate the battery. See “Identifying parts on the system board (Types 8290, 8291, and 8292)” on page 89 or “Identifying parts on the system board (Types 9214, 9215, and 9216)” on page 90.
4. If necessary, remove any adapters that impede access to the battery. See “Replacing a PCI adapter” on page 92 for more information.
5. Remove the old battery.

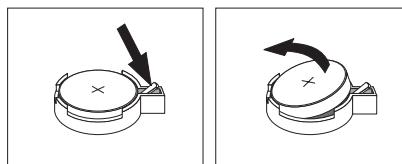

6. Install the new battery.

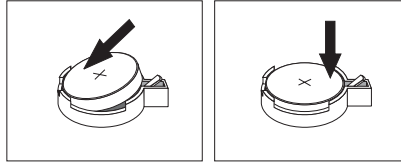

7. Replace any adapters that were removed to gain access to the battery. See “Replacing a PCI adapter” on page 92 for instructions for replacing adapters.

Note: When the computer is turned on for the first time after battery replacement, an error message might be displayed. This is normal after replacing the battery.

8. Go to “Completing the FRU replacement.” on page 109.

Replacing the power supply


Attention

Never remove the cover on a power supply or any part that has the following label attached.



Hazardous voltage, current, and energy levels are present inside any component that has this label attached. There are no servicable parts inside these components.

1. Remove the left-side cover. See “Removing the covers” on page 86.
2. Disconnect all power supply cables from the drives.
3. Disconnect all power supply cables from the system board. See “Identifying parts on the system board (Types 8290, 8291, and 8292” on page 89 or “Identifying parts on the system board (Types 9214, 9215, and 9216” on page 90.
4. At the rear of the chassis, remove the four screws that secure the power supply.

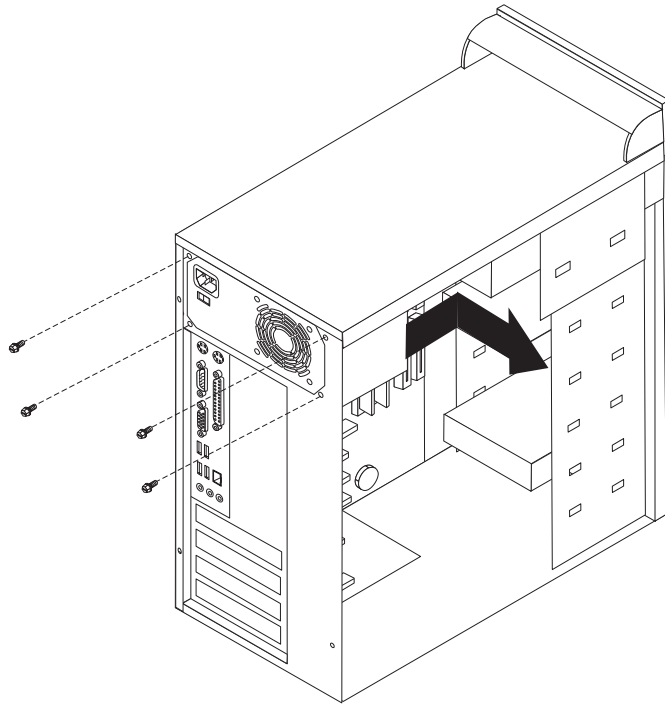


5. Lift the power supply out of the chassis.
6. Install the new power supply and insert the four screws that hold the power supply in place.
7. Reconnect all power supply cables to the system board and the drives. See “Identifying parts on the system board (Types 8290, 8291, and 8292” on page 89 or “Identifying parts on the system board (Types 9214, 9215, and 9216” on page 90. Make sure the cables are correctly routed.
8. Go to “Completing the FRU replacement.” on page 109.

Replacing the system board

Note: When replacing the system board, a new retention bracket for the microprocessor heat sink is required. Make sure you have a new retention bracket before beginning this procedure.


1. Remove the left-side cover. See “Removing the covers” on page 86.
2. Lay the computer on the right side to make the system board accessible.
3. Remove any adapter cards installed in the PCI connectors. See “Replacing a PCI adapter” on page 92.
4. Carefully take note of the location of all cable connections on the system board and disconnect all cables. See “Identifying parts on the system board (Types 8290, 8291, and 8292” on page 89 or “Identifying parts on the system board (Types 9214, 9215, and 9216” on page 90.
5. Remove the screws that secure the system board to the chassis.
6. Lift the system board out of the chassis.
7. Remove the memory modules from the failing system board and install them in the same location on the new system board.

8. Disconnect the heat sink and fan assembly cable from the system board. See “Identifying parts on the system board (Types 8290, 8291, and 8292” on page 89 or “Identifying parts on the system board (Types 9214, 9215, and 9216” on page 90.
9. Remove the four screws securing the heat sink and fan assembly to the system board.

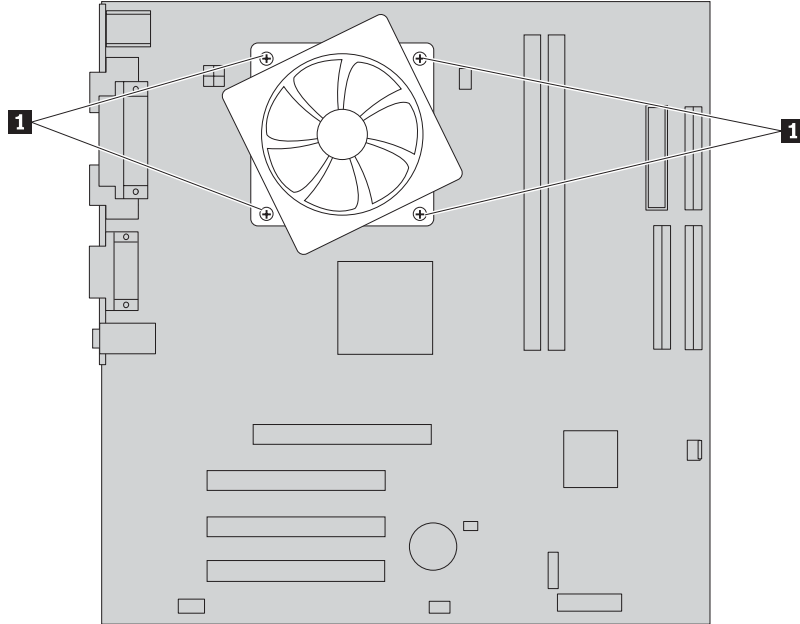

10. Lift the heat sink and fan assembly off the failing system board.

11. To remove the microprocessor **2** from the system board, lift the small handle **3** and open the retainer **1**.

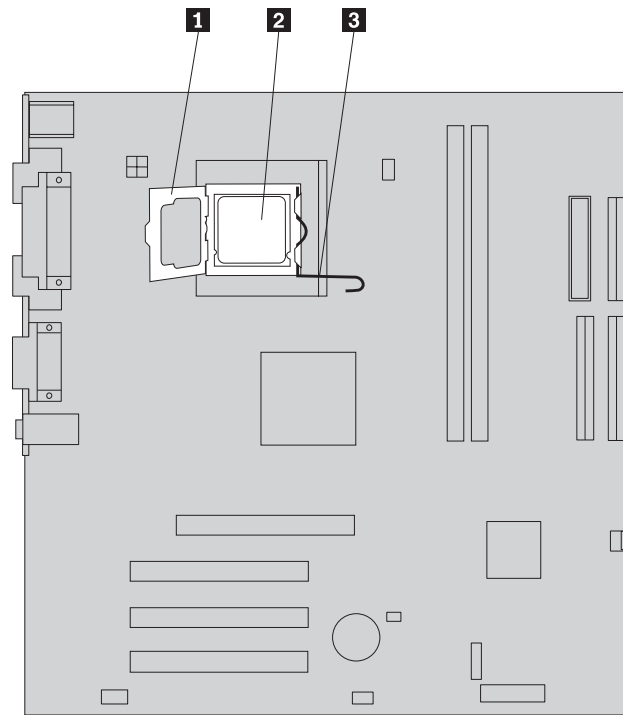


- Using the vacuum pen **1**, remove the microprocessor from the system board socket by lifting it straight up and out of the socket.

Important

Do not touch the gold contacts on the bottom of the microprocessor. If you must touch the microprocessor, touch only the sides.


Note: Since you are not installing a new microprocessor, the protective cover **3** is not used.

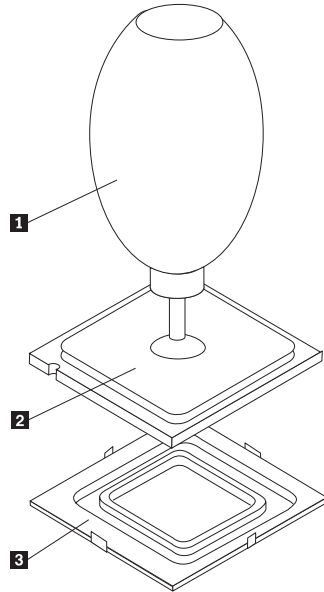


Attention:

Do not drop anything onto the microprocessor socket while it is exposed. The socket pins must be kept as clean as possible.

- To install the microprocessor on the new system board, position the microprocessor so that the notches **1** are aligned with the corresponding tabs in the socket.

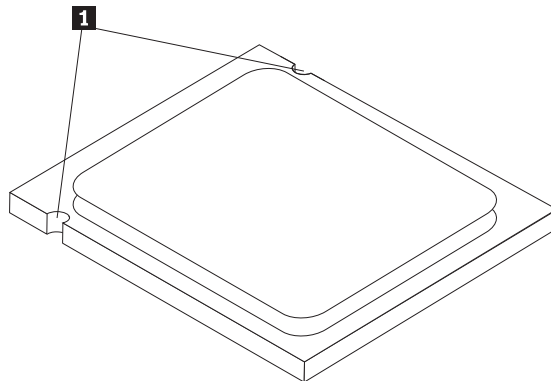

- Make sure that the microprocessor retainer is fully open.
- Using the vacuum pen **1** to pick up the microprocessor, lower the microprocessor straight down into the socket.

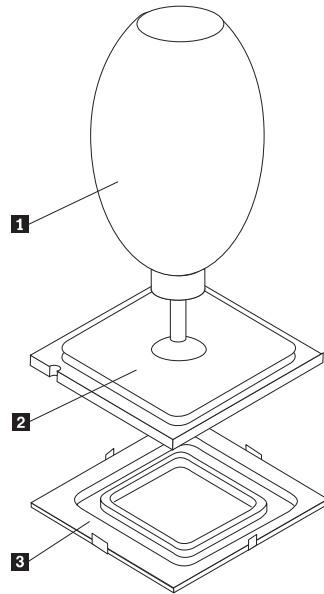


16. Lower the microprocessor retainer.
17. Lock the retainer with the small handle to secure the microprocessor in the socket.
18. The new retention bracket has plastic one-way rings on the posts that insert into the rear of the new system board. Install the new retention bracket by aligning the posts on the module with the holes in the system board and pushing the posts through the holes until the retention bracket is secure.
19. Reconnect the heat sink and fan assembly cable to the system board. See “Identifying parts on the system board (Types 8290, 8291, and 8292” on page 89 or “Identifying parts on the system board (Types 9214, 9215, and 9216” on page 90.
20. Install the new system board into the chassis and align the screw holes with those in the chassis. Insert and tighten the screws the were removed previously.
21. Reconnect all disconnected cables to the system board.
22. Go to “Completing the FRU replacement.” on page 109.

Replacing the microprocessor

Note: The new microprocessor is shipped with a new heat sink. Make sure to use the new heat sink when installing the new microprocessor.


1. Remove the left-side cover. See “Removing the covers” on page 86.
2. Lay the computer on the right side to make the system board and microprocessor accessible.
3. Disconnect the heat sink and fan assembly cable from the system board. See “Identifying parts on the system board (Types 8290, 8291, and 8292” on page 89 or “Identifying parts on the system board (Types 9214, 9215, and 9216” on page 90.

4. Remove the four screws securing the heat sink and fan assembly to the system board. Notice that there is a retention bracket on the back side of the system board.

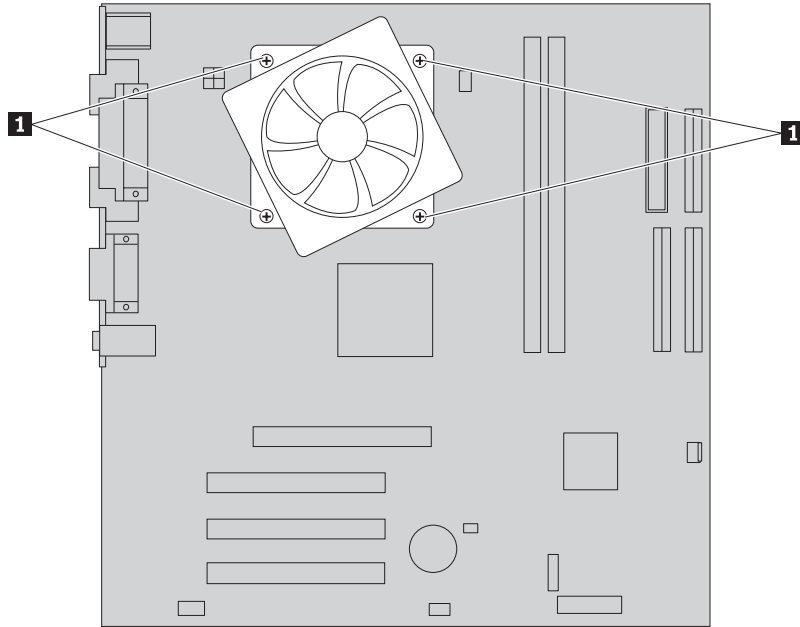

5. Lift the heat sink and fan assembly off the failing system board.


6. To remove the microprocessor **2** from the failing system board, lift the small handle **3** and open the retainer **1**.

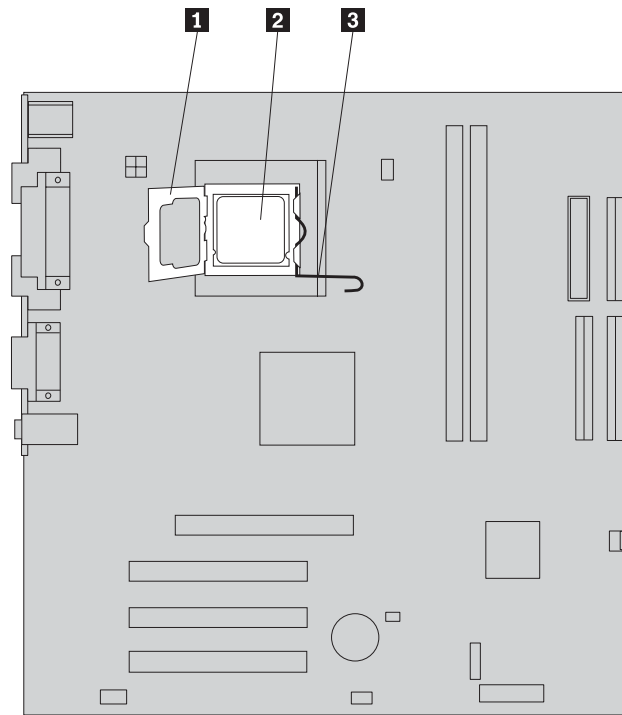

- Using the vacuum pen **1**, remove the microprocessor from the system board socket by lifting it straight up and out of the socket.

Important


Do not touch the gold contacts on the bottom of the microprocessor. If you must touch the microprocessor, touch only the sides.

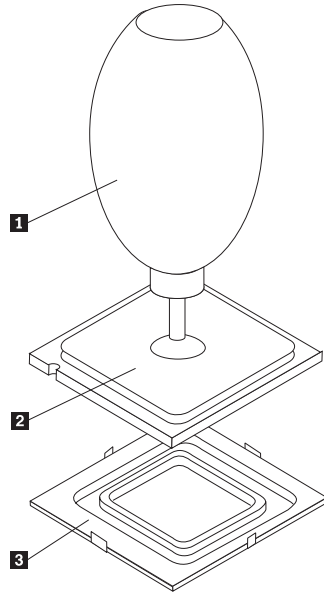

Attention:

Do not drop anything onto the microprocessor socket while it is exposed. The socket pins must be kept as clean as possible.

- Make sure that the microprocessor retainer is fully open.
- Loosen the protective cover **3** that protects the gold contacts on the new microprocessor **2** but do not remove it. Use the vacuum pen **1** to pick up the microprocessor then completely remove the cover.

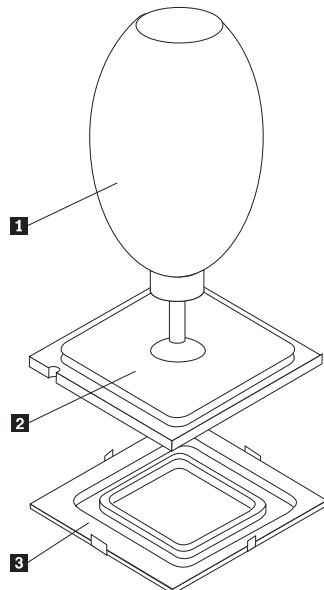


10. Position the microprocessor so that the notches on the microprocessor are aligned with the tabs in the microprocessor socket.
11. Using the vacuum pen, lower the microprocessor straight down into the microprocessor socket.

Note: Install the black protective cover that was removed from the new microprocessor onto the defective microprocessor after the installation is complete.

12. Lower the microprocessor retainer.
13. Lock the retainer with the small handle to secure the microprocessor in the socket.
14. Reinstall the heat sink on the microprocessor by aligning the screws with the screw holes in the retention bracket. Tighten the four screws that secure the heat sink and fan assembly to the system board.
15. Reconnect the heat sink and fan assembly cable to the system board. See “Identifying parts on the system board (Types 8290, 8291, and 8292” on page 89 or “Identifying parts on the system board (Types 9214, 9215, and 9216” on page 90.
16. Go to “Completing the FRU replacement.” on page 109.

Replacing the primary hard disk drive


1. Remove the left-side and right-side covers. See “Removing the covers” on page 86.
2. Disconnect the signal and power cables from the rear of the hard disk drive.
3. Remove the two screws that secure the drive on each side.

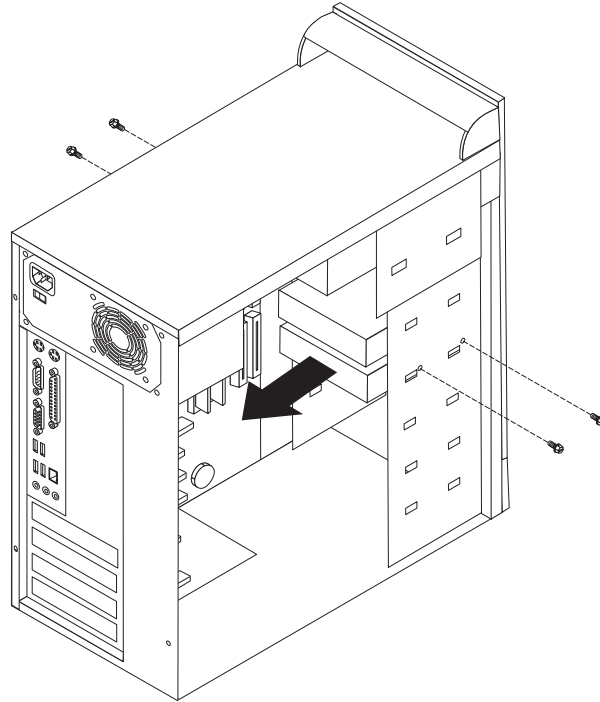

4. Slide the drive toward the rear of the chassis until it can be removed.
5. If the drive you are replacing has jumpers on the rear, make sure the jumpers on the new drive are in the same exact position as the drive being replaced.
6. Slide the new drive into the bay until the screws holes on each side are aligned and install two screws in each side of the drive.
7. Reconnect the signal and power cables to the rear of the hard disk drive.
8. Go to “Completing the FRU replacement.” on page 109.

Replacing an optical drive

1. Remove the left-side and right-side covers. See “Removing the covers” on page 86.
2. Disconnect the power cable and signal cable from the optical drive.
3. Remove the two screws that secure the drive on each side.

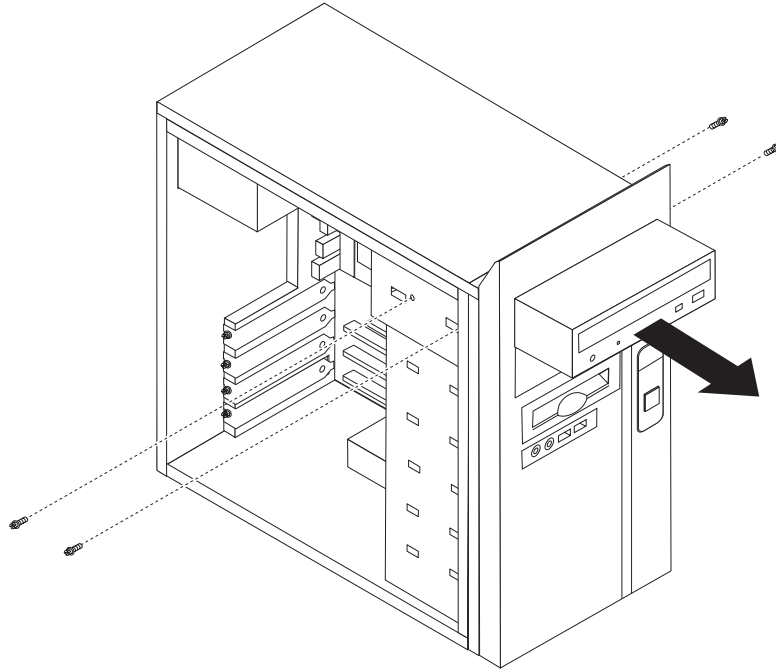


4. Slide the drive being replaced out the front of the computer.
5. If the drive you are replacing has jumpers on the rear, make sure the jumpers on the new drive are in the same exact position as the drive being replaced.
6. Slide the new drive into the bay until the screws holes on each side are aligned and install two screws in each side of the drive.
7. Reconnect the power cable and signal cable to the new optical drive.
8. Go to “Completing the FRU replacement.” on page 109.

Replacing the diskette drive

1. Remove the left-side and right-side covers. See “Removing the covers” on page 86.
2. Disconnect the signal and power cables from the rear of the hard disk drive.

Note: You will probably have to disconnect cables that are connected to the system board and other drives to allow the diskette drive to be removed from inside the chassis.

3. Remove the two screws that secure the drive on each side.

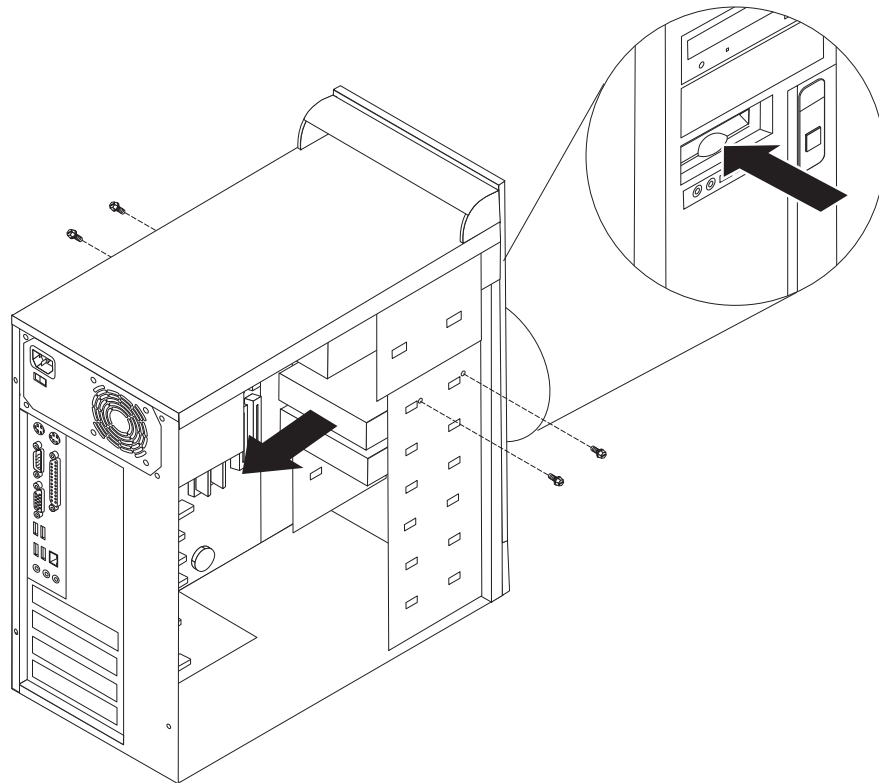


4. Slide the drive toward the rear of the chassis until it can be removed.
5. Slide the new drive into the bay until the screws holes on each side are aligned and install two screws in each side of the drive.
6. Reconnect all signal and power cables that were disconnected. See “Identifying parts on the system board (Types 8290, 8291, and 8292” on page 89 or “Identifying parts on the system board (Types 9214, 9215, and 9216” on page 90.
7. Go to “Completing the FRU replacement.” on page 109.

Replacing the power switch/ LED assembly

1. Remove the front bezel. See “Removing and replacing the front bezel” on page 90.
2. Disconnect the power switch/LED assembly cable from the system board. See “Identifying parts on the system board (Types 8290, 8291, and 8292” on page 89 or “Identifying parts on the system board (Types 9214, 9215, and 9216” on page 90.
3. Remove the power switch/LED assembly by disconnecting it from the inside of the bezel.
4. Install the new power switch/LED assembly into the bezel.
5. Route the cable for the new power switch/LED assembly through the hole in the chassis and to the system board.
6. Reinstall the bezel. See “Removing and replacing the front bezel” on page 90.
7. Reconnect the power switch/LED cable to the system board.
8. Go to “Completing the FRU replacement.” on page 109.

Replacing the front panel card

1. Remove the left-side and right-side covers. See “Removing the covers” on page 86.
2. Remove the front bezel. See “Removing and replacing the front bezel” on page 90.
3. Disconnect the front USB cable and the front audio cable from the system board. See “Identifying parts on the system board (Types 8290, 8291, and 8292” on page 89 or “Identifying parts on the system board (Types 9214, 9215, and 9216” on page 90.
4. Remove the screw on each side of the chassis that secures the front panel bracket.

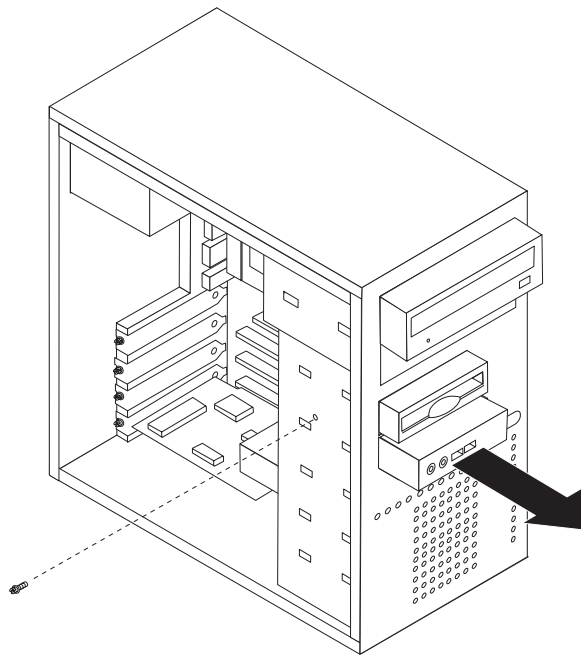

5. Slide the front panel bracket out the front of the chassis.
6. Disconnect the front USB cable and the front audio cable from the front panel card being replaced.
7. Connect the front USB cable and the front audio cable to the new front panel card.
8. Slide the new front panel bracket into the chassis until the screw holes are aligned.
9. Install the screw on each side of the chassis that secures the front panel bracket.
10. Reinstall the bezel. See “Removing and replacing the front bezel” on page 90.
11. Connect the front USB cable and the front audio cable to the system board. See “Identifying parts on the system board (Types 8290, 8291, and 8292” on page 89 or “Identifying parts on the system board (Types 9214, 9215, and 9216” on page 90.
12. Go to “Completing the FRU replacement.” on page 109.

Completing the FRU replacement.

After replacing FRUs, you need to install any removed parts, replace the cover, and reconnect any cables, including telephone lines and power cords. Also, depending on the FRU that is replaced, you might need to confirm the updated information in the CMOS Setup Utility program.

Note: When the power cord is first plugged in, the computer might appear to turn on for a few seconds and then turn off. This is a normal sequence to enable the computer to initialize.

1. Ensure that all components have been reassembled correctly and that no tools or loose screws are left inside your computer.
2. Replace the covers that were removed and secure them with the thumb screws.
3. Reconnect the external cables and power cords to the computer. See “Rear connectors” on page 86.
4. If you have replaced the system board, you must update (flash) the BIOS. See “Flash update procedures” on page 184.
5. Some FRU replacements require the configuration to be updated. See Chapter 6, “Using the CMOS Setup Utility,” on page 51.

Chapter 9. Replacing FRUs (Types 8293, 8294, 8295, 9217, 9218, and 9219)

Important


Before you replace any FRU, read Chapter 2, "Safety information," on page 3. These precautions and guidelines will help you work safely.

FRU replacements are to be done by trained service technicians only.

This chapter does not contain a remove and replace procedure for all FRUs. Only the major FRUs are documented.

Rear connectors

The following illustration shows the locations of the connectors on the rear of the computer.

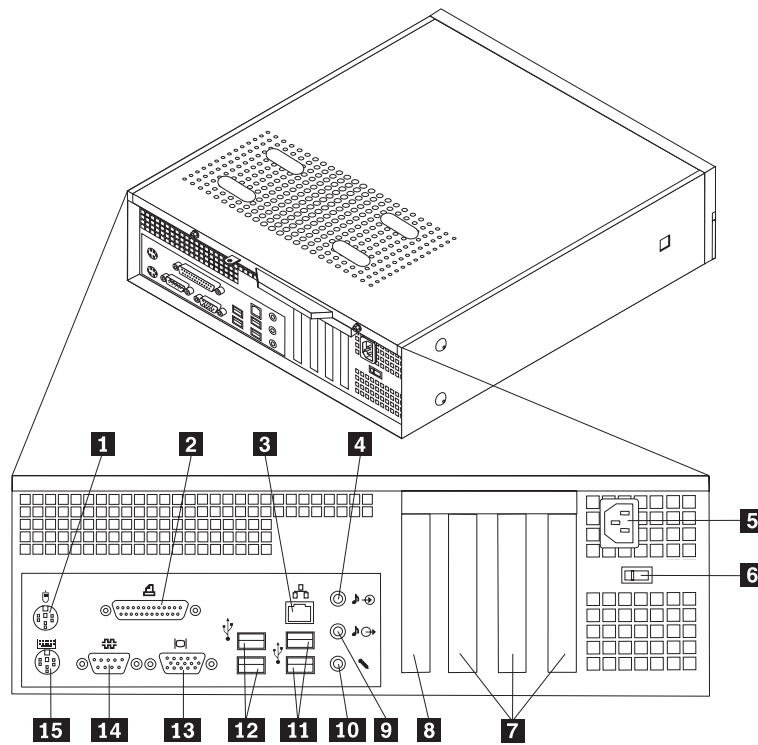

- | | | | |
|----------|-------------------------------------|-----------|-----------------------------|
| 1 | Standard mouse connector | 9 | Audio line out connector |
| 2 | Parallel connector | 10 | Microphone connector |
| 3 | Ethernet connector | 11 | USB connectors |
| 4 | Audio line in connector | 12 | USB connectors |
| 5 | Power cord connector | 13 | VGA monitor connector |
| 6 | Voltage selection switch | 14 | Serial connector |
| 7 | PCI adapter connectors | 15 | Standard keyboard connector |
| 8 | AGP adapter connector (some models) | | |

Removing the cover


Important

Read Chapter 2, "Safety information," on page 3 and "Handling electrostatic discharge-sensitive devices" on page 6 before opening the cover.

To remove the computer cover:


1. Remove any media (diskettes, CDs, or tapes) from the drives, shut down the operating system, and turn off all attached devices.
2. Unplug all power cords from electrical outlets.
3. Disconnect all cables attached to the computer. This includes power cords, input/output (I/O) cables, and any other cables that are connected to the computer.
4. Remove any locking devices such as a padlock that secure the cover.

- Remove the two screws at the rear of the computer cover and slide the cover to the rear.

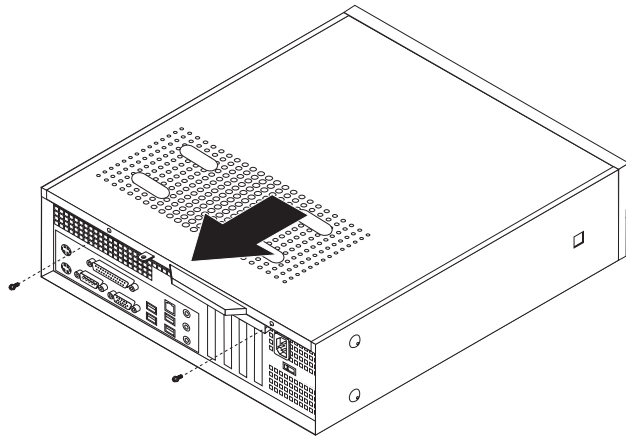


Locations

The following illustration will help you locate the major FRUs in the computer.

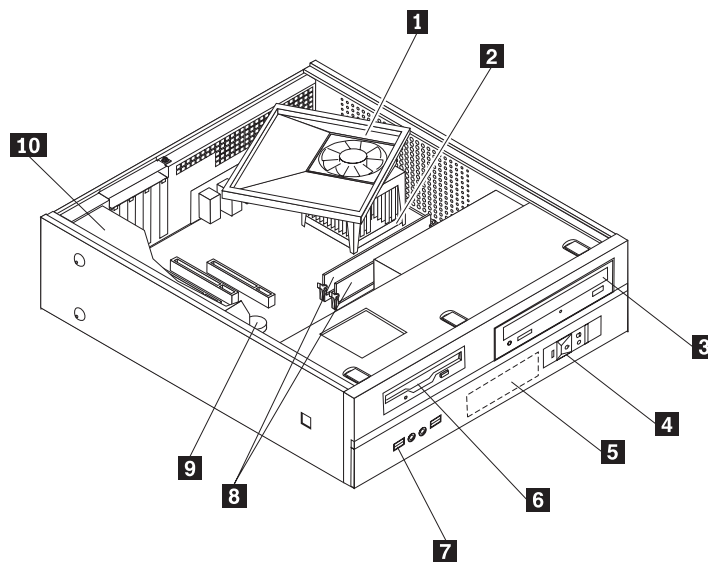


- | | |
|---|---------------------------|
| 1 Fan plenum, fan, and heat sink | 6 Diskette drive |
| 2 Microprocessor | 7 Front panel card |
| 3 Optical drive | 8 Memory modules |
| 4 Power switch/LED assembly | 9 System board |
| 5 Hard disk drive | 10 Power supply |

Identifying parts on the system board (Types 8293, 8294, and 8295)

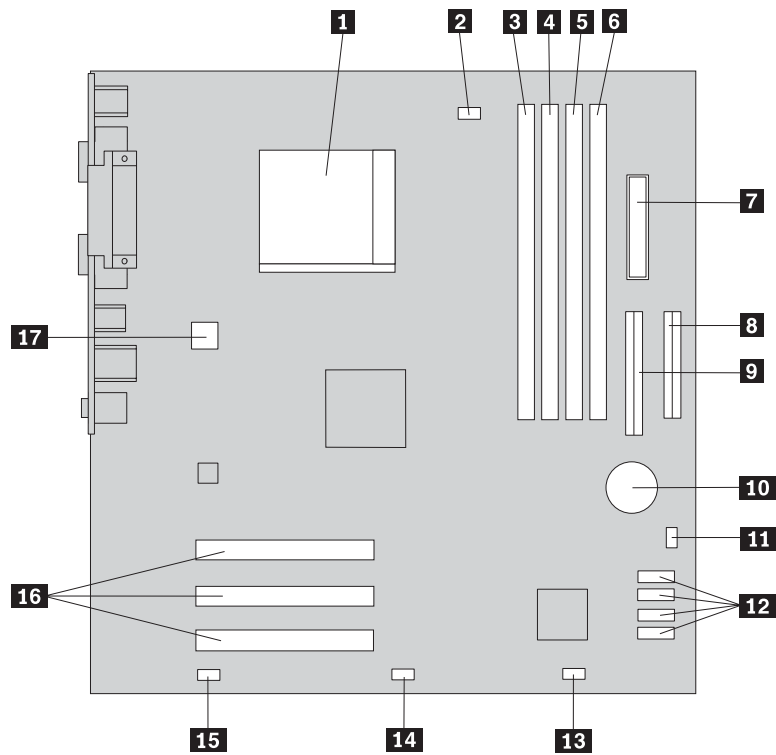

- | | | | |
|----------|--------------------------|-----------|----------------------------|
| 1 | Microprocessor | 10 | CMOS Battery |
| 2 | Fan connector | 11 | Clear CMOS/Recovery jumper |
| 3 | Memory connector 1 | 12 | SATA connectors (4) |
| 4 | Memory connector 2 | 13 | Power switch/LED connector |
| 5 | Memory connector 3 | 14 | Front USB connector |
| 6 | Memory connector 4 | 15 | Front Audio connector |
| 7 | Power supply connector | 16 | PCI connectors |
| 8 | Diskette drive connector | 17 | 12V power connector |
| 9 | Primary IDE connector | | |

Identifying parts on the system board (Types 9217, 9218, and 9219)

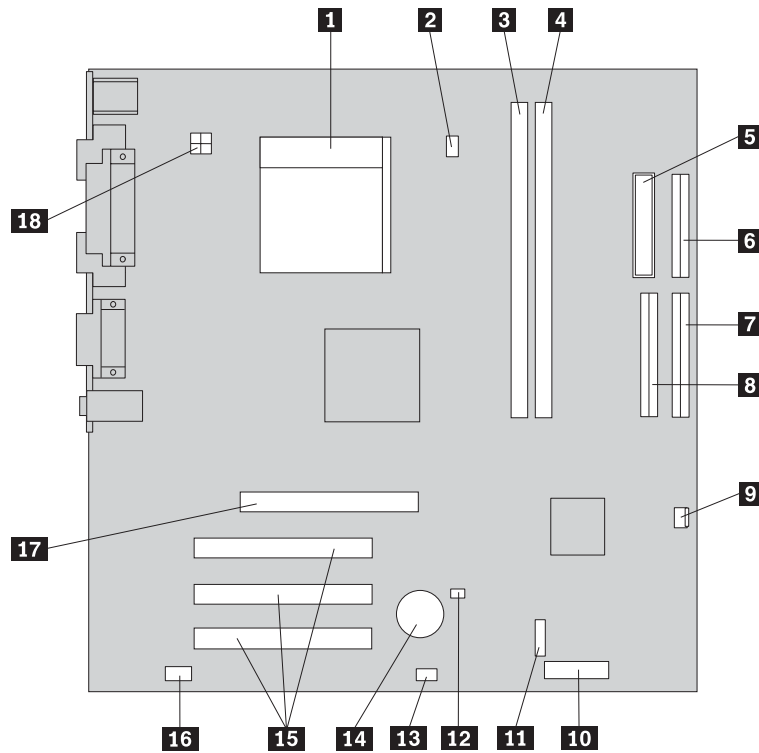


- | | |
|---------------------------------------|--------------------------------------|
| 1 Microprocessor and heat sink | 10 Front panel connector |
| 2 Microprocessor fan connector | 11 Power switch/LED connector |
| 3 Memory connector 1 | 12 Clear CMOS/Recovery jumper |
| 4 Memory connector 2 | 13 Front USB connector |
| 5 Power connector | 14 CMOS Battery |
| 6 Diskette drive connector | 15 PCI connectors |
| 7 Primary IDE connector | 16 Front audio connector |
| 8 Secondary IDE connector | 17 AGP connector |
| 9 Fan connector | 18 12V power connector |


Removing and replacing the drive bay assembly

You will need to remove the drive bay assembly to access some FRUs.


1. Remove the computer cover. See “Removing the covers” on page 86.
2. Remove the front bezel by releasing the three tabs and pivoting the top of the bezel outward.

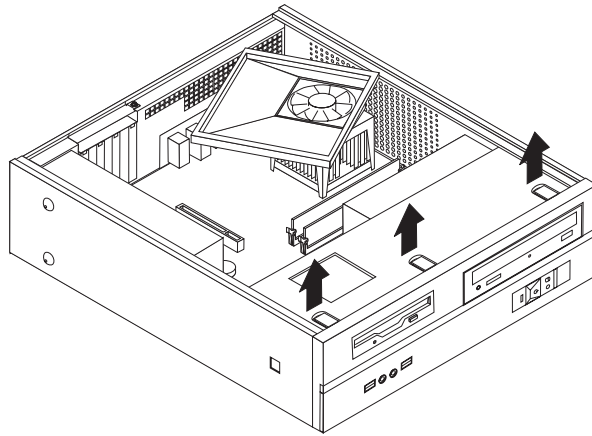

3. Remove the two screws at the front of the chassis securing the drive bay assembly.

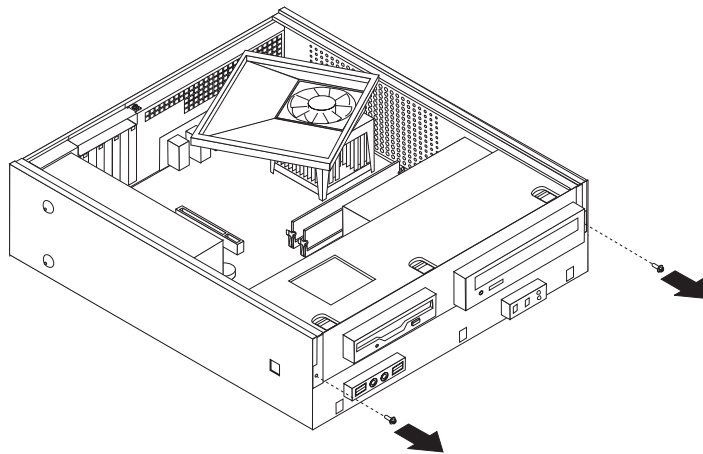

- Slide the drive bay assembly forward until it stops. Disconnect the power supply and signal cables from the drives. Pivot the rear of the drive bay assembly upward to remove it completely from the computer.

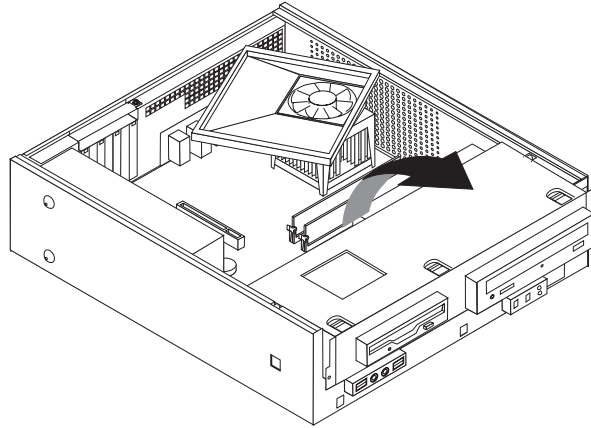


Note: To allow easier access to the cables, lift the fan plenum off the heat sink. See “Locations” on page 113.


- Reverse this procedure to replace the drive bay assembly and bezel.

Replacing a memory module

- Remove the cover. See “Removing the covers” on page 86.
- Remove the drive bay assembly. See “Removing and replacing the drive bay assembly” on page 116.
- Locate the memory connectors. See “Identifying parts on the system board (Types 8293, 8294, and 8295” on page 114 or “Identifying parts on the system board (Types 9217, 9218, and 9219” on page 115.
- Open the retaining clips and remove the failing memory module.

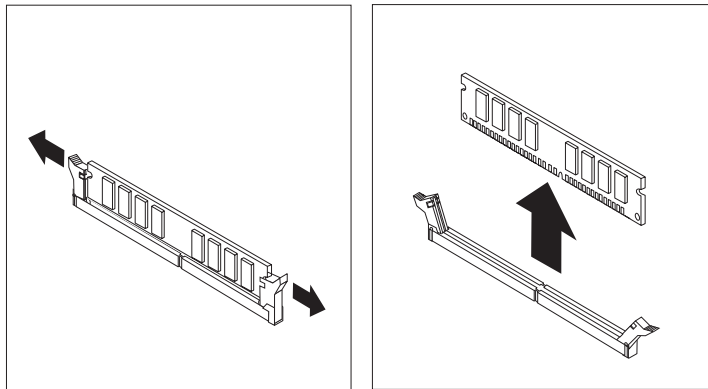


5. Make sure the notch **1** on the new memory module is aligned correctly with the connector key **2** on the socket. Insert the memory module straight down into the connector until it snaps into position and the retaining clips are closed.

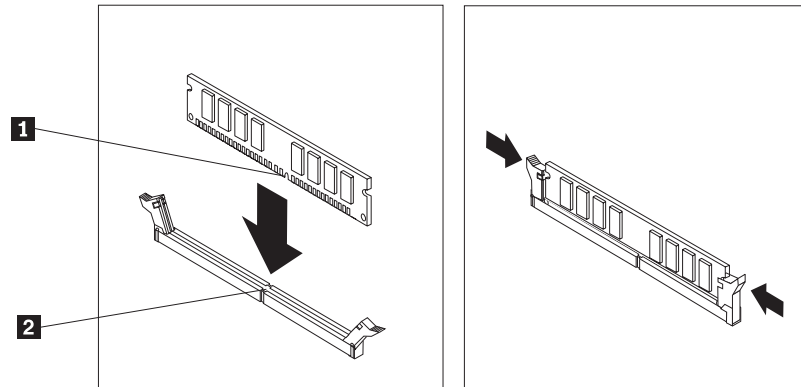

6. Replace the drive bay assembly. See “Removing and replacing the drive bay assembly” on page 116.
7. Go to “Completing the FRU replacement.” on page 135.


Replacing a PCI adapter

1. Remove the computer cover. See “Removing the covers” on page 86.
2. Remove the screw that secures the adapter retainer and remove the retainer.

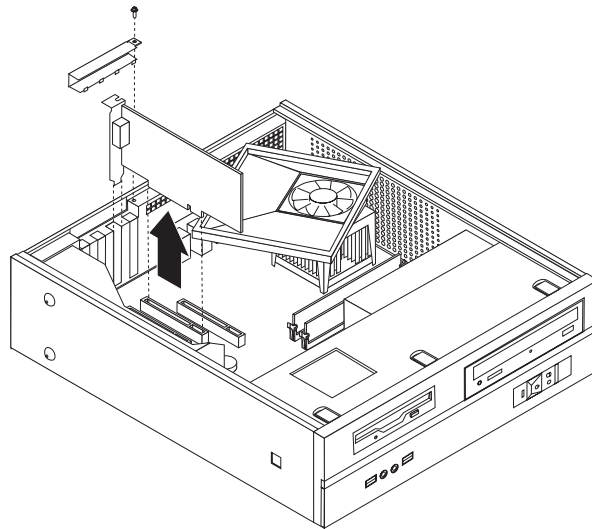

3. Remove the failing adapter.
4. Remove the new adapter from its static-protective package.

5. Install the new adapter into the appropriate connector on the system board.

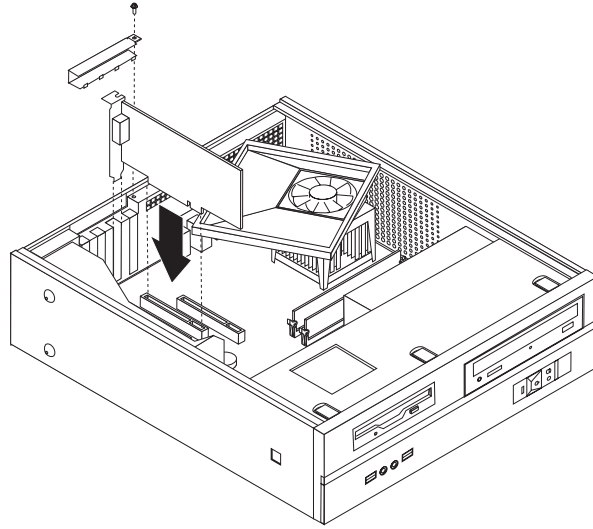

6. Reinstall the adapter retainer and screw that secures the retainer.
7. Go to “Completing the FRU replacement.” on page 135.


Replacing the CMOS battery

If the CMOS battery fails, the date, time, and configuration information (including passwords) are lost. An error message is displayed when you turn on the computer.


Important

Refer to “Safety notices (multi-lingual translations)” on page 7 for information about replacing and disposing of the battery.

1. Remove the cover. See “Removing the cover” on page 112.
2. Locate the battery. See “Identifying parts on the system board (Types 8293, 8294, and 8295)” on page 114 or “Identifying parts on the system board (Types 9217, 9218, and 9219)” on page 115.
3. Depending on the location of the CMOS battery in your computer, you might have to remove the drive bay assembly to access the battery. If necessary, see “Removing and replacing the drive bay assembly” on page 116.
4. If necessary, remove any adapters that impede access to the battery. See “Replacing a PCI adapter” on page 118 for more information.
5. Remove the old battery.

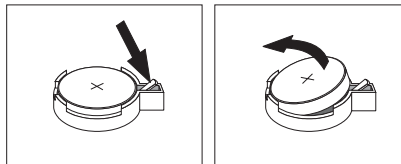

6. Install the new battery.

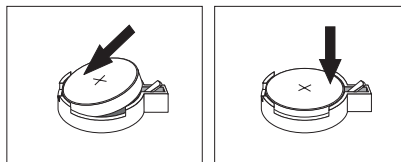

7. Replace the drive bay assembly if it was removed. See “Removing and replacing the drive bay assembly” on page 116.
8. Replace any adapters that were removed to gain access to the battery. See “Replacing a PCI adapter” on page 118 for more information.

Note: When the computer is turned on for the first time after battery replacement, an error message might be displayed. This is normal after replacing the battery.

9. Go to “Completing the FRU replacement.” on page 135.

Replacing the power supply

Attention

Never remove the cover on a power supply or any part that has the following label attached.




Hazardous voltage, current, and energy levels are present inside any component that has this label attached. There are no servicable parts inside these components.

1. Remove the cover. See “Removing the covers” on page 86.
2. Remove the drive bay assembly. See “Removing and replacing the drive bay assembly” on page 116.
3. Disconnect all power supply cables from the drives.
4. Disconnect all power supply cables from the system board. See “Identifying parts on the system board (Types 8293, 8294, and 8295” on page 114 or “Identifying parts on the system board (Types 9217, 9218, and 9219” on page 115.
5. Remove the hard disk drive. See “Replacing the hard disk drive” on page 131.
6. The system board must be moved out of the way to remove the power supply. Remove the screws that secure the system board to the chassis and slide the system board away from the power supply.

Note: You do not have to remove the system board from the chassis to remove the power supply.

7. At the rear of the chassis, remove the three screws that secure the power supply. Also remove the screw that secures the power supply at the front.

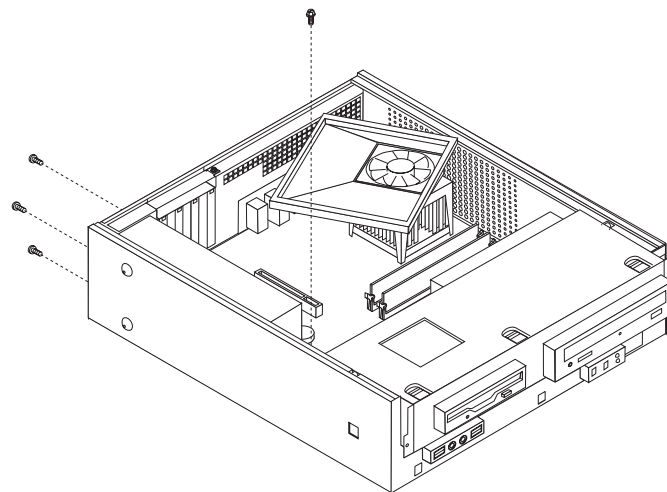

8. Lift the power supply out of the chassis.


9. Install the new power supply and install the three screws that secure the power supply at the rear of the chassis and install the screw that secures the power supply at the front.
10. Position the system board so that the screws holes are aligned and install the system board screws.
11. Install the hard disk drive. Make sure to route the power supply cable for the system board underneath the hard disk drive. See “Replacing the hard disk drive” on page 131.
12. Reconnect all other power supply cables to the system board and the drives. See “Identifying parts on the system board (Types 8293, 8294, and 8295” on page 114 or “Identifying parts on the system board (Types 9217, 9218, and 9219” on page 115. Make sure the cables are correctly routed.
13. Replace the drive bay assembly. See “Removing and replacing the drive bay assembly” on page 116.
14. Go to “Completing the FRU replacement.” on page 135.

Replacing the system board

Note: When replacing the system board, a new retention bracket for the microprocessor heat sink is required. Make sure you have a new retention bracket before beginning this procedure.


1. Remove the cover. See “Removing the covers” on page 86.
2. Lift the fan duct off the microprocessor fan.
3. Remove any adapter cards installed in the PCI connectors. See “Replacing a PCI adapter” on page 118.
4. Remove the drive bay assembly. See “Removing and replacing the drive bay assembly” on page 116.
5. Take note of the location of all cable connections on the system board and disconnect all cables. See or “Identifying parts on the system board (Types 8293, 8294, and 8295” on page 114 or “Identifying parts on the system board (Types 9217, 9218, and 9219” on page 115.
6. Remove the hard disk drive. See “Replacing the hard disk drive” on page 131.
7. Remove the screws the secure the system board to the chassis.
8. Lift the system board out of the chassis.
9. Remove the memory modules from the failing system board and install them in the same location on the new system board.
10. Disconnect the heat sink and fan assembly cable from the system board. See “Identifying parts on the system board (Types 8293, 8294, and 8295” on page 114 or “Identifying parts on the system board (Types 9217, 9218, and 9219” on page 115.

11. Remove the four screws securing the heat sink and fan assembly to the system board.

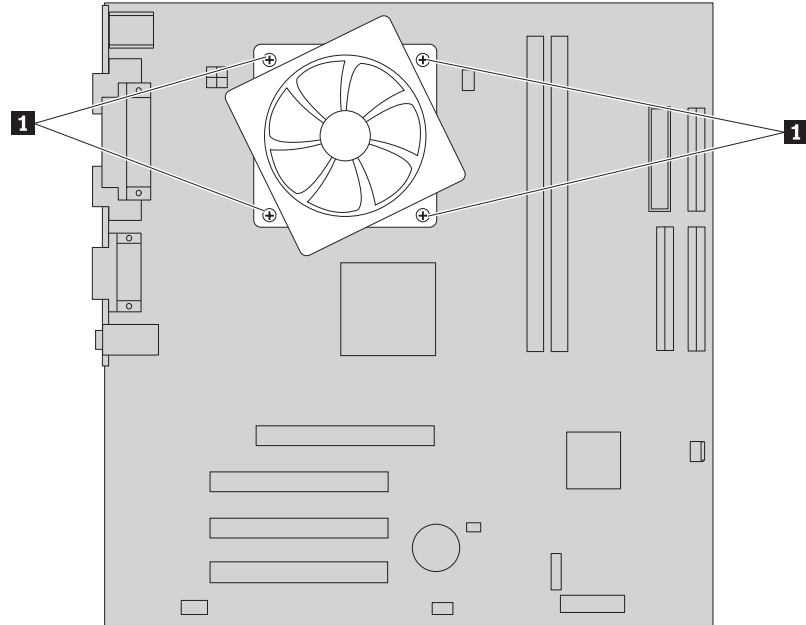

12. Lift the heat sink and fan assembly off the failing system board.

13. To remove the microprocessor **2** from the system board, lift the small handle **3** and open the retainer **1**.

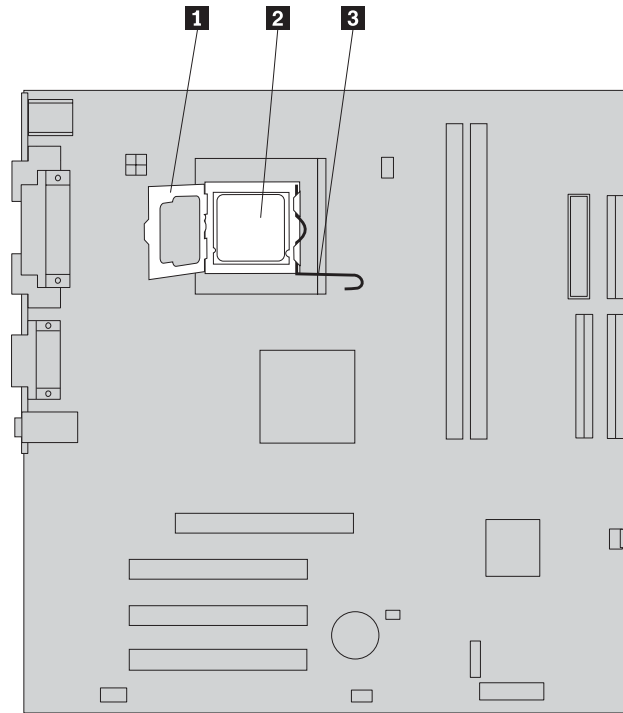


- Using the vacuum pen **1**, remove the microprocessor from the system board socket by lifting it straight up and out of the socket.

Important

Do not touch the gold contacts on the bottom of the microprocessor. If you must touch the microprocessor, touch only the sides.


Note: Since you are not installing a new microprocessor, the protective cover **3** is not used.

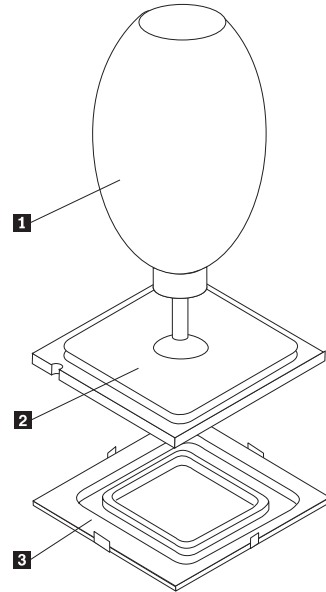


Attention:

Do not drop anything onto the microprocessor socket while it is exposed. The socket pins must be kept as clean as possible.

- Position the microprocessor so that the notches **1** are aligned with the corresponding tabs in the socket.

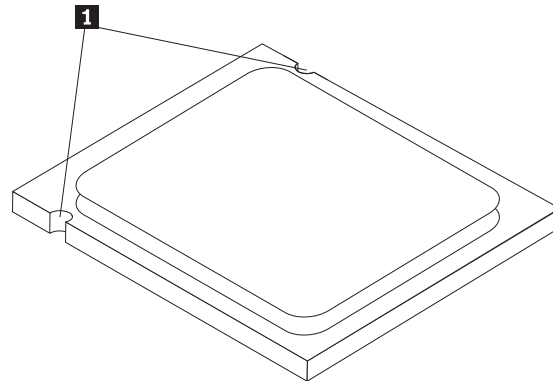

- Using the vacuum pen **1** to pick up the microprocessor, lower the microprocessor straight down into the socket.

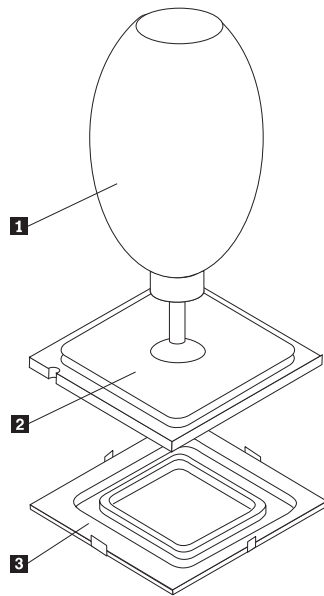


17. Lower the microprocessor retainer.
18. Lock the retainer with the small handle to secure the microprocessor in the socket.
19. The new retention bracket has an adhesive surface to attach it to the new system board. The adhesive surface is protected by a peel-off film. To install the new retention bracket, peel off the film, push the posts through the holes in the system board until secure against the board.
20. Reinstall the heat sink on the microprocessor by aligning the screws with the screw holes in the retention bracket. Tighten the four screws that secure the heat sink and fan assembly to the system board.
21. Reconnect the heat sink and fan assembly cable to the system board. See “Identifying parts on the system board (Types 8293, 8294, and 8295)” on page 114 or “Identifying parts on the system board (Types 9217, 9218, and 9219)” on page 115.
22. Install the new system board into the chassis and align the screw holes with those in the chassis. Insert and tighten the screws the were removed previously.
23. Reconnect all disconnected cables to the system board.
24. Replace the hard disk drive. See “Replacing the hard disk drive” on page 131.
25. Install the drive bay assembly and connect the power and signal cables to the drives.
26. Reinstall any PCI adapter cards that were removed. See “Replacing a PCI adapter” on page 118.
27. Replace the fan duct on the microprocessor fan.
28. Go to “Completing the FRU replacement.” on page 135.

Replacing the microprocessor

Note: The new microprocessor is shipped with a new heat sink. Make sure to use the new heat sink when installing the new microprocessor.


1. Remove the cover. See “Removing the cover” on page 112.
2. Lift the fan duct off the microprocessor fan.

3. Disconnect the heat sink and fan assembly cable from the system board. See “Identifying parts on the system board (Types 8293, 8294, and 8295” on page 114 or “Identifying parts on the system board (Types 9217, 9218, and 9219” on page 115.
4. Remove the four screws securing the heat sink and fan assembly to the system board.

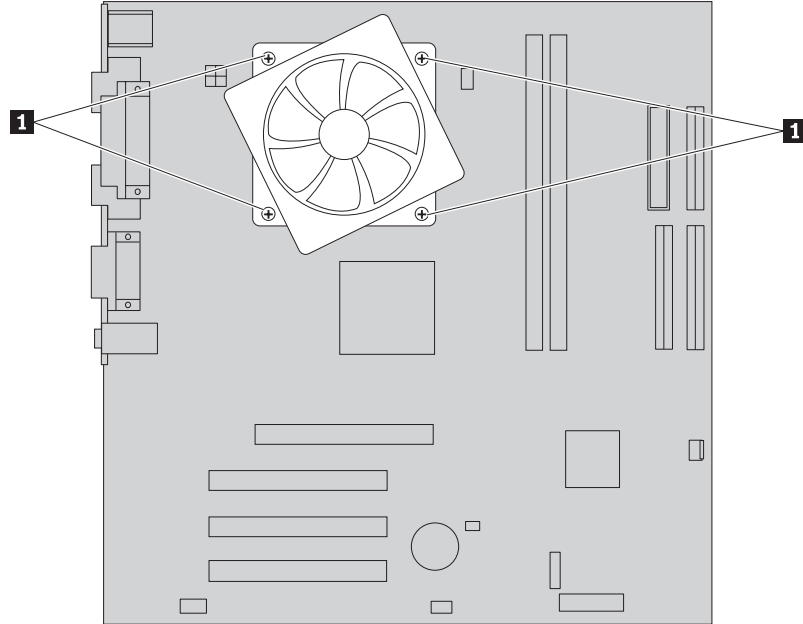

5. Lift the heat sink and fan assembly off the failing system board.


6. To remove the microprocessor **2** from the failing system board, lift the small handle **3** and open the retainer **1**.

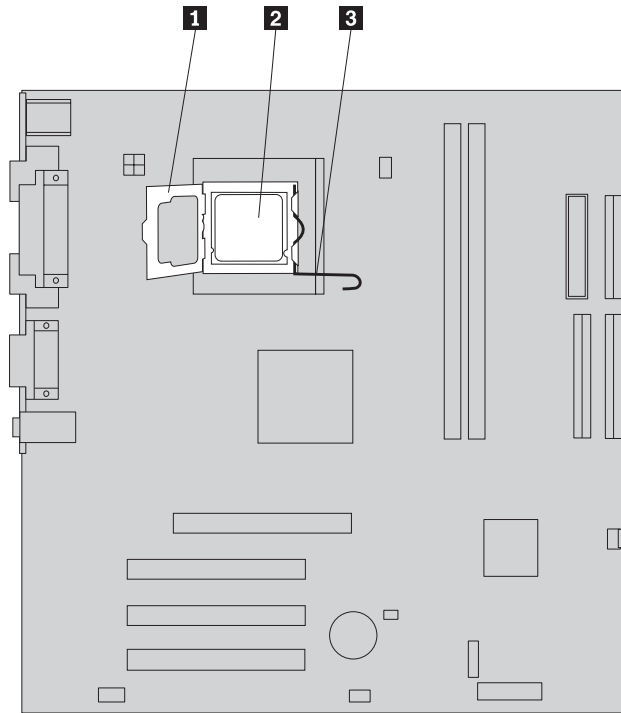

- Using the vacuum pen **1**, remove the microprocessor from the system board socket by lifting it straight up and out of the socket.

Important


Do not touch the gold contacts on the bottom of the microprocessor. If you must touch the microprocessor, touch only the sides.

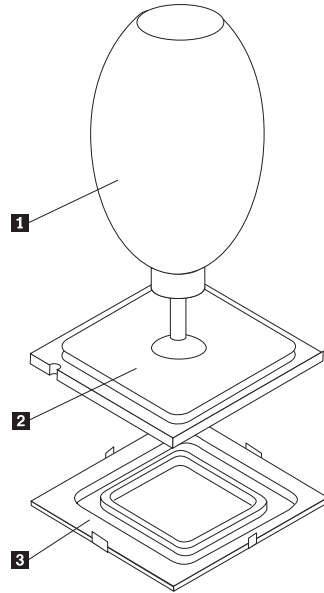


Attention:

Do not drop anything onto the microprocessor socket while it is exposed. The socket pins must be kept as clean as possible.

- Make sure that the microprocessor retainer is fully open.
- Loosen the protective cover **3** that protects the gold contacts on the new microprocessor **2** but do not remove it. Use the vacuum pen **1** to pick up the microprocessor then completely remove the cover.

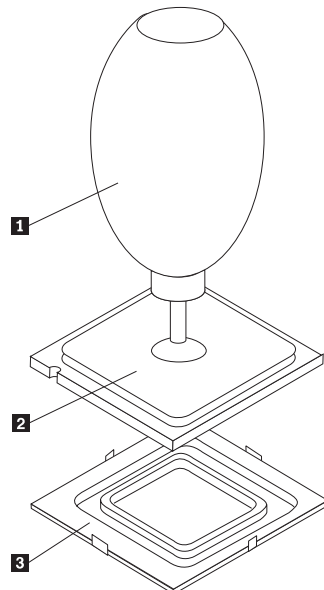

10. Position the microprocessor so that the notches **1** are aligned with the corresponding tabs in the socket.

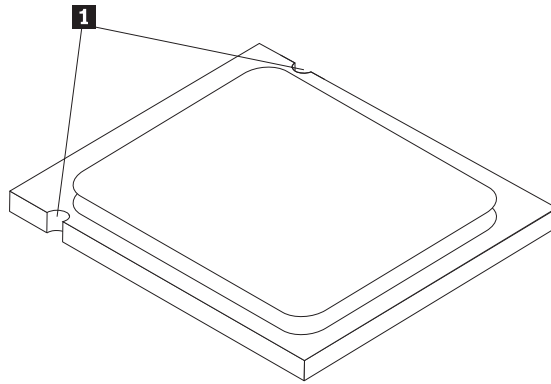


11. Using the vacuum pen, lower the microprocessor straight down into the microprocessor socket.

Note: Install the black protective cover that was removed from the new microprocessor onto the defective microprocessor after the installation is complete.

12. Lower the microprocessor retainer.
13. Lock the retainer with the small handle to secure the microprocessor in the socket.
14. Reinstall the heat sink on the microprocessor by aligning the screws with the screw holes in the retention bracket. Tighten the four screws that secure the heat sink and fan assembly to the system board.
15. Reconnect the heat sink and fan assembly cable to the system board. See "Identifying parts on the system board (Types 8293, 8294, and 8295)" on page 114 or "Identifying parts on the system board (Types 9217, 9218, and 9219)" on page 115.
16. Position the fan duct on the microprocessor fan.
17. Go to "Completing the FRU replacement." on page 135.

Replacing the hard disk drive


1. Remove the cover. See “Removing the covers” on page 86.
2. Remove the drive bay assembly. See “Removing and replacing the drive bay assembly” on page 116.
3. Remove the two screws that secure the hard disk drive bracket.

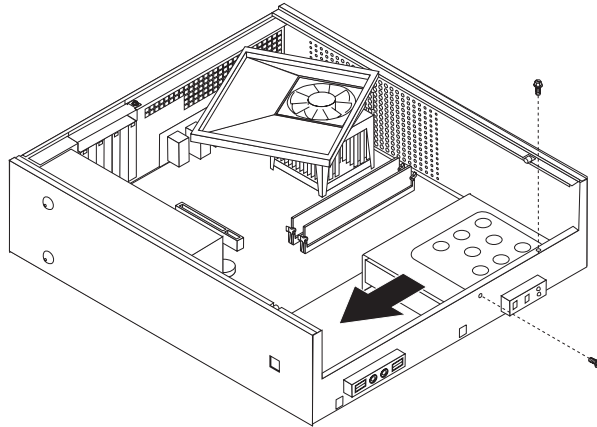

4. From the front of the chassis, slide the drive bracket to the left until it is free of the retaining clips in the bottom of the chassis. It can now be removed from the chassis.
5. Disconnect the signal and power cables from the rear of the hard disk drive.
6. Remove the four screws that secure the hard disk drive to the bracket and remove the drive from the bracket.
7. Position the new drive into the hard disk drive bracket so that the screw holes on each side are aligned and install two screws into each side of the drive.
8. Reconnect the signal and power cables to the rear of the hard disk drive.
9. Position the hard disk drive bracket so that it engages the retaining clips in the bottom of the chassis when you slide the bracket to the right.
10. Slide the hard disk drive bracket to the right until the screw holes are aligned and install the screws.
11. Reinstall the drive bay assembly and connect the power and signal cables to the drives.
12. Go to “Completing the FRU replacement.” on page 135.

Replacing an optical drive


1. Remove the cover. See “Removing the covers” on page 86.
2. Remove the drive bay assembly. See “Removing and replacing the drive bay assembly” on page 116.
3. Remove the screws that secure the drive in the drive bay assembly.

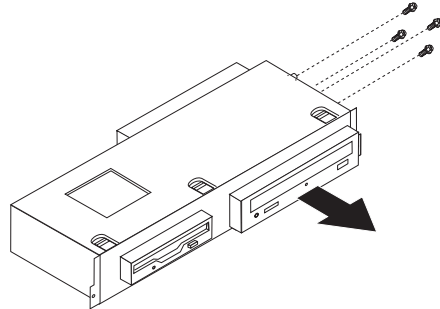

4. Slide the drive being replaced out the front of the drive bay assembly.
5. Slide the new drive into the bay until the screws holes on each side are aligned and install the screws that secure the drive to the drive bay assembly.
6. Reinstall the drive bay assembly. See “Removing and replacing the drive bay assembly” on page 116.
7. Go to “Completing the FRU replacement.” on page 135.

Replacing the diskette drive


1. Remove the cover. See “Removing the covers” on page 86.
2. Remove the drive bay assembly. See “Removing and replacing the drive bay assembly” on page 116.
3. Remove the screws at the bottom of the diskette drive that secure the drive to the drive bay assembly.

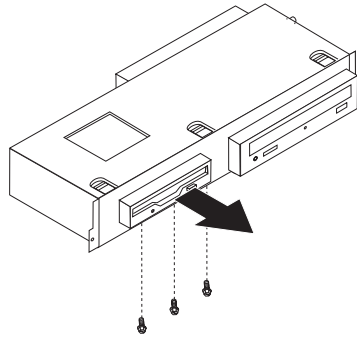

4. Slide the diskette drive out of the drive bay assembly.
5. Slide the new drive into the bay until the screws holes at the bottom of the drive are aligned and install the screws that secure the drive to the drive bay assembly.
6. Reinstall the drive bay assembly. See “Removing and replacing the drive bay assembly” on page 116.
7. Go to “Completing the FRU replacement.” on page 135.

Replacing the power switch/ LED assembly


1. Remove cover. See “Removing the covers” on page 86.
2. Remove the drive bay assembly. See “Removing and replacing the drive bay assembly” on page 116.
3. Remove the hard disk drive. See “Replacing the hard disk drive” on page 131.
4. Disconnect the power switch/LED assembly cable from the system board. See “Identifying parts on the system board (Types 8293, 8294, and 8295” on page 114 or “Identifying parts on the system board (Types 9217, 9218, and 9219” on page 115.
5. Remove the screw that secures the power switch/LED assembly to the chassis.

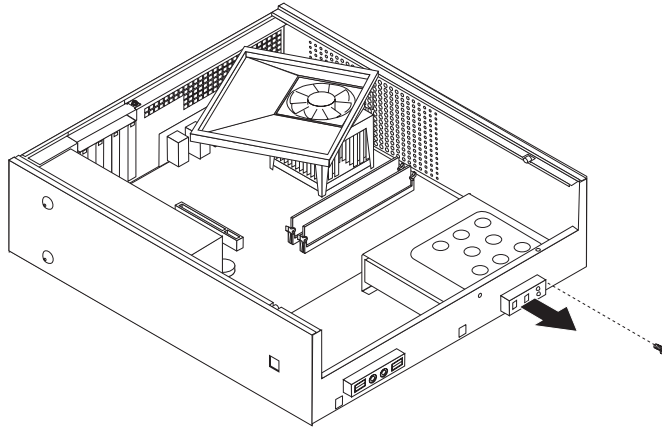

6. Note the power switch/LED assembly cable routing and remove the assembly from the chassis.
7. Route the cable for the new power switch/LED assembly through the hole in the chassis and to the system board.
8. Install the power switch/LED assembly into the chassis and secure the assembly with the screw.
9. Connect the power switch/LED cable to the system board.
10. Reinstall the hard disk drive. See “Replacing the hard disk drive” on page 131.
11. Reinstall the drive bay assembly. See “Removing and replacing the drive bay assembly” on page 116.
12. Go to “Completing the FRU replacement.” on page 135.

Replacing the front panel card

1. Remove cover. See “Removing the covers” on page 86.
2. Remove the drive bay assembly. See “Removing and replacing the drive bay assembly” on page 116.
3. Disconnect the front panel assembly cables from the system board. See “Identifying parts on the system board (Types 8293, 8294, and 8295” on page 114 or “Identifying parts on the system board (Types 9217, 9218, and 9219” on page 115.
4. Remove the screw that secures the front panel card assembly to the chassis.

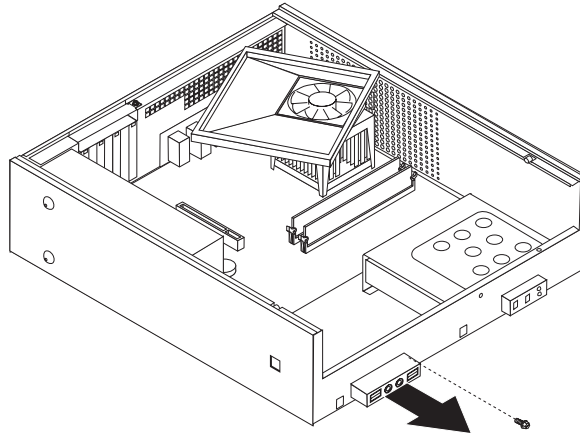


5. Note the front panel assembly cable routing and remove the assembly from the chassis.
6. Route the cable for the new front panel card assembly through the hole in the chassis and to the system board.
7. Install the front panel card assembly into the chassis and secure it with the screw.
8. Connect the front panel assembly cables to the system board.
9. Reinstall the drive bay assembly. See “Removing and replacing the drive bay assembly” on page 116.
10. Go to “Completing the FRU replacement..”

Completing the FRU replacement.

After replacing FRUs, you need to install any removed parts, replace the cover, and reconnect any cables, including telephone lines and power cords. Also, depending on the FRU that is replaced, you might need to confirm the updated information in the CMOS Setup Utility program.

Note: When the power cord is first plugged in, the computer might appear to turn on for a few seconds and then turn off. This is a normal sequence to enable the computer to initialize.

1. Ensure that all components have been reassembled correctly and that no tools or loose screws are left inside your computer.
2. Replace the cover and secure it with two screws.

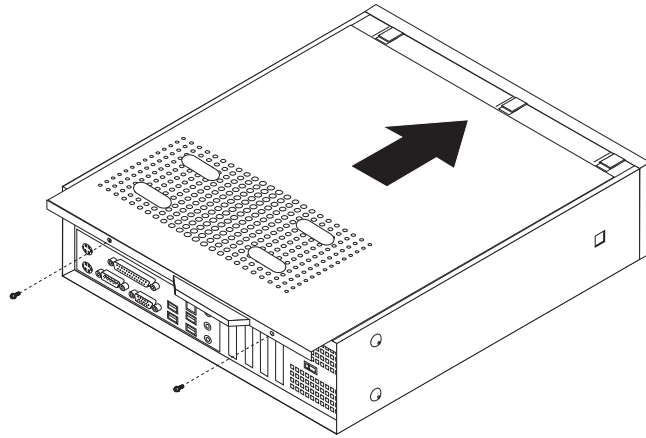


3. Reconnect the external cables and power cords to the computer. See “Rear connectors” on page 112.
4. If you have replaced the system board, you must update (flash) the BIOS. See “Flash update procedures” on page 184.
5. Some FRU replacements require the configuration to be updated. See Chapter 6, “Using the CMOS Setup Utility,” on page 51.

Chapter 10. FRU lists

Note: A CRU (Customer Replaceable Unit) is identified by a single asterisk (*) or two asterisks (**) in the CRU ID column. An N in the CRU ID Column means that the part is not a CRU. A single asterisk (*) means that the part is a Tier 1 CRU; two asterisks (**) mean that the part is a Tier 2 CRU.

Machine Type 8291

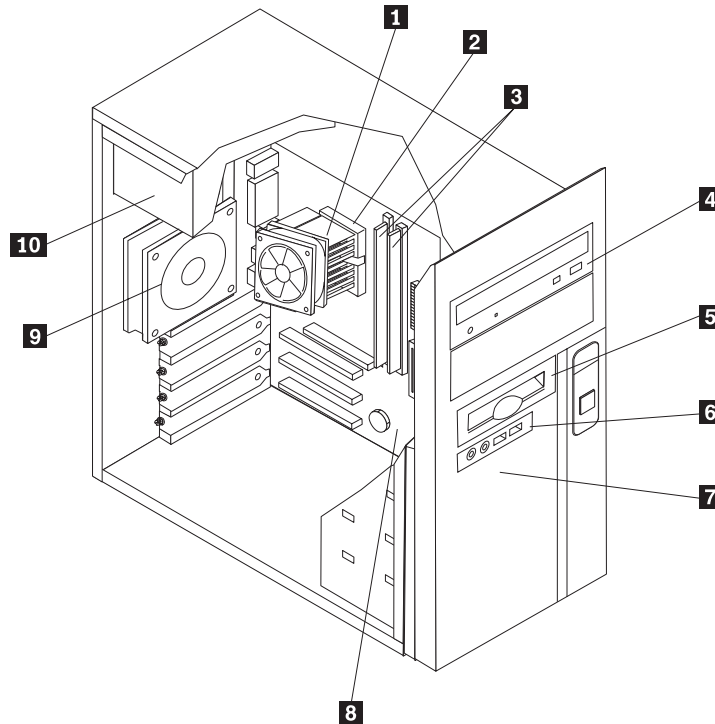

Item #	8291 FRUs	FRU#	CRU
1	Heat sink and fan assembly (models 21U 22M 22A 22Q 22T 22C 22B 22H 22V 22K A1Q A2G 11A 11T 11V 11K 21F 22H 22V D1U D1F D2Q D3G E1U E1F E2U E2F 41S 41D 41Y D1S D1D D1Y A1A A1T A1C 11Q 11C 24A 24Q 24T 24C D2A D2T D2C D4M D4A D4Q D4T D4C D4B D4H D4V D4K 71G)	41D2002	N
2	Microprocessor, Celeron D, 2.80 GHz, 533FSB, 256KB L2 (models A1Q A2G A1A A1T A1C)	41D1810	N
2	Microprocessor, Pentium 4, 2.66 GHz, 533FSB, 1MB L2 (models 12A)	41D1814	N
2	Microprocessor, Pentium 4, 2.93 GHz, 533FSB, 1MB L2 (models 11A 11T 11V 11K 11Q 11C)	41D1815	N
2	Microprocessor, Pentium 4, 3.06 GHz, 533FSB, 1MB L2 (models 21U 22M 22A 22Q 22T 22C 22B 22H 22V 22K 21F 24A 24Q 24T 24C)	41D1816	N
2	Microprocessor, Pentium 4, 3.0 GHz, 800FSB, 1MB L2 (models 41U 41S 41D 41Y)	41D1818	N
2	Microprocessor, Pentium 4, 3.0 GHz, 800FSB, 2MB L2 (models D1U D1F D2Q D3G D1S D1D D1Y D2A D2T D2C D4M D4A D4Q D4T D4C D4B D4H D4V D4K 71G)	41D2247	N
2	Microprocessor, Pentium 4, 3.2 GHz, 800FSB, 2MB L2 (models E1U E1F E2U E2F)	41D2248	N

Item #	8291 FRUs	FRU#	CRU
3	Memory module, 256MB, DDR2 SDRAM, NP, PC4200 (models 22M 22A 22Q 22T 22C 22B 22H 22V 22K A1Q 11A 11T 11V 11K D2Q A1A A1T A1C 12A 11Q 11C 24A 24Q 24T 24C D2A D2T D2C D4M D4A D4Q D4T D4C D4B D4H D4V D4K)	41D2029	**
3	Memory module, 512MB, DDR2 SDRAM, NP, PC4200 (models 21U A2G 21F 41U D1U D1F D3G E1U E1F E2U E2F 41S 41D 41Y D1S D1D D1Y 71G)	41D2030	**
4	CD-ROM Drive 48X - Black w/o jack & vol (models 21U 22M 22A 22Q 22T 22C 22B 22H 22V 22K A1Q A2G 11A 11T 11V 11K 21F 41U D2Q 41S 41D 41Y A1A A1T A1C 12A 11Q 11C 24A 24Q 24T 24C D2A D2T D2C D4M D4A D4Q D4T D4C D4B D4H D4V D4K)	40Y8807	N
4	CD-RW Drive (48X/32X/48X) (models D1U D1F D1S D1D D1Y)	40Y8937	N
4	CD-RW drive, 48X-32X-48X (models D1U D1F D1S D1D D1Y)	40Y8901	N
4	DVD - ROM - CDRW Combo 48X-32X-48X-16X (models D3G E1U E1F)	40Y8919	N
4	DVD - ROM - CDRW Combo 48X-32X-48X-16X (models D3G E1U E1F)	40Y8903	N
4	Multi-Burner Plus (Rambo VI) drive (models E2U E2F 71G)	40Y8909	N
5	Diskette drive, w/bezel (models D3G A1A A1Q A1T A1C 12A 22M 22A 22Q 22T 22C 22B 22H 22V 22K 24A 24Q 24T 24C D2A D2Q D2T D2C D4M D4A D4Q D4T D4C D4B D4H D4V D4K 71G)	40Y9105	N
6	Front panel card assembly (all models)	41A7136	N
7	Hard disk drive, 40GB, 7200rpm, serial ATA (models 21U 21F 41U 41S 41D 41Y)	41D2032	N
7	Hard disk drive, 80GB, 7200rpm, serial ATA (models 22M 22A 22Q 22T 22C 22B 22H 22V 22K A1Q A2G 11A 11T 11V 11K D1U D1F D2Q D3G E1U E1F D1S D1D D1Y A1A A1T A1C 12A 11Q 11C 24A 24Q 24T 24C D2A D2T D2C D4M D4A D4Q D4T D4C D4B D4H D4V D4K)	41D2033	N
7	Hard disk drive, 160GB, 7200rpm, serial ATA (models E2U E2F 71G)	41D2402	N
8	System board, 10-100 E-net (models 21U 22M 22A 22Q 22T 22C 22B 22H 22V 22K A1Q A2G 11A 11T 11V 11K 21F 41U D1U D1F D2Q D3G E1U E1F E2U E2F 41S 41D 41Y D1S D1D D1Y A1A A1T A1C 12A 11Q 11C 24A 24Q 24T 24C D2A D2T D2C D4M D4A D4Q D4T D4C D4B D4H D4V D4K 71G)	41D1793	N
9	System Fan, rear w/grill (all models)	41A7195	N
10	Power supply, non-PFC (models A2G 11A 11T 11K 21U 21F 22M 22A 22T 22K 41U D1U D1F D3G E1U E1F E2U E2F A1A A1T 12A 24A 24T D2A D2T D4M D4A D4T D4K 71G)	41N3097	N
10	Power supply, PFC (models A1Q 11V 22Q 22C 22B 22H 22V D2Q 41S 41D 41Y D1S D1D D1Y A1C 11Q 11C 24Q 24C D2C D4Q D4C D4B D4H D4V)	41N3100	N

The FRUs listed in the following table are not illustrated.

8291 FRUs	FRU#	CRU
Cable, diskette drive (RoHs) (all models)	41A7130	**
Cover, main access (all models)	41A7131	**
Cover, right side (all models)	41A7132	**
Chassis assembly (all models)	41A7133	N
Bezel, front (all models)	41A7134	**
Power switch/LED assembly (all models)	41A7135	N
Shield, system board (all models)	41A7137	N
Miscellaneous hardware kit (all models)	41A7138	N

8291 FRUs	FRU#	CRU
Retention bracket, heat sink (all models)	41A7139	N
Cable, 2-drop IDE (all models)	41A7140	N
Cables, interposers (all models)	41A7143	N
Miscellaneous, bezel kit (all models)	41A7144	N
Battery (all models)	33F8354	N

8291 Keyboards (Preferred Pro fullsize, Black)	FRU#	CRU
US English (models 21U 22M 22A 22Q 22C 22H A1Q A2G 11A 41U D1U D2Q D3G E1U E2U A1A A1C 12A 11Q 11C 24A 24Q 24C D2A D2C D4M D4A D4Q D4C D4H 71G)	89P8300	*
Arabic (models A2G D3G 71G)	89P8301	*
Belgian/French (models A2G D3G 71G)	89P8302	*
Belgian/UK (models A2G D3G 71G)	89P8303	*
Bulgarian (models A2G D3G 71G)	89P8305	*
Chinese/US (models 22B 22V 11V D4B D4V)	89P8306	*
Czech (models A2G D3G 71G)	89P8307	*
Danish (models A2G D3G 71G)	89P8308	*
Dutch (models A2G D3G 71G)	89P8309	*
French (models A2G D3G 71G)	89P8310	*
French Canadian 445 (models 21F D1F E1F E2F)	89P8311	*
French Canadian 58 (models 21F D1F E1F E2F)	89P8312	*
German (models A2G D3G 71G)	89P8313	*
Greek (models A2G D3G 71G)	89P8314	*
Hebrew (models A2G D3G 71G)	89P8315	*
Hungarian (models A2G D3G 71G)	89P8316	*
Iceland (models A2G D3G 71G)	89P8317	*
Italian 141 (models A2G D3G 71G)	89P8318	*
Italian 142 (models A2G D3G 71G)	89P8319	*
Korean (models 22K 11K D4K)	89P8321	*
LA Spanish (models 41S 41D 41Y D1S D1D D1Y)	89P8322	*
Norwegian (models A2G D3G 71G)	89P8323	*
Polish (models A2G D3G 71G)	89P8324	*
Portuguese (models A2G D3G 71G)	89P8325	*
Romanian (models A2G D3G 71G)	89P8326	*
Russian/Cy (models A2G D3G 71G)	89P8328	*
Serbian/Cyrillic (models A2G D3G 71G)	89P8329	*
Slovak (models A2G D3G 71G)	89P8330	*
Spanish (models A2G D3G 71G)	89P8331	*
Swedish/Finn (models A2G D3G 71G)	89P8332	*
Swiss F/G (models A2G D3G 71G)	89P8333	*
Thailand (models 22T 11T A1T 24T D2T D4T)	89P8334	*
Turkish 440 (models A2G D3G 71G)	89P8335	*

8291 Keyboards (Preferred Pro fullsize, Black)	FRU#	CRU
Turkish 179 (models A2G D3G 71G)	89P8336	*
UK English (models A2G D3G 71G)	89P8337	*
US Euro (models A2G D3G 71G)	89P8338	*
Yugoslav/Latin (models A2G D3G 71G)	89P8339	*


8291 mice	FRU#	CRU
Mouse, Scrollpoint Optical, USB (models 21U 22M 22A 22Q 22T 22C 22B 22H 22V 22K A1Q A2G 11A 11T 11V 11K 21F 41U D1U D1F D2Q D3G E1U E1F E2U E2F 41S 41D 41Y D1S D1D D1Y A1A A1T A1C 12A 11Q 11C 24A 24Q 24T 24C D2A D2T D2C D4M D4A D4Q D4T D4C D4B D4H D4V D4K 71G)	24P0499	*

8291 Adapters and miscellaneous FRUs	FRU#	CRU
RJ11 connector adapter (Spain, Ireland) (All "G" models)	60H6043	*
RJ11 connector adapter (Austria) (All "G" models)	60H6045	*
RJ11 connector adapter (Belgium) (All "G" models)	60H6046	*
RJ11 connector adapter (Denmark) (All "G" models)	60H6047	*
RJ11 connector adapter (Norway, Finland) (All "G" models)	60H6048	*
RJ11 connector adapter (France) (All "G" models)	60H6049	*
RJ11 connector adapter (Germany) (All "G" models)	60H6050	*
RJ11 connector adapter (UK, NZ, HK) (All "G", "M", "B", "H" models)	60H6051	*
RJ11 connector adapter (Italy) (All "G" models)	60H6052	*
RJ11 connector adapter (Netherlands) (All "G" models)	60H6053	*
RJ11 connector adapter (Sweden) (All "G" models)	60H6054	*
RJ11 connector adapter (Switzerland) (All "G" models)	60H6055	*

8291 Power Cords	FRU#	CRU
Power Cord (models 21U 22A 22T 22V A2G 11A 11T 11V 21F 41U D1U D1F D3G E1U E1F E2U E2F 41S 41D D1S D1D A1A A1T 12A 24A 24T D2A D2T D4A D4T D4V 71G)	6952301	*
Power Cord (ANZ) (models 22M D4M)	13F9939	*
Power Cord (EMEA, ANZ, ASEAN Eng, Korea) (models 22K A2G 11K D4K D3G 71G)	13F9978	*
Power Cord (EMEA, ANZ, ASEAN Eng, HK Eng) (models 22H A2G D3G D4H 71G)	14F0032	*
Power Cord (EMEA) (models A2G D3G 71G)	13F9996	*
Power Cord (EMEA, LA) (models A2G D3G 41S 41D 41Y D1S D1D D1Y 71G)	14F0068	*
Power Cord (APU) (models 41Y D1Y)	36L8879	*
Power Cord (China, HK) (models 22C 22B 22H A1C 11C 24C D2C D4C D4B D4H)	02K0545	*
Power Cord (EMEA) (models A2G D3G 71G)	14F0086	*
Power Cord (EMEA, ANZ, ASEAN Eng) (models A2G D3G 71G)	14F0014	*
Power Cord (EMEA) (models A2G D3G 71G)	14F0050	*
Power Cord (India) (models 22Q A1Q D2Q 11Q 24Q D4Q)	49P2078	*

8291 Windows XP Pro Recovery CDs	FRU#	CRU
US/UK/AP/TH (models A2G 11A 11T 21U 22M 22A 22Q 22T 22H 41U D1U D3G E1U E2U 11Q D4M D4A D4Q D4T D4H 71G)	41D3822	*
FR/CF (models A2G 21F D1F D3G E1F E2F 71G)	41D3824	*
GR (models A2G D3G 71G)	41D3825	*
IT (models A2G D3G 71G)	41D3827	*
BR (models A2G D3G 71G)	41D3828	*
SP/LA (models A2G D3G 41S 41D 41Y D1S D1D D1Y 71G)	41D3826	*
DK (models A2G D3G 71G)	41D3830	*
NL (models A2G D3G 71G)	41D3833	*
AE (models A2G D3G 71G)	41D3837	*
SV (models A2G D3G 71G)	41D3829	*
HE (models A2G D3G 71G)	41D3834	*
FI (models A2G D3G 71G)	41D3831	*
NO (models A2G D3G 71G)	41D3832	*
PL (models A2G D3G 71G)	41D3835	*
PO (models A2G D3G 71G)	41D3841	*
RU (models A2G D3G 71G)	41D3838	*
RE (models A2G D3G 71G)	41D3823	*
HU (models A2G D3G 71G)	41D3840	*
CZ (models A2G D3G 71G)	41D3836	*
TR (models A2G D3G 71G)	41D3839	*
GK (models A2G D3G 71G)	41D3842	*
SL (models A2G D3G 71G)	41D3843	*
Simplified Chinese (models 22C 11C D4C)	39T9023	*
Taiwan-TC (models 11V 22V D4V)	39T9040	*
Hong Kong-TC (models 22B D4B)	39T9057	*
Korean (models 11K 22K D4K)	39T9074	*
Multilingual 1 (models A2G D3G 71G)	41D4080	*
Multilingual 2 (models A2G D3G 71G)	41D4086	*

Machine Type 8292

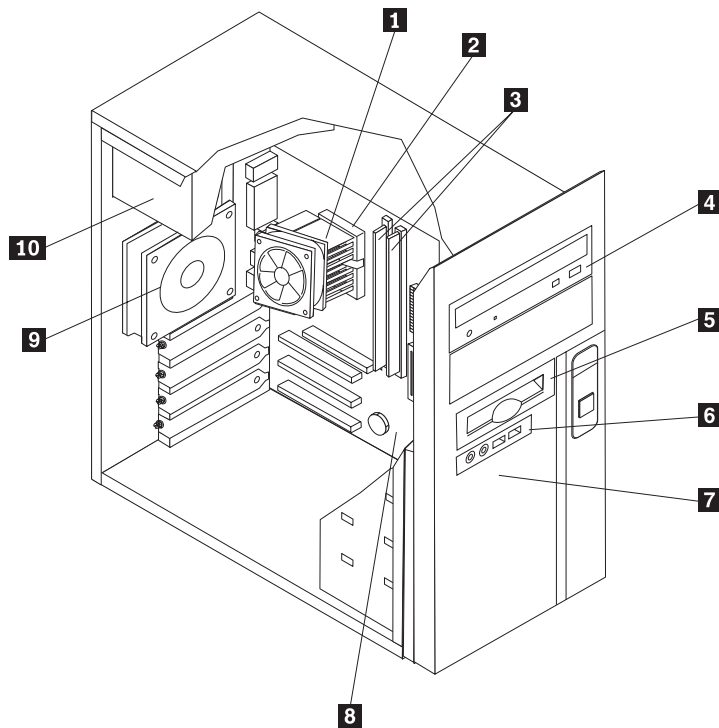

Item #	8292 FRUs	FRU#	CRU
1	Heat sink and fan assembly (models 11G 12G)	41D2002	N
2	Microprocessor, Pentium 4, 2.93 GHz, 533FSB, 1MB L2 (models 11G 12G)	41D1815	N
2	Microprocessor, Pentium 4, 3.0 GHz, 800FSB, 2MB L2 (models 71G)	41D2247	N
3	Memory module, 256MB, DDR2 SDRAM, NP, PC4200 (models 11G 12G)	41D2029	**
3	Memory module, 512MB, DDR2 SDRAM, NP, PC4200 (models 71G)	41D2030	**
4	DVD-ROM drive, 16X-48X (models 11G)	41D8933	N
4	DVD-ROM drive, 16X-48X (models 11G)	41D8935	N
4	DVD - ROM - CDRW Combo 48X-32X-48X-16X (models 12G)	41D8919	N
4	Multi-Burner Plus (Rambo VI) (models 71G)	41D8909	N
5	Diskette drive, W/Bezel (models 11G 12G 71G)	40Y9105	N
6	Front panel card assembly (all models)	41A7136	N
7	Hard disk drive, 80GB, 7200rpm, serial ATA (models 11G12G)	41D2033	N
7	Hard disk drive, 160GB, 7200rpm, serial ATA (models 71G)	41D2402	N
8	System board, 10-100 E-net (models 11G 12G 71G)	41D1793	N
9	System fan, rear w/grill (all models)	41A7195	N
10	Power supply, non-PFC (models 11G 12G 71G)	41N3097	N

The FRUs listed in the following table are not illustrated.

8292 FRUs	FRU#	CRU
Cable, diskette drive (RoHs) (all models)	41A7130	**

8292 FRUs	FRU#	CRU
Cover, main access (all models)	41A7131	**
Cover, right side (all models)	41A7132	**
Chassis assembly (all models)	41A7133	N
Bezel, front (all models)	41A7134	**
Power switch/LED assembly (all models)	41A7135	N
Shield, system board (all models)	41A7137	N
Miscellaneous hardware kit (all models)	41A7138	N
Retention bracket, heat sink (all models)	41A7139	N
Cable, 2-drop IDE (all models)	41A7140	N
Cables, interposers (all models)	41A7143	N
Miscellaneous, bezel kit (all models)	41A7144	N
Battery (all models)	33F8354	N

8292 Keyboards (Preferred Pro fullsize, Black)	FRU#	CRU
US English (models 11G 12G 71G)	89P8300	*
Arabic (models 11G 12G 71G)	89P8301	*
Belgian/French (models 11G 12G 71G)	89P8302	*
Belgian/UK (models 11G 12G 71G)	89P8303	*
Bulgarian (models 11G 12G 71G)	89P8305	*
Czech (models 11G 12G 71G)	89P8307	*
Danish (models 11G 12G 71G)	89P8308	*
Dutch (models 11G 12G 71G)	89P8309	*
French (models 11G 12G 71G)	89P8310	*
German (models 11G 12G 71G)	89P8313	*
Greek (models 11G 12G 71G)	89P8314	*
Hebrew (models 11G 12G 71G)	89P8315	*
Hungarian (models 11G 12G 71G)	89P8316	*
Iceland (models 11G 12G 71G)	89P8317	*
Italian 141 (models 11G 12G 71G)	89P8318	*
Italian 142 (models 11G 12G 71G)	89P8319	*
Norwegian (models 11G 12G 71G)	89P8323	*
Polish (models 11G 12G 71G)	89P8324	*
Portuguese (models 11G 12G 71G)	89P8325	*
Romanian (models 11G 12G 71G)	89P8326	*
Russian/Cy (models 11G 12G 71G)	89P8328	*
Serbian/Cyrillic (models 11G 12G 71G)	89P8329	*
Slovak (models 11G 12G 71G)	89P8330	*
Spanish (models 11G 12G 71G)	89P8331	*
Swedish/Finn (models 11G 12G 71G)	89P8332	*
Swiss F/G (models 11G 12G 71G)	89P8333	*
Turkish 440 (models 11G 12G 71G)	89P8335	*

8292 Keyboards (Preferred Pro fullsize, Black)	FRU#	CRU
Turkish 179 (models 11G 12G 71G)	89P8336	*
UK English (models 11G 12G 71G)	89P8337	*
US Euro (models 11G 12G 71G)	89P8338	*
Yugoslav/Latin (models 11G 12G 71G)	89P8339	*

8292 mice	FRU#	CRU
Mouse, Scrollpoint Optical, USB (models 11G 12G 71G)	24P0499	*

8292 Adapters and miscellaneous FRUs	FRU#	CRU
RJ11 connector adapter (Spain, Ireland) (All "G" models)	60H6043	*
RJ11 connector adapter (Austria) (All "G" models)	60H6045	*
RJ11 connector adapter (Belgium) (All "G" models)	60H6046	*
RJ11 connector adapter (Denmark) (All "G" models)	60H6047	*
RJ11 connector adapter (Norway, Finland) (All "G" models)	60H6048	*
RJ11 connector adapter (France) (All "G" models)	60H6049	*
RJ11 connector adapter (Germany) (All "G" models)	60H6050	*
RJ11 connector adapter (UK, NZ, HK) (All "G", "M", "B", "H" models)	60H6051	*
RJ11 connector adapter (Italy) (All "G" models)	60H6052	*
RJ11 connector adapter (Netherlands) (All "G" models)	60H6053	*
RJ11 connector adapter (Sweden) (All "G" models)	60H6054	*
RJ11 connector adapter (Switzerland) (All "G" models)	60H6055	*

8292 Power Cords	FRU#	CRU
Power Cord (models 11G 12G 71G)	6952301	*
Power Cord (EMEA, ANZ, ASEAN Eng, Korea) (models 11G 12G 71G)	13F9978	*
Power Cord (EMEA, ANZ, ASEAN Eng, HK Eng) (models 11G 12G 71G)	14F0032	*
Power Cord (EMEA) (models 11G 12G 71G)	13F9996	*
Power Cord (EMEA, LA) (models 11G 12G 71G)	14F0068	*
Power Cord (EMEA) (models 11G 12G 71G)	14F0086	*
Power Cord (EMEA, ANZ, ASEAN Eng) (models 11G 12G 71G)	14F0014	*
Power Cord (EMEA) (models 11G 12G 71G)	14F0050	*


8292 Windows XP Home Recovery CDs	FRU#	CRU
US/UK/AP/TH (models)		*
FR/CF (models)		*
GR (models)		*
IT (models)		*
BR (models)		*
SP/LA (models)		*
DK (models)		*
NL (models)		*

8292 Windows XP Home Recovery CDs	FRU#	CRU
AE (models)		*
SV (models)		*
HE (models)		*
FI (models)		*
NO (models)		*
PL (models)		*
PO (models)		*
RU (models)		*
RE (models)		*
HU (models)		*
CZ (models)		*
TR (models)		*
GK (models)		*
Japanese (models)		*
Simplified Chinese (models)		*
Taiwan-TC (models)		*
Hong Kong-TC (models)		*
Korean (models)		*
Multilingual 1 (models)		*
Multilingual 2 (models)		*

8292 Windows XP Pro Recovery CDs	FRU#	CRU
US/UK/AP/TH (models 12G 71G)	41D3822	*
FR/CF (models 12G 71G)	41D3824	*
GR (models 12G 71G)	41D3825	*
IT (models 12G 71G)	41D3827	*
SP/LA (models 12G 71G)	41D3826	*
DK (models 12G 71G)	41D3830	*
NL (models 12G 71G)	41D3833	*
AE (models 12G 71G)	41D3837	*
SV (models 12G 71G)	41D3829	*
HE (models 12G 71G)	41D3834	*
FI (models 12G 71G)	41D3831	*
NO (models 12G 71G)	41D3832	*
PL (models 12G 71G)	41D3835	*
PO (models 12G 71G)	41D3841	*
RU (models 12G 71G)	41D3838	*
RE (models 12G 71G)	41D3823	*
HU (models 12G 71G)	41D3840	*
CZ (models 12G 71G)	41D3836	*
TR (models 12G 71G)	41D3839	*

8292 Windows XP Pro Recovery CDs	FRU#	CRU
GK (models 12G 71G)	41D3842	*
SL (models 12G 71G)	41D3843	*
Multilingual 1 (models 12G 71G)	41D4080	*
Multilingual 2 (models 12G 71G)	41D4086	*

Machine Type 8293

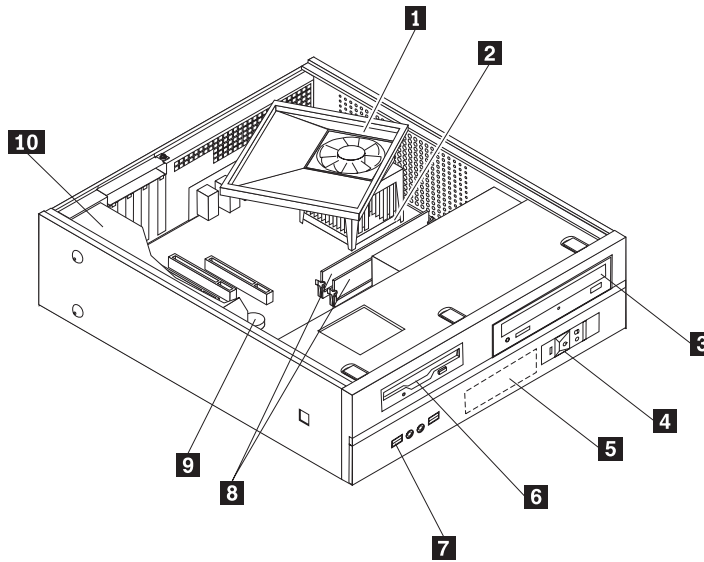

Item #	8293 FRUs	FRU#	CRU
1	Heat sink and fan assembly (models D1G)	41D2001	N
2	Microprocessor, 3.0 Ghz, Pentium 4, 800FSB, 2MB L2 (models D1G)	41D2244	N
3	DVD-ROM 16X-48X (models D1G)	40Y8933	N
3	DVD-ROM 16X-48X (models D1G)	40Y8935	N
4	Power switch/LED assembly (all models)	41A7152	N
5	Hard disk drive, 80GB, 7200rpm Serial ATA (models D1G)	41D2033	N
6	Diskette drive, wo/bezel (models D1G)	41D3724	N
7	Front panel card (all models)	41A7153	N
8	Memory module, 1024MB (models D1G)	TBD	**
9	System board, 10-100 Enet (models D1G)	41D1793	N
10	Power supply (models D1G)	41N3089	N

The FRUs listed in the following table are not illustrated.

8293 FRUs	FRU#	CRU
Shield, EMC, 5.25in. drive bay (all models)	41A7162	N
Cable, Serial-ATA, (18in. RoHs) (all models)	41A7145	N
Shield, EMC, diskette drive bay (all models)	41A7146	N
Cable, diskette drive (all models)	41A7147	N

8293 FRUs	FRU#	CRU
Cover (all models)	41A7148	**
Chassis assembly (all models)	41A7149	N
Bezel assembly, front (all models)	41A750	N
Fan duct assembly (all models)	41A7151	N
Shield, EMC, system board (all models)	41A7154	N
Miscellaneous hardware kit (all models)	41A7155	N
Retention bracket kit, system board (all models)	41A7156	N
Cable, 1-drop IDE (all models)	41A7158	N
Cable, hard disk drive, 1-drop parallel-ATA (all models)	41A7159	N
Miscellaneous bezel kit (all models)	41A7160	N
Interposer cables (all models)	41A7161	N
Battery (all models)	33F8354	N

8293 Keyboards (Standard PS/2 Black)	FRU#	CRU
US English (models D1G)	89P8300	*
Arabic (models D1G)	89P8301	*
Belgian/French (models D1G)	89P8302	*
Belgian/UK (models D1G)	89P8303	*
Bulgarian (models D1G)	89P8305	*
Chinese/US (models)	89P8306	*
Czech (models D1G)	89P8307	*
Danish (models D1G)	89P8308	*
Dutch (models D1G)	89P8309	*
French (models D1G)	89P8310	*
German (models D1G)	89P8313	*
Greek (models D1G)	89P8314	*
Hebrew (models D1G)	89P8315	*
Hungarian (models D1G)	89P8316	*
Iceland (models D1G)	89P8317	*
Italian 141 (models D1G)	89P8318	*
Italian 142 (models D1G)	89P8319	*
Norwegian (models D1G)	89P8323	*
Polish (models D1G)	89P8324	*
Portuguese (models D1G)	89P8325	*
Romanian (models D1G)	89P8326	*
Russian/Cy (models D1G)	89P8327	*
Russian/Cy (models D1G)	89P8328	*
Serbian/Cyrillic (models D1G)	89P8329	*
Slovak (models D1G)	89P8330	*
Spanish (models D1G)	89P8331	*
Swedish/Finn (models D1G)	89P8332	*

8293 Keyboards (Standard PS/2 Black)	FRU#	CRU
Swiss F/G (models D1G)	89P8333	*
Turkish 440 (models D1G)	89P8335	*
Turkish 179 (models D1G)	89P8336	*
UK English (models D1G)	89P8337	*
US Euro (models D1G)	89P8338	*
Yugoslav/Latin (models D1G)	89P8339	*

8293 mice	FRU#	CRU
Mouse, Scrollpoint Optical, USB (models D1G)	24P0499	*


8293 Adapters and miscellaneous FRUs	FRU#	CRU
RJ11 connector adapter (Spain, Ireland) (All "G" models)	60H6043	*
RJ11 connector adapter (Austria) (All "G" models)	60H6045	*
RJ11 connector adapter (Belgium) (All "G" models)	60H6046	*
RJ11 connector adapter (Denmark) (All "G" models)	60H6047	*
RJ11 connector adapter (Norway, Finland) (All "G" models)	60H6048	*
RJ11 connector adapter (France) (All "G" models)	60H6049	*
RJ11 connector adapter (Germany) (All "G" models)	60H6050	*
RJ11 connector adapter (UK, NZ, HK) (All "G", "M", "B", "H" models)	60H6051	*
RJ11 connector adapter (Italy) (All "G" models)	60H6052	*
RJ11 connector adapter (Netherlands) (All "G" models)	60H6053	*
RJ11 connector adapter (Sweden) (All "G" models)	60H6054	*
RJ11 connector adapter (Switzerland) (All "G" models)	60H6055	*

8293 Power Cords	FRU#	CRU
Power Cord (models D1G)	6952301	*
Power Cord (EMEA, ANZ, ASEAN Eng, Korea) (models D1G)	13F9978	*
Power Cord (EMEA, ANZ, ASEAN Eng, HK Eng) (models D1G)	14F0032	*
Power Cord (EMEA) (models D1G)	13F9996	*
Power Cord (EMEA, LA) (models D1G)	14F0068	*
Power Cord (EMEA) (models D1G)	14F0086	*
Power Cord (EMEA, ANZ, ASEAN Eng) (models D1G)	14F0014	*
Power Cord (EMEA) (models D1G)	14F0050	*

8293 Windows XP Home Recovery CDs	FRU#	CRU
US/UK/AP/TH (models D1G)	41D3954	*
FR/CF (models D1G)	41D3956	*
GR (models D1G)	41D3957	*
IT (models D1G)	41D3959	*
SP/LA (models D1G)	41D3958	*
DK (models D1G)	41D3962	*

8293 Windows XP Home Recovery CDs	FRU#	CRU
NL (models D1G)	41D3965	*
AE (models D1G)	41D3969	*
SV (models D1G)	41D3961	*
HE (models D1G)	41D3966	*
FI (models D1G)	41D3963	*
NO (models D1G)	41D3964	*
PL (models D1G)	41D3967	*
PO (models D1G)	41D3973	*
RU (models D1G)	41D3970	*
RE (models D1G)	41D3955	*
HU (models D1G)	41D3972	*
CZ (models D1G)	41D3968	*
TR (models D1G)	41D3971	*
GK (models D1G)	41D3974	*

Machine Type 8294

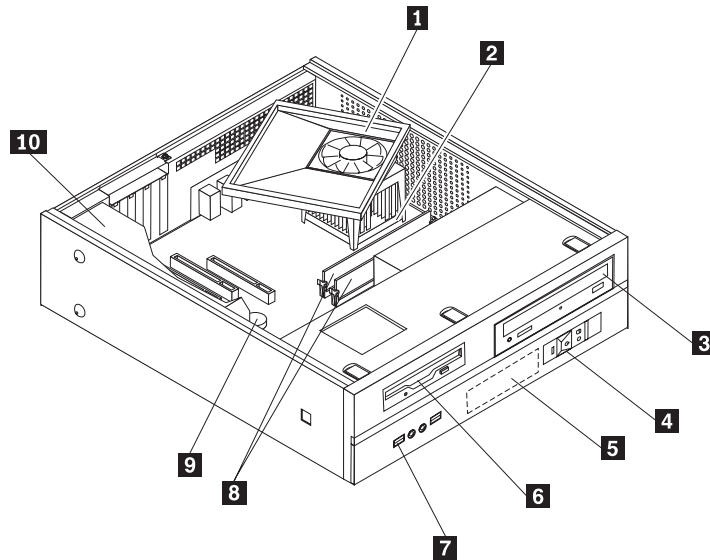

Item #	8294 FRUs	FRU#	CRU
1	Heat sink and fan assembly (models 21U 22M 22J A1B A1H A1V A1K A1J A2J A5J A6G 11M 11B 11H 11V 11K 21F 23M 23A 23T 24J 25G D1U D1F E1U E1F 41L 41D 41Y A1B A1H A1V A1K A2M A2A A2Q A2T A2C A2B A2H A2V A2K A7J A5M A5A A5Q A5T A5C A5B A5H A5V A5K 23V 24M 24A 24Q 24T 24B 24H 24V 24K 26J D4M D4A D4Q D4T D4C D4B D4H D4V D4K D4J D5M D5A D5Q D5T D5C D5B D5H D5V D5K D5J A1C 24C)	41D2001	N
2	Microprocessor, 2.66 Ghz, Celeron D, 533FSB, 256KB L2 (models A1B A1C A1H A1V A1K A1J A2J A1B A1H A1V A1K A2M A2A A2Q A2T A2C A2B A2H A2V A2K A7J)	41D1796	N
2	Microprocessor, 2.80 Ghz, Celeron D, 533FSB, 256KB L2 (models A5J A6G A5M A5A A5Q A5T A5C A5B A5H A5V A5K)	41D1797	N

Item #	8294 FRUs	FRU#	CRU
2	Microprocessor, 2.93 Ghz, Pentium 4, 533FSB, 1MB L2 (models 11M 11A 11T 11B 11H 11V 11K)	41D1802	N
2	Microprocessor, 3.06 Ghz, Pentium 4, 533FSB, 1MB L2 (models 21U 22M 22J 21F 23M 23A 23T 24C 24J 25G 23V 24M 24A 24Q 24T 24B 24H 24V 24K 26J)	41D1803	N
2	Microprocessor, 3.0 Ghz, Pentium 4, 800FSB, 1MB L2 (models 41S 41L 41D 41Y)	41D1805	N
2	Microprocessor, 3.0 Ghz, Pentium 4, 800FSB, 2MB L2 (models D1U D1F D4M D4A D4Q D4T D4C D4B D4H D4V D4K D4J D5M D5A D5Q D5T D5C D5B D5H D5V D5K D5J)	41D2244	N
2	Microprocessor, 3.2 Ghz, Pentium 4, 800FSB, 2MB L2 (models E1U E1F)	41D2245	N
3	CD-ROM 48X (models 21U 22M 22J A2J 11M 11B 11H 11V 11K 21F 24J 41S 41L 41D 41Y A1B A1H A1V A1K A1J A2M A2A A2Q A2T A2C A2B A2H A2V A2K A7J 24M 24A 24Q 24T 24B 24H 24V 24K D5M D5A D5Q D5T D5C D5B D5H D5V D5K D5J A1C 24C)	40Y8807	N
3	CD-RW 48X/32X/48X (models D1U D1F A5M A5A A5Q A5T A5C A5B A5H A5V A5K A5J)	40Y8937	N
3	CD-RW 48X/32X/48X (models D1U D1F A5M A5A A5Q A5T A5C A5B A5H A5V A5K A5J)	40Y8901	N
3	DVD-ROM 16X-48X (models A6G 23M 23A 23T 23V)	40Y8933	N
3	DVD-ROM 16X-48X (models A6G 23M 23A 23T 23V)	40Y8935	N
3	DVD - ROM - CDRW Combo 48X-32X-48X-16X (models 25G E1U E1F 26J D4M D4A D4Q D4T D4C D4B D4H D4V D4K D4J)	41D8919	N
3	DVD - ROM - CDRW Combo 48X-32X-48X-16X (models 25G E1U E1F 26J D4M D4A D4Q D4T D4C D4B D4H D4V D4K D4J)	41D8903	N
4	Power switch/LED assembly (all models)	41A7152	N
5	Hard disk drive, 40GB, 7200rpm Serial ATA (models 21U 21F A1B A1H A1V A1K A2M A2A A2Q A2T A2C A2B A2H A2V A2K A7J A1J A2J A1C)	41D2032	N
5	Hard disk drive, 80GB, 7200rpm Serial ATA (models 22M 22J A1B A1H A1V A1K A5J A6G 11M 11B 11H 11V 11K 23M 23A 23T 24J 25G 41S D1U D1F E1U E1F 41L 41D 41Y A5M A5A A5Q A5T A5C A5B A5H A5V A5K 23V 24M 24A 24Q 24T 24B 24H 24V 24K 26J D4M D4A D4Q D4T D4C D4B D4H D4V D4K D4J D5M D5A D5Q D5T D5C D5B D5H D5V D5K D5J 24C)	41D2033	N
6	Diskette drive, wo/bezel (models A6G 22M 22J 23M 23A 23T 25G 41L 41D 41Y A1B A1H A1V A1K A1J A7J 23V 24M 24A 24Q 24T 24B 24H 24V 24K 24J 26J D4M D4A D4Q D4T D4C D4B D4H D4V D4K D4J D5M D5A D5Q D5T D5C D5B D5H D5V D5K D5J A1C 24C)	41D3724	N
7	Front panel card (models)	41A7153	N
8	Memory module, 256MB (models 22M 22J A2J 11M 11B 11H 11V 11K 24J 41S 41L 41D 41Y A2M A2A A2Q A2T A2C A2B A2H A2V A2K 24M 24A 24Q 24T 24B 24H 24V 24K D5M D5A D5Q D5T D5C D5B D5H D5V D5K D5J 24C)	41D2029	**
8	Memory module, 512MB (models 21U A1B A1H A1V A1K A1J A5J A6G 21F 23M 23A 23T 25G D1U D1F E1U E1F A1B A1H A1V A1K A7J A5M A5A A5Q A5T A5C A5B A5H A5V A5K 23V 26J D4M D4A D4Q D4T D4C D4B D4H D4V D4K D4J A1C)	41D2030	**
9	System board, 10-100 Enet (models 21U 22M 22J A1B A1H A1V A1K A1J A2J A5J A6G 11M 11B 11H 11V 11K 21F 23M 23A 23T 24J 25G 41S D1U D1F E1U E1F 41L 41D 41Y A1B A1H A1V A1K A2M A2A A2Q A2T A2C A2B A2H A2V A2K A7J A5M A5A A5Q A5T A5C A5B A5H A5V A5K 23V 24M 24A 24Q 24T 24B 24H 24V 24K 26J D4M D4A D4Q D4T D4C D4B D4H D4V D4K D4J D5M D5A D5Q D5T D5C D5B D5H D5V D5K D5J A1C 24C)	41D1793	N
10	Power supply (all models)	41N3089	N

The FRUs listed in the following table are not illustrated.

8294 FRUs	FRU#	CRU
Shield, EMC, 5.25in. drive bay (all models)	41A7162	N
Cable, Serial-ATA, (18in. RoHs) (all models)	41A7145	N
Shield, EMC, diskette drive bay (all models)	41A7146	N
Cable, diskette drive (all models)	41A7147	N
Cover (all models)	41A7148	**
Chassis assembly (all models)	41A7149	N
Bezel assembly, front (all models)	41A750	N
Fan duct assembly (all models)	41A7151	N
Shield, EMC, system board (all models)	41A7154	N
Miscellaneous hardware kit (all models)	41A7155	NN
Retention bracket kit, system board (all models)	41A7156	N
Cable, 1-drop IDE (all models)	41A7158	N
Cable, hard disk drive, 1-drop parallel-ATA (all models)	41A7159	N
Miscellaneous bezel kit (all models)	41A7160	N
Interposer cables (all models)	41A7161	N
Battery (all models)	33F8354	N

8294 Keyboards (Standard PS/2 Black)	FRU#	CRU
US English (models 21U 22M A1H A6G 11M 11H 23M 23A 25G D1U E1U 41L A1H A2M A2A A2Q A2C A2H A5M A5A A5Q A5C A5H 24M 24A 24Q 24H D4M D4A D4Q D4C D4H D5M D5A D5Q D5C D5H A1C 24C)	89P8300	*
Arabic (models A6G 25G)	89P8301	*
Belgian/French (models A6G 25G)	89P8302	*
Belgian/UK (models A6G 25G)	89P8303	*
Bulgarian (models A6G 25G)	89P8305	*
Chinese/US (models A1B A1V 11B 11V A1B A1V A2B A2V A5B A5V 23V 24B 24V D4B D4V D5B D5V)	89P8306	*
Czech (models A6G 25G)	89P8307	*
Danish (models A6G 25G)	89P8308	*
Dutch (models A6G 25G)	89P8309	*
French (models A6G 25G)	89P8310	*
French Canadian 445 (models 21F D1F E1F)	89P8311	*
French Canadian 58 (models 21F D1F E1F)	89P8312	*
German (models A6G 25G)	89P8313	*
Greek (models A6G 25G)	89P8314	*
Hebrew (models A6G 25G)	89P8315	*
Hungarian (models A6G 25G)	89P8316	*
Iceland (models A6G 25G)	89P8317	*
Italian 141 (models A6G 25G)	89P8318	*

8294 Keyboards (Standard PS/2 Black)	FRU#	CRU
Italian 142 (models A6G 25G)	89P8319	*
Japanese (models 22J A1J A2J A5J 24J A7J 26J D4J D5J)	89P8320	*
Korean (models A1K 11K A1K A2K A5K 24K D4K D5K)	89P8321	*
LA Spanish (models 41S 41D 41Y)	89P8322	*
Norwegian (models A6G 25G)	89P8323	*
Polish (models A6G 25G)	89P8324	*
Portuguese (models A6G 25G)	89P8325	*
Romanian (models A6G 25G)	89P8326	*
Russian/Cy (models A6G 25G)	89P8327	*
Russian/Cy (models A6G 25G)	89P8328	*
Serbian/Cyrillic (models A6G 25G)	89P8329	*
Slovak (models A6G 25G)	89P8330	*
Spanish (models A6G 25G)	89P8331	*
Swedish/Finn (models A6G 25G)	89P8332	*
Swiss F/G (models A6G 25G)	89P8333	*
Thailand (models 23T A2T A5T 24T D4T D5T)	89P8334	*
Turkish 440 (models A6G 25G)	89P8335	*
Turkish 179 (models A6G 25G)	89P8336	*
UK English (models A6G 25G)	89P8337	*
US Euro (models A6G 25G)	89P8338	*
Yugoslav/Latin (models A6G 25G)	89P8339	*

8294 mice	FRU#	CRU
Mouse, Scrollpoint Optical, USB (models 21U 22M 22J A1B A1H A1V A1K A1J A2J A5J A6G 11M 11B 11H 11V 11K 21F 23M 23A 23T 24J 25G 41S D1U D1F E1U E1F 41L 41D 41Y A1B A1H A1V A1K A2M A2A A2Q A2T A2C A2B A2H A2V A2K A7J A5M A5A A5Q A5T A5C A5B A5H A5V A5K 23V 24M 24A 24Q 24T 24B 24H 24V 24K 26J D4M D4A D4Q D4T D4C D4B D4H D4V D4K D4J D5M D5A D5Q D5T D5C D5B D5H D5V D5K D5J A1C 24C)	24P0499	*


8294 Adapters and miscellaneous FRUs	FRU#	CRU
RJ11 connector adapter (Spain, Ireland) (All "G" models)	60H6043	*
RJ11 connector adapter (Austria) (All "G" models)	60H6045	*
RJ11 connector adapter (Belgium) (All "G" models)	60H6046	*
RJ11 connector adapter (Denmark) (All "G" models)	60H6047	*
RJ11 connector adapter (Norway, Finland) (All "G" models)	60H6048	*
RJ11 connector adapter (France) (All "G" models)	60H6049	*
RJ11 connector adapter (Germany) (All "G" models)	60H6050	*
RJ11 connector adapter (UK, NZ, HK) (All "G", "M", "B", "H" models)	60H6051	*
RJ11 connector adapter (Italy) (All "G" models)	60H6052	*
RJ11 connector adapter (Netherlands) (All "G" models)	60H6053	*
RJ11 connector adapter (Sweden) (All "G" models)	60H6054	*
RJ11 connector adapter (Switzerland) (All "G" models)	60H6055	*

8294 Power Cords	FRU#	CRU
Power Cord (models 21U A1V A6G 11V 21F 23A 23T 25G 41S D1U D1F E1U E1F 41L 41D A1V A2A A2T A2V A5A A5T A5V 23V 24A 24T 24V D4A D4T D4V D5A D5T D5V)	6952301	*
Power Cord (ANZ) (models 22M 11M 23M A2M A5M 24M D4M D5M)	13F9939	*
Power Cord (EMEA, ANZ, ASEAN Eng, Korea) (models A1K A6G 11K 25G A1K A2K A5K 24K D4K D5K)	13F9978	*
Power Cord (EMEA, ANZ, ASEAN Eng, HK Eng) (models A1H A6G 11H 25G A1H A2H A5H 24H D4H D5H)	14F0032	*
Power Cord (EMEA) (models A6G 25G)	13F9996	*
Power Cord (EMEA, LA) (models A6G 25G 41S 41L 41D 41Y)	14F0068	*
Power Cord (APU) (models 41Y)	36L8879	*
Power Cord (APU) (models 22J A1J A2J A5J 24J A7J 26J D4J D5J)	05K2876	*
Power Cord (China, HK) (models A1B A1H 11B 11H A1B A1H A2C A2B A2H A5C A5B A5H 24B 24H D4C D4B D4H D5C D5B D5H A1C 24C)	02K0545	*
Power Cord (EMEA) (models A6G 25G)	14F0086	*
Power Cord (EMEA, ANZ, ASEAN Eng) (models A6G 25G)	14F0014	*
Power Cord (EMEA) (models A6G 25G)	14F0050	*
Power Cord (India) (models A2Q A5Q 24Q D4Q D5Q)	49P2078	*

8294 Windows XP Pro Recovery CDs	FRU#	CRU
US/UK/AP/TH (models A1H A6G 11M 11H 21U 22M 23M 23A 23T 25G 41L D1U E1U A1H A2M A2A A2Q A2T A2H A5M A5A A5Q A5T A5H 24M 24A 24Q 24T 24H D4M D4A D4Q D4T D4H D5M D5A D5Q D5T D5H)	41D3822	*
FR/CF (models A6G 21F 25G D1F E1F)	41D3824	*
GR (models A6G 25G)	41D3825	*
IT (models A6G 25G)	41D3827	*
BR (models A6G 25G)	41D3828	*
SP/LA (models A6G 25G 41S 41D 41Y)	41D3826	*
DK (models A6G 25G)	41D3830	*
NL (models A6G 25G)	41D3833	*
AE (models A6G 25G)	41D3837	*
SV (models A6G 25G)	41D3829	*
HE (models A6G 25G)	41D3834	*
FI (models A6G 25G)	41D3831	*
NO (models A6G 25G)	41D3832	*
PL (models A6G 25G)	41D3835	*
PO (models A6G 25G)	41D3841	*
RU (models A6G 25G)	41D3838	*
RE (models A6G 25G)	41D3823	*
HU (models A6G 25G)	41D3840	*
CZ (models A6G 25G)	41D3836	*
TR (models A6G 25G)	41D3839	*

8294 Windows XP Pro Recovery CDs	FRU#	CRU
GK (models A6G 25G)	41D3842	*
SL (models A6G 25G)	41D3843	*
Japanese (models A1J A2J A5J 22J 24J A7J 26J D4J D5J)	39T9091	*
Simplified Chinese (models A2C A5C D4C D5C)	39T9023	*
Taiwan-TC (models A1V 11V A1V A2V A5V 23V 24V D4V D5V)	39T9040	*
Hong Kong-TC (models A1B 11B A1B A2B A5B 24B D4B D5B)	39T9057	*
Korean (models A1K 11K A1K A2K A5K 24K D4K D5K)	39T9074	*
Multilingual 1 (models A6G 25G)	41D4080	*
Multilingual 2 (models A6G 25G)	41D4086	*

Machine Type 8295

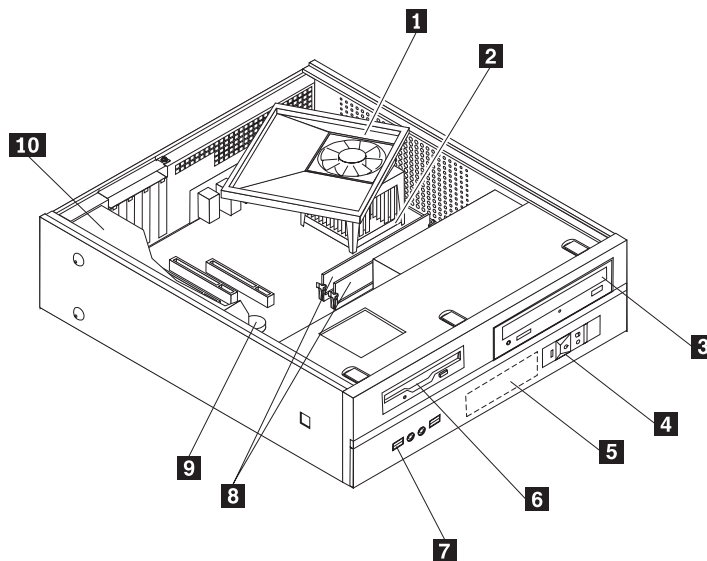

Item #	8295 FRUs	FRU#	CRU
1	Heat sink and fan assembly (models 11G E1G)	41D2001	N
2	Microprocessor, 2.93 Ghz, Pentium 4, 533FSB, 1MB L2 (models 11G)	41D1802	N
2	Microprocessor, 3.2 Ghz, Pentium 4, 800FSB, 2MB L2 (models E1G)	41D2245	N
3	DVD-ROM 16X-48X (models E1G)	40Y8933	N
3	DVD-ROM 16X-48X (models E1G)	40Y8935	N
4	Power switch/LED assembly (all models)	41A7152	N
5	Hard disk drive, 80GB, 7200rpm Serial ATA (models 11G E1G)	41D2033	N
6	Diskette drive, wo/bezel (models 11G E1G)	41D3724	N
7	Front panel card (models)	41A7153	N
8	Memory module, 512MB (models 11G E1G)	41D2030	**
9	System board, 10-100 Enet (models 11G E1G)	41D1793	N
10	Power supply (models)	TBD	N

The FRUs listed in the following table are not illustrated.

8295 FRUs	FRU#	CRU
Shield, EMC, 5.25in. drive bay (all models)	41A7162	N
Cable, Serial-ATA, (18in. RoHs) (all models)	41A7145	N
Shield, EMC, diskette drive bay (all models)	41A7146	N
Cable, diskette drive (all models)	41A7147	N
Cover (all models)	41A7148	**
Chassis assembly (all models)	41A7149	N
Bezel assembly, front (all models)	41A750	N
Fan duct assembly (all models)	41A7151	N
Shield, EMC, system board (all models)	41A7154	N
Miscellaneous hardware kit (all models)	41A7155	N
Retention bracket kit, system board (all models)	41A7156	N
Heat sink (all models)	41A7157	N
Cable, 1-drop IDE (all models)	41A7158	N
Cable, hard disk drive, 1-drop parallel-ATA (all models)	41A7159	N
Miscellaneous bezel kit (all models)	41A7160	N
Interposer cables (all models)	41A7161	N
Battery (all models)	33F8354	N

8295 Keyboards (Standard PS/2 Black)	FRU#	CRU
US English (models 11G E1G)	89P8300	*
Arabic (models 11G E1G)	89P8301	*
Belgian/French (models 11G E1G)	89P8302	*
Belgian/UK (models 11G E1G)	89P8303	*
Bulgarian (models 11G E1G)	89P8305	*
Czech (models 11G E1G)	89P8307	*
Danish (models 11G E1G)	89P8308	*
Dutch (models 11G E1G)	89P8309	*
French (models 11G E1G)	89P8310	*
German (models 11G E1G)	89P8313	*
Greek (models 11G E1G)	89P8314	*
Hebrew (models 11G E1G)	89P8315	*
Hungarian (models 11G E1G)	89P8316	*
Iceland (models 11G E1G)	89P8317	*
Italian 141 (models 11G E1G)	89P8318	*
Italian 142 (models 11G E1G)	89P8319	*
Norwegian (models 11G E1G)	89P8323	*
Polish (models 11G E1G)	89P8324	*
Portuguese (models 11G E1G)	89P8325	*
Romanian (models 11G E1G)	89P8326	*
Russian/Cy (models 11G E1G)	89P8327	*
Russian/Cy (models 11G E1G)	89P8328	*

8295 Keyboards (Standard PS/2 Black)	FRU#	CRU
Serbian/Cyrillic (models 11G E1G)	89P8329	*
Slovak (models 11G E1G)	89P8330	*
Spanish (models 11G E1G)	89P8331	*
Swedish/Finn (models 11G E1G)	89P8332	*
Swiss F/G (models 11G E1G)	89P8333	*
Turkish 440 (models 11G E1G)	89P8335	*
Turkish 179 (models 11G E1G)	89P8336	*
UK English (models 11G E1G)	89P8337	*
US Euro (models 11G E1G)	89P8338	*
Yugoslav/Latin (models 11G E1G)	89P8339	*

8295 mice	FRU#	CRU
Mouse, Scrollpoint Optical, USB (models 11G E1G)	24P0499	*


8295 Adapters and miscellaneous FRUs	FRU#	CRU
RJ11 connector adapter (Spain, Ireland) (All "G" models)	60H6043	*
RJ11 connector adapter (Austria) (All "G" models)	60H6045	*
RJ11 connector adapter (Belgium) (All "G" models)	60H6046	*
RJ11 connector adapter (Denmark) (All "G" models)	60H6047	*
RJ11 connector adapter (Norway, Finland) (All "G" models)	60H6048	*
RJ11 connector adapter (France) (All "G" models)	60H6049	*
RJ11 connector adapter (Germany) (All "G" models)	60H6050	*
RJ11 connector adapter (UK, NZ, HK) (All "G", "M", "B", "H" models)	60H6051	*
RJ11 connector adapter (Italy) (All "G" models)	60H6052	*
RJ11 connector adapter (Netherlands) (All "G" models)	60H6053	*
RJ11 connector adapter (Sweden) (All "G" models)	60H6054	*
RJ11 connector adapter (Switzerland) (All "G" models)	60H6055	*

8295 Power Cords	FRU#	CRU
Power Cord (models 11G E1G)	6952301	*
Power Cord (EMEA, ANZ, ASEAN Eng, Korea) (models 11G E1G)	13F9978	*
Power Cord (EMEA, ANZ, ASEAN Eng, HK Eng) (models 11G E1G)	14F0032	*
Power Cord (EMEA) (models 11G E1G)	13F9996	*
Power Cord (EMEA, LA) (models 11G E1G)	14F0068	*
Power Cord (EMEA) (mmodels 11G E1G)	14F0086	*
Power Cord (EMEA, ANZ, ASEAN Eng) (models 11G E1G)	14F0014	*
Power Cord (EMEA) (models 11G E1G)	14F0050	*

8295 Windows XP Pro Recovery CDs	FRU#	CRU
US/UK/AP/TH (models 11G)	41D3822	*
FR/CF (models 11G)	41D3824	*

8295 Windows XP Pro Recovery CDs	FRU#	CRU
GR (models 11G)	41D3825	*
IT (models 11G)	41D3827	*
SP/LA (models 11G)	41D3826	*
DK (models 11G)	41D3830	*
NL (models 11G)	41D3833	*
AE (models 11G)	41D3837	*
SV (models 11G)	41D3829	*
HE (models 11G)	41D3834	*
FI (models 11G)	41D3831	*
NO (models 11G)	41D3832	*
PL (models 11G)	41D3835	*
PO (models 11G)	41D3841	*
RU (models 11G)	41D3838	*
RE (models 11G)	41D3823	*
HU (models 11G)	41D3840	*
CZ (models 11G)	41D3836	*
TR (models 11G)	41D3839	*
GK (models 11G)	41D3842	*
SL (models 11G)	41D3843	*
Multilingual 1 (models 11G)	41D4080	*
Multilingual 2 (models 11G)	41D4086	*

Machine Type 9214

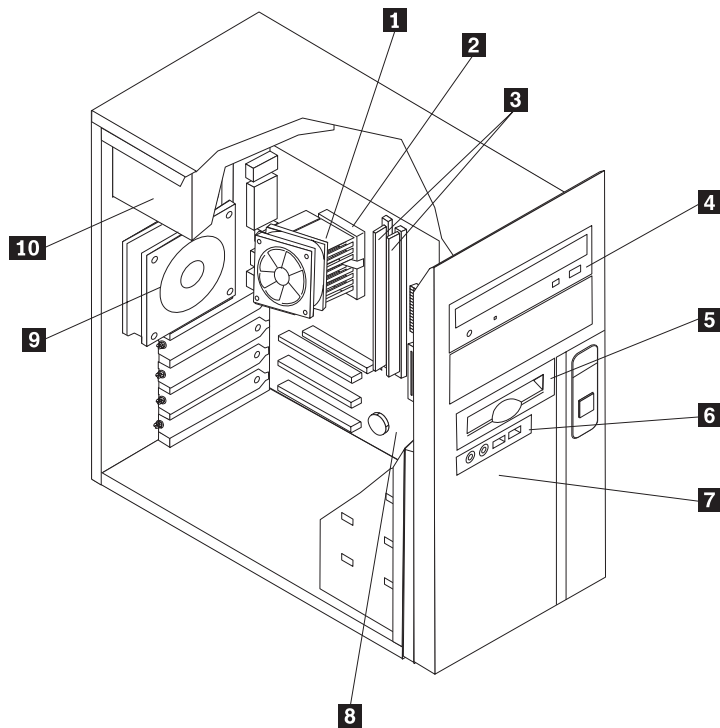

Item #	9214 FRUs	FRU#	CRU
1	Heat sink and fan assembly (models A1U 11U 71G)	41D2002	N
2	Microprocessor, Celeron D, 2.66 GHz, 533FSB, 256KB L2 (models A1U 71G)	41D1809	N
2	Microprocessor, Pentium 4, 2.93 GHz, 533FSB, 1MB L2 (models 11U)	41D1815	N
3	Memory module, 256MB, DDR2 SDRAM, NP, PC3200 (models A1U 11U)	41D2026	**
4	CD-ROM drive, 48X (models A1U 11U)	40Y8807	N
4	DVD-ROM 16X -48X (models 71G)	41D8933	N
4	DVD-ROM 16X -48X (models 71G)	41D8935	N
5	Diskette drive, W/Bezel (models)	24P3889	N
6	Front panel card assembly (all models)	41A7136	N
7	Hard disk drive, 40GB, 7200rpm, Parallel ATA (models A1U 11U)	41D2034	N
7	Hard disk drive, 80GB, 7200rpm, Parallel ATA (models 71G)	41D2035	N
8	System board, 10-100 E-net (models A1U 11U 71G)	41D1794	N
9	System fan, rear w/grill (all models)	41A7195	N
10	Power supply, non-PFC (models A1U 11U 71G)	41N3097	N

The FRUs listed in the following table are not illustrated.

9214 FRUs	FRU#	CRU
Cable, diskette drive (RoHs) (all models)	41A7130	**
Cover, main access (all models)	41A7131	**
Cover, right side (all models)	41A7132	**

9214 FRUs	FRU#	CRU
Chassis assembly (all models)	41A7133	N
Bezel, front (all models)	41A7134	**
Power switch/LED assembly (all models)	41A7135	N
Shield, system board (all models)	41A7137	N
Miscellaneous hardware kit (all models)	41A7138	N
Retention bracket, heat sink (all models)	41A7139	N
Cable, 2-drop IDE (all models)	41A7140	N
Cables, interposers (all models)	41A7143	N
Miscellaneous, bezel kit (all models)	41A7144	N
Battery (all models)	33F8354	N

9214 Keyboards (Preferred Pro fullsize, Black)	FRU#	CRU
US English (models A1U 11U 71G)	89P8300	*
Arabic (models 71G)	89P8301	*
Belgian/French (models 71G)	89P8302	*
Belgian/UK (models 71G)	89P8303	*
Bulgarian (models 71G)	89P8305	*
Chinese/US (models 71G)	89P8306	*
Czech (models 71G)	89P8307	*
Danish (models 71G)	89P8308	*
Dutch (models 71G)	89P8309	*
French (models 71G)	89P8310	*
German (models 71G)	89P8313	*
Greek (models 71G)	89P8314	*
Hebrew (models 71G)	89P8315	*
Hungarian (models 71G)	89P8316	*
Iceland (models 71G)	89P8317	*
Italian 141 (models 71G)	89P8318	*
Italian 142 (models 71G)	89P8319	*
Norwegian (models 71G)	89P8323	*
Polish (models 71G)	89P8324	*
Portuguese (models 71G)	89P8325	*
Romanian (models 71G)	89P8326	*
Russian/Cy (models 71G)	89P8328	*
Serbian/Cyrillic (models 71G)	89P8329	*
Slovak (models 71G)	89P8330	*
Spanish (models 71G)	89P8331	*
Swedish/Finn (models 71G)	89P8332	*
Swiss F/G (models 71G)	89P8333	*
Turkish 440 (models 71G)	89P8335	*
Turkish 179 (models 71G)	89P8336	*

9214 Keyboards (Preferred Pro fullsize, Black)	FRU#	CRU
UK English (models 71G)	89P8337	*
US Euro (models 71G)	89P8338	*
Yugoslav/Latin (models 71G)	89P8339	*

9214 mice	FRU#	CRU
Mouse, Scrollpoint Optical, USB (models A1U 11U 71G)	24P0499	*


9214 Adapters and miscellaneous FRUs	FRU#	CRU
RJ11 connector adapter (Spain, Ireland) (All "G" models)	60H6043	*
RJ11 connector adapter (Austria) (All "G" models)	60H6045	*
RJ11 connector adapter (Belgium) (All "G" models)	60H6046	*
RJ11 connector adapter (Denmark) (All "G" models)	60H6047	*
RJ11 connector adapter (Norway, Finland) (All "G" models)	60H6048	*
RJ11 connector adapter (France) (All "G" models)	60H6049	*
RJ11 connector adapter (Germany) (All "G" models)	60H6050	*
RJ11 connector adapter (UK, NZ, HK) (All "G", "M", "B", "H" models)	60H6051	*
RJ11 connector adapter (Italy) (All "G" models)	60H6052	*
RJ11 connector adapter (Netherlands) (All "G" models)	60H6053	*
RJ11 connector adapter (Sweden) (All "G" models)	60H6054	*
RJ11 connector adapter (Switzerland) (All "G" models)	60H6055	*

9214 Power Cords	FRU#	CRU
Power Cord (models A1U 11U 71G)	6952301	*
Power Cord (EMEA, ANZ, ASEAN Eng, Korea) (models 71G)	13F9978	*
Power Cord (EMEA, ANZ, ASEAN Eng, HK Eng) (models 71G)	14F0032	*
Power Cord (EMEA) (models 71G)	13F9996	*
Power Cord (EMEA, LA) (models 71G)	14F0068	*
Power Cord (EMEA) (models 71G)	14F0086	*
Power Cord (EMEA, ANZ, ASEAN Eng) (models 71G)	14F0014	*
Power Cord (EMEA) (models 71G)	14F0050	*

9214 Windows XP Home Recovery CDs	FRU#	CRU
US/UK/AP/TH (models 71G)	41D3954	*
FR/CF (models 71G)	41D3956	*
GR (models 71G)	41D3957	*
IT (models 71G)	41D3959	*
SP/LA (models 71G)	41D3958	*
DK (models 71G)	41D3962	*
NL (models 71G)	41D3965	*
AE (models 71G)	41D3969	*
SV (models 71G)	41D3961	*

9214Windows XP Home Recovery CDs	FRU#	CRU
HE (models 71G)	41D3966	*
FI (models 71G)	41D3963	*
NO (models 71G)	41D3964	*
PL (models 71G)	41D3967	*
PO (models 71G)	41D3973	*
RU (models 71G)	41D3970	*
RE (models 71G)	41D3955	*
HU (models 71G)	41D3972	*
CZ (models 71G)	41D3968	*
TR (models 71G)	41D3971	*
GK (models 71G)	41D3974	*

Machine Type 9215

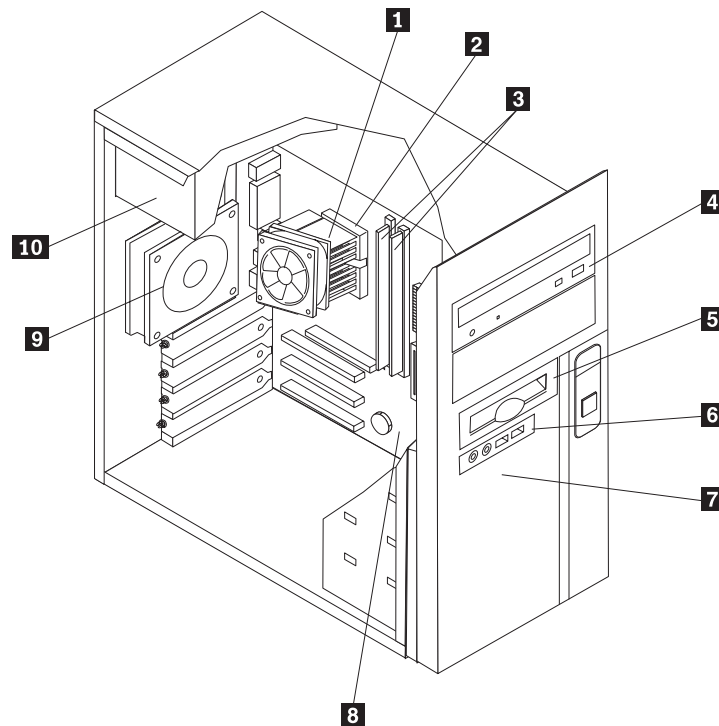

Item #	9215 FRUs	FRU#	CRU
1	Heat sink and fan assembly (models 21U A1U A1F A2Q A3C A4Q A5Y 11A 11T 23Y 24U 25U 26A 26Q 26T 26C 27V D1C D1K D2U D3U E1U A1S A1D A1Y A2A A2T A2C A3Q A4A A4T A4C 11Q 11C 21S 21D 21Y 24S 24D 24Y 25S 25D 25Y 27M 27A 27Q 27T 27C 27B 27H 27K D1M D1A D1Q D1T D1B D1H D1V D2S D2D D2Y A6M A6A A6Q A6T A6C A6B A6H A6V A6K B1M B1B B1H B1V B1K D4A D4Q D4T D4C D5B D5H D5V D5K D6M D6A D6Q D6T D6C D6B D6H D6V D6K)	41D2002	N
2	Microprocessor, Celeron D, 2.66 GHz, 533FSB, 256KB L2 (models A1U A1F A2Q A3C 71G A1S A1D A1Y A2A A2T A2C A3Q)	41D1809	N
2	Microprocessor, Celeron D, 2.80 GHz, 533FSB, 256KB L2 (models A4Q A5Y 72G A4A A4T A4C A6M A6A A6Q A6T A6C A6B A6H A6V A6K)	41D1810	N

Item #	9215 FRUs	FRU#	CRU
2	Microprocessor, Celeron D, 3.06 GHz, 533FSB, 256KB L2 (models B1M B1B B1H B1V B1K)	41D1812	N
2	Microprocessor, Pentium 4, 2.66 GHz, 533FSB, 1MB L2 (models 12Q)	41D1814	N
2	Microprocessor, Pentium 4, 2.93 GHz, 533FSB, 1MB L2 (models 21U 11A 11T 11Q 11C 21S 21D 21Y)	41D1815	N
2	Microprocessor, Pentium 4, 3.06 GHz, 533FSB, 1MB L2 (models 23Y 24U 25U 26A 26Q 26T 26C 27V 24S 24D 24Y 25S 25D 25Y 27M 27A 27Q 27T 27C 27B 27H 27K 73G)	41D1816	N
2	Microprocessor, Pentium 4, 3.0 GHz, 800FSB, 2MB L2 (models D1C D1K D2U D3U D1M D1A D1Q D1T D1B D1H D1V D2S D2D D2Y D4A D4Q D4T D4C D5B D5H D5V D5K D6M D6A D6Q D6T D6C D6B D6H D6V D6K)	41D2247	N
2	Microprocessor, Pentium 4, 3.2 GHz, 800FSB, 2MB L2 (models E1U)	41D2248	N
3	Memory module, 256MB, DDR2 SDRAM, NP, PC3200 (models 21U A1U A1F A2Q A3C A4Q 11A 11T 23Y 26A 26Q 26T 26C 27V 71G 72G A1S A1D A1Y A2A A2T A2C A3Q A4A A4T A4C 11Q 11C 21S 21D 21Y 27M 27A 27Q 27T 27C 27B 27H 27K D1M D1A D1Q D1T D1B D1H D1V D1C D1K A6M A6A A6Q A6T A6C A6B A6H A6V A6K 12Q D4A D4Q D4T D4C D6M D6A D6Q D6T D6C D6B D6H D6V D6K)	41D2026	**
3	Memory module, 512MB, DDR2 SDRAM, NP, PC3200 (models A5Y 24U 25U D2U D3U E1U 73G 24S 24D 24Y 25S 25D 25Y D2S D2D D2Y B1M B1B B1H B1V B1K D5B D5H D5V D5K)	41D2027	**
4	CD-ROM Drive 48X - Black w/o jack & vol (models 21U A1U A1F A2Q A4Q 11A 11T 23Y 24U 26A 26Q 26T 26C D1C D1K A1S A1D A1Y A2A A2T A2C A4A A4T A4C 11Q 11C 21S 21D 21Y 24S 24D 24Y 27M 27A 27Q 27T 27C 27B 27H 27V 27K D1M D1A D1Q D1T D1B D1H D1V 12Q D4A D4Q D4T D4C D5B D5H D5V D5K)	40Y8807	N
4	CD-RW drive, 48X-32X-48X (models 25U 25S 25D 25Y)	41D2041	N
4	CD-RW drive, 48X-32X-48X (models 25U 25S 25D 25Y)	40Y8901	N
4	DVD-ROM drive, 16X-48X (models 71G 72G A6M A6A A6Q A6T A6C A6B A6H A6V A6K D6M D6A D6Q D6T D6C D6B D6H D6V D6K)	40Y8933	N
4	DVD-ROM drive, 16X-48X (models 71G 72G A6M A6A A6Q A6T A6C A6B A6H A6V A6K D6M D6A D6Q D6T D6C D6B D6H D6V D6K)	40Y8935	N
4	DVD - ROM - CDRW Combo 48X-32X-48X-16X (models A5Y D2U E1U 73G D2S D2D D2Y B1M B1B B1H B1V B1K)	41D8919	N
4	DVD - ROM - CDRW Combo 48X-32X-48X-16X (models A5Y D2U E1U 73G D2S D2D D2Y A5M B1M B1B B1H B1V B1K)	41D8903	N
4	Multi-Burner Plus (Rambo VI) drive (models D3U)	40Y8909	N
5	Diskette drive, w/Bezel (models 72G 73G A2A A2Q A2T A2C A3Q A4A A4Q A4T A4C 11A 11Q 11T 11C 26A 26Q 26T 26C 27M 27A 27Q 27T 27C 27B 27H 27V 27K D1M D1A D1Q D1T D1C D1B D1H D1V D1K A6M A6A A6Q A6T A6C A6B A6H A6V A6K 12Q D4A D4Q D4T D4C D6M D6A D6Q D6T D6C D6B D6H D6V D6K)	40Y9105	N
6	Front panel card assembly (all models)	41A7136	N
7	Hard disk drive, 40GB, 7200rpm, Parallel ATA (models 21U A1U A1F A3C 24U A1S A1D A1Y A3Q 21S 21D 21Y 24S 24D 24Y)	41D2034	N
7	Hard disk drive, 80GB, 7200rpm, Parallel ATA (models A2Q A4Q A5Y 11A 11T 23Y 25U 26A 26Q 26T 26C 27V D1C D1K D2U E1U 71G 72G 73G A2A A2T A2C A4A A4T A4C 11Q 11C 25S 25D 25Y 27M 27A 27Q 27T 27C 27B 27H 27K D1M D1A D1Q D1T D1B D1H D1V D2S D2D D2Y A6M A6A A6Q A6T A6C A6B A6H A6V A6K B1M B1B B1H B1V B1K 12Q D4A D4Q D4T D4C D6M D6A D6Q D6T D6C D6B D6H D6V D6K)	41D2035	N
7	Hard disk drive, 160GB, 7200rpm, serial ATA (models D3U D5B D5H D5V D5K)	TBD	N

Item #	9215 FRUs	FRU#	CRU
8	System board, 10-100 E-net (models 21U A1U A1F A2Q A3C A4Q A5Y 11A 11T 23Y 24U 25U 26A 26Q 26T 26C 27V D1C D1K D2U D3U E1U 71G 72G 73G A1S A1D A1Y A2A A2T A2C A3Q A4A A4T A4C 11Q 11C 21S 21D 21Y 24S 24D 24Y 25S 25D 25Y 27M 27A 27Q 27T 27C 27B 27H 27K D1M D1A D1Q D1T D1B D1H D1V D2S D2D D2Y A6M A6A A6Q A6T A6C A6B A6H A6V A6K B1M B1B B1H B1V B1K 12Q D4A D4Q D4T D4C D5B D5H D5V D5K D6M D6A D6Q D6T D6C D6B D6H D6V D6K)	41D1794	N
9	System Fan, rear w/grill (all models)	41A7195	N
10	Power supply, non-PFC (models A1U A1F 11A 11T 21U 24U 25U 26A 26T D1K D2U D3U E1U 71G 72G 73G A2A A2T A4A A4T 27M 27A 27T 27K D1M D1A D1T A6M A6A A6T A6K B1M B1K D4A D4T D5K D6M D6A D6T D6K)	41N3097	N
10	Power supply, PFC (models A2Q A3C A4Q A5Y 23Y 26Q 26C 27V D1C A1S A1D A1Y A2C A3Q A4C 11Q 11C 21S 21D 21Y 24S 24D 24Y 25S 25D 25Y 27Q 27C 27B 27H D1Q D1B D1H D1V D2S D2D D2Y A6Q A6C A6B A6H A6V B1B B1H B1V 12Q D4Q D4C D5B D5H D5V D6Q D6C D6B D6H D6V)	41N3100	N

The FRUs listed in the following table are not illustrated.

9215 FRUs	FRU#	CRU
Cable, diskette drive (RoHs) (all models)	41A7130	**
Cover, main access (all models)	41A7131	**
Cover, right side (all models)	41A7132	**
Chassis assembly (all models)	41A7133	N
Bezel, front (all models)	41A7134	**
Power switch/LED assembly (all models)	41A7135	N
Shield, system board (all models)	41A7137	N
Miscellaneous hardware kit (all models)	41A7138	N
Retention bracket, heat sink (all models)	41A7139	N
Cable, 2-drop IDE (all models)	41A7140	N
Cable, hard disk drive, 1-drop, parallel-ATA (all models)	41A7142	N
Cables, interposers (all models)	41A7143	N
Miscellaneous, bezel kit (all models)	41A7144	N
Battery (all models)	33F8354	N

9215 Keyboards (Preferred Pro fullsize, Black)	FRU#	CRU
US English (models 21U A1U A2Q A3C A4Q 11A 24U 25U 26A 26Q 26C D1C D2U D3U E1U 71G 72G 73G A2A A2C A3Q A4A A4C 11Q 11C 27M 27A 27Q 27C 27H D1M D1A D1Q D1H A6M A6A A6Q A6C A6H B1M B1H 12Q D4A D4Q D4C D5H D6M D6A D6Q D6C D6H)	89P8300	*
Arabic (models 71G 72G 73G)	89P8301	*
Belgian/French (models 71G 72G 73G)	89P8302	*
Belgian/UK (models 71G 72G 73G)	89P8303	*
Bulgarian (models 71G 72G 73G)	89P8305	*
Chinese/US (models 27V 27B D1B D1V A6B A6V B1B B1V D5B D5V D6B D6V)	89P8306	*
Czech (models 71G 72G 73G)	89P8307	*

9215 Keyboards (Preferred Pro fullsize, Black)	FRU#	CRU
Danish (models 71G 72G 73G)	89P8308	*
Dutch (models 71G 72G 73G)	89P8309	*
French (models 71G 72G 73G)	89P8310	*
French Canadian 445 (models A1F)	89P8311	*
French Canadian 58 (models A1F)	89P8312	*
German (models 71G 72G 73G)	89P8313	*
Greek (models 71G 72G 73G)	89P8314	*
Hebrew (models 71G 72G 73G)	89P8315	*
Hungarian (models 71G 72G 73G)	89P8316	*
Iceland (models 71G 72G 73G)	89P8317	*
Italian 141 (models 71G 72G 73G)	89P8318	*
Italian 142 (models 71G 72G 73G)	89P8319	*
Korean (models D1K 27K A6K B1K D5K D6K)	89P8321	*
LA Spanish (models A5Y 23Y A1S A1D A1Y 21S 21D 21Y 24S 24D 24Y 25S 25D 25Y D2S D2D D2Y)	89P8322	*
Norwegian (models 71G 72G 73G)	89P8323	*
Polish (models 71G 72G 73G)	89P8324	*
Portuguese (models 71G 72G 73G)	89P8325	*
Romanian (models 71G 72G 73G)	89P8326	*
Russian/Cy (models 71G 72G 73G)	89P8328	*
Serbian/Cyrillic (models 71G 72G 73G)	89P8329	*
Slovak (models 71G 72G 73G)	89P8330	*
Spanish (models 71G 72G 73G)	89P8331	*
Swedish/Fin (models 71G 72G 73G)	89P8332	*
Swiss F/G (models 71G 72G 73G)	89P8333	*
Thailand (models 11T 26T A2T A4T 27T D1T A6T D4T D6T)	89P8334	*
Turkish 440 (models 71G 72G 73G)	89P8335	*
Turkish 179 (models 71G 72G 73G)	89P8336	*
UK English (models 71G 72G 73G)	89P8337	*
US Euro (models 71G 72G 73G)	89P8338	*
Yugoslav/Latin (models 71G 72G 73G)	89P8339	*

9215 mice	FRU#	CRU
Mouse, Scrollpoint Optical, USB (models 21U A1U A1F A2Q A3C A4Q A5Y 11A 11T 23Y 24U 25U 26A 26Q 26T 26C 27V D1C D1K D2U D3U E1U 71G 72G 73G A1S A1D A1Y A2A A2T A2C A3Q A4A A4T A4C 11Q 11C 21S 21D 21Y 24S 24D 24Y 25S 25D 25Y 27M 27A 27Q 27T 27C 27B 27H 27K D1M D1A D1Q D1T D1B D1H D1V D2S D2D D2Y A6M A6A A6Q A6T A6C A6B A6H A6V A6K B1M B1B B1H B1V B1K 12Q D4A D4Q D4T D4C D5B D5H D5V D5K D6M D6A D6Q D6T D6C D6B D6H D6V D6K)	24P0499	*

9215 Adapters and miscellaneous FRUs	FRU#	CRU
RJ11 connector adapter (Spain, Ireland) (All "G" models)	60H6043	*

9215 Adapters and miscellaneous FRUs	FRU#	CRU
RJ11 connector adapter (Austria) (All "G" models)	60H6045	*
RJ11 connector adapter (Belgium) (All "G" models)	60H6046	*
RJ11 connector adapter (Denmark) (All "G" models)	60H6047	*
RJ11 connector adapter (Norway, Finland) (All "G" models)	60H6048	*
RJ11 connector adapter (France) (All "G" models)	60H6049	*
RJ11 connector adapter (Germany) (All "G" models)	60H6050	*
RJ11 connector adapter (UK, NZ, HK) (All "G", "M", "B", "H" models)	60H6051	*
RJ11 connector adapter (Italy) (All "G" models)	60H6052	*
RJ11 connector adapter (Netherlands) (All "G" models)	60H6053	*
RJ11 connector adapter (Sweden) (All "G" models)	60H6054	*
RJ11 connector adapter (Switzerland) (All "G" models)	60H6055	*

9215 Power Cords	FRU#	CRU
Power Cord (models 21U A1U A1F 11A 11T 24U 25U 26A 26T 27V D2U D3U E1U 71G 72G 73G A1S A1D A2A A2T A4A A4T 21S 21D 24S 24D 25S 25D 27A 27T D1A D1T D1V D2S D2D A6A A6T A6V B1V D4A D4T D5V D6A D6T D6V)	6952301	*
Power Cord (ANZ) (models 27M D1M A6M B1M D6M)	13F9939	*
Power Cord (EMEA, ANZ, ASEAN Eng, Korea) (models D1K 71G 72G 73G 27K A6K B1K D5K D6K)	13F9978	*
Power Cord (EMEA, ANZ, ASEAN Eng, HK Eng) (models 71G 72G 73G 27H D1H A6H B1H D5H D6H)	14F0032	
Power Cord (EMEA) (models 71G 72G 73G)	13F9996	*
Power Cord (EMEA, LA) (models A5Y 23Y 71G 72G 73G A1S A1D A1Y 21S 21D 21Y 24S 24D 24Y 25S 25D 25Y D2S D2D D2Y)	14F0068	*
Power Cord (APU) (models A5Y 23Y A1Y 21Y 24Y 25Y D2Y)	36L8879	*
Power Cord (China, HK) (models A3C 26C D1C A2C A4C 11C 27C 27B 27H D1B D1H A6C A6B A6H B1B B1H D4C D5B D5H D6C D6B D6H)	02K0545	*
Power Cord (EMEA) (models 71G 72G 73G)	14F0086	*
Power Cord (EMEA, ANZ, ASEAN Eng) (models 71G 72G 73G)	14F0014	*
Power Cord (EMEA) (models 71G 72G 73G)	14F0050	*
Power Cord (India) (models A2Q A4Q 26Q A3Q 11Q 27Q D1Q A6Q 12Q D4Q D6Q)	49P2078	*


9215 Windows XP Home Recovery CDs	FRU#	CRU
US/UK/AP/TH (models B1M B1H D5H 71G)	41D3954	*
FR/CF (models 71G)	41D3956	*
GR (models 71G)	41D3957	*
IT (models 71G)	41D3959	*
SP/LA (models 71G)	41D3958	*
DK (models 71G)	41D3962	*
NL (models 71G)	41D3965	*
AE (models 71G)	41D3969	*
SV (models 71G)	41D3961	*

9215 Windows XP Home Recovery CDs	FRU#	CRU
HE (models 71G)	41D3966	*
FI (models 71G)	41D3963	*
NO (models 71G)	41D3964	*
PL (models 71G)	41D3967	*
PO (models 71G)	41D3973	*
RU (models 71G)	41D3970	*
RE (models 71G)	41D3955	*
HU (models 71G)	41D3972	*
CZ (models 71G)	41D3968	*
TR (models 71G)	41D3971	*
GK (models 71G)	41D3974	*
Taiwan-TC (models B1V D5V)	39T9049	*
Hong Kong-TC (models B1B D5B)	39T9066	*
Korean (models B1K D5K)	39T9083	*

9215 Windows XP Pro Recovery CDs	FRU#	CRU
US/UK/AP/TH (models A1U 21U 24U 25U D2U D3U E1U 72G 73G 27M 27A 27Q 27T 27H D1M D1A D1Q D1T D1H A6M A6A A6Q A6T A6H D6M D6A D6Q D6T D6H)	41D3822	*
FR/CF (models A1F 72G 73G)	41D3824	*
GR (models 72G 73G)	41D3825	*
IT (models 72G 73G)	41D3827	*
SP/LA (models A5Y 23Y 72G 73G A1S A1D A1Y 21S 21D 21Y 24S 24D 24Y 25S 25D 25Y D2S D2D D2Y)	41D3826	*
DK (models 72G 73G)	41D3830	*
NL (models 72G 73G)	41D3833	*
AE (models 72G 73G)	41D3837	*
SV (models 72G 73G)	41D3829	*
HE (models 72G 73G)	41D3834	*
FI (models 72G 73G)	41D3831	*
NO (models 72G 73G)	41D3832	*
PL (models 72G 73G)	41D3835	*
PO (models 72G 73G)	41D3841	*
RU (models 72G 73G)	41D3838	*
RE (models 72G 73G)	41D3823	*
HU (models 72G 73G)	41D3840	*
CZ (models 72G 73G)	41D3836	*
TR (models 72G 73G)	41D3839	*
GK (models 72G 73G)	41D3842	*
SL (models 72G 73G)	41D3843	*
Simplified Chinese (models D1C 27C A6C D6C)	39T9023	*
Taiwan-TC (models 27V D1V A6V D6V)	39T9040	*

9215 Windows XP Pro Recovery CDs	FRU#	CRU
Hong Kong-TC (models 27B D1B A6B D6B)	39T9057	*
Korean (models D1K 27K A6K D6K)	39T9074	*
Multilingual 1 (models 72G 73G)	41D4080	*
Multilingual 2 (models 72G 73G)	41D4086	*

Machine Type 9216

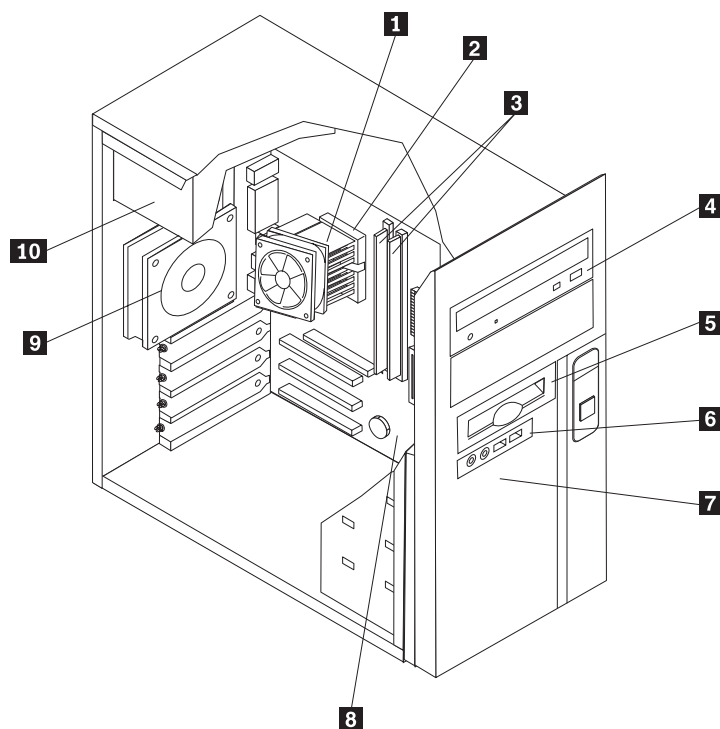

Item #	9216 FRUs	FRU#	CRU
1	Heat sink and fan assembly (models A2G 11G 41U 41S 41D 41Y 71G 72G 73G 74G)	41D2002	N
2	Microprocessor, Celeron D, 2.66 GHz, 533FSB, 256KB L2 (models A2G 71G 72G)	41D1809	N
2	Microprocessor, Celeron D, 2.8 GHz, 533FSB, 256KB L2 (models 73G)	41D1810	N
2	Microprocessor, Pentium 4, 2.93 GHz, 533FSB, 1MB L2 (models 11G)	41D1815	N
2	Microprocessor, Pentium 4, 3.06 GHz, 533FSB, 1MB L2 (models 74G)	41D1816	N
2	Microprocessor, Pentium 4, 3.0 GHz, 800FSB, 1MB L2 (models 41U 41S 41D 41Y)	41D1818	N
3	Memory module, 256MB, DDR2 SDRAM, NP, PC3200 (models A2G 11G 71G 72G 73G)	41D2026	**
3	Memory module, 512MB, DDR2 SDRAM, NP, PC3200 (models 41U 41S 41D 41Y 74G)	41D2027	**
4	DVD-ROM drive, 16X-48X (models A2G 11G 71G 72G 73G)	40Y8933	N
4	DVD-ROM drive, 16X-48X (models A2G 11G 71G 72G 73G)	40Y8935	N
4	Combo drive 48X-32X-48X-16X DVD - ROM - CDRW (models 74G)	40Y8919	N
5	Diskette drive, W/Bezel (models A2G 11G 73G 74G)	40Y9105	N

Item #	9216 FRUs	FRU#	CRU
6	Front panel card assembly (all models)	41A7136	N
7	Hard disk drive, 40GB, 7200rpm, Parallel ATA (models 41U 41S 41D 41Y)	41D2034	N
7	Hard disk drive, 80GB, 7200rpm, Parallel ATA (models A2G 11G 71G 72G 73G 74G)	41D2035	N
8	System board, 10-100 E-net (models A2G 11G 41U 41S 41D 41Y 71G 72G 73G 74G)	41D1794	N
9	System Fan, rear w/grill (all models)	41A7195	N
10	Power supply, non-PFC (models A2G 11G 41U 71G 72G 73G 74G)	41N3097	N
10	Power supply, PFC (models 41S 41D 41Y)	41N3100	N

The FRUs listed in the following table are not illustrated.

9216 FRUs	FRU#	CRU
Cable, diskette drive (RoHs) (all models)	41A7130	**
Cover, main access (all models)	41A7131	**
Cover, right side (all models)	41A7132	**
Chassis assembly (all models)	41A7133	N
Bezel, front (all models)	41A7134	**
Power switch/LED assembly (all models)	41A7135	N
Shield, system board (all models)	41A7137	N
Miscellaneous hardware kit (all models)	41A7138	N
Retention bracket, heats ink (all models)	41A7139	N
Cable, 2-drop IDE (all models)	41A7140	N
Cable, hard disk drive, 1-drop, parallel-ATA (all models)	41A7142	N
Cables, interposers (all models)	41A7143	N
Miscellaneous, bezel kit (all models)	41A7144	N
Battery (all models)	33F8354	N

9216 Keyboards (Preferred Pro fullsize, Black)	FRU#	CRU
US English (models A2G 11G 41U 71G 72G 73G 74G)	89P8300	*
Arabic (models A2G 11G 71G 72G 73G 74G)	89P8301	*
Belgian/French (models A2G 11G 71G 72G 73G 74G)	89P8302	*
Belgian/UK (models A2G 11G 71G 72G 73G 74G)	89P8303	*
Bulgarian (models A2G 11G 71G 72G 73G 74G)	89P8305	*
Czech (models A2G 11G 71G 72G 73G 74G)	89P8307	*
Danish (models A2G 11G 71G 72G 73G 74G)	89P8308	*
Dutch (models A2G 11G 71G 72G 73G 74G)	89P8309	*
French (models A2G 11G 71G 72G 73G 74G)	89P8310	*
German (models A2G 11G 71G 72G 73G 74G)	89P8313	*
Greek (models A2G 11G 71G 72G 73G 74G)	89P8314	*
Hebrew (models A2G 11G 71G 72G 73G 74G)	89P8315	*
Hungarian (models A2G 11G 71G 72G 73G 74G)	89P8316	*

9216 Keyboards (Preferred Pro fullsize, Black)	FRU#	CRU
Iceland (models A2G 11G 71G 72G 73G 74G)	89P8317	*
Italian 141 (models A2G 11G 71G 72G 73G 74G)	89P8318	*
Italian 142 (models A2G 11G 71G 72G 73G 74G)	89P8319	*
LA Spanish (models 41S 41D 41Y)	89P8322	*
Norwegian (models A2G 11G 71G 72G 73G 74G)	89P8323	*
Polish (models A2G 11G 71G 72G 73G 74G)	89P8324	*
Portuguese (models A2G 11G 71G 72G 73G 74G)	89P8325	*
Romanian (models A2G 11G 71G 72G 73G 74G)	89P8326	*
Russian/Cy (models A2G 11G 71G 72G 73G 74G)	89P8328	*
Serbian/Cyrillic (models A2G 11G 71G 72G 73G 74G)	89P8329	*
Slovak (models A2G 11G 71G 72G 73G 74G)	89P8330	*
Spanish (models A2G 11G 71G 72G 73G 74G)	89P8331	*
Swedish/Finn (models A2G 11G 71G 72G 73G 74G)	89P8332	*
Swiss F/G (models A2G 11G 71G 72G 73G 74G)	89P8333	*
Turkish 179 (models A2G 11G 71G 72G 73G 74G)	89P8336	*
UK English (models A2G 11G 71G 72G 73G 74G)	89P8337	*
US Euro (models A2G 11G 71G 72G 73G 74G)	89P8338	*
Yugoslav/Latin (models A2G 11G 71G 72G 73G 74G)	89P8339	*

9216 mice	FRU#	CRU
Mouse, Scrollpoint Optical, USB (models A2G 11G 41U 41S 41D 41Y 71G 72G 73G 74G)	24P0499	*

9216 Adapters and miscellaneous FRUs	FRU#	CRU
RJ11 connector adapter (Spain, Ireland) (All "G" models)	60H6043	*
RJ11 connector adapter (Austria) (All "G" models)	60H6045	*
RJ11 connector adapter (Belgium) (All "G" models)	60H6046	*
RJ11 connector adapter (Denmark) (All "G" models)	60H6047	*
RJ11 connector adapter (Norway, Finland) (All "G" models)	60H6048	*
RJ11 connector adapter (France) (All "G" models)	60H6049	*
RJ11 connector adapter (Germany) (All "G" models)	60H6050	*
RJ11 connector adapter (UK, NZ, HK) (All "G", "M", "B", "H" models)	60H6051	*
RJ11 connector adapter (Italy) (All "G" models)	60H6052	*
RJ11 connector adapter (Netherlands) (All "G" models)	60H6053	*
RJ11 connector adapter (Sweden) (All "G" models)	60H6054	*
RJ11 connector adapter (Switzerland) (All "G" models)	60H6055	*

9216 Power Cords	FRU#	CRU
Power Cord (models A2G 11G 41U 41S 41D 41Y 71G 72G 73G 74G)	6952301	*
Power Cord (EMEA, ANZ, ASEAN Eng, Korea) (models A2G 11G 71G 72G 73G 74G)	13F9978	*
Power Cord (EMEA, ANZ, ASEAN Eng, HK Eng) (models A2G 11G 71G 72G 73G 74G)	14F0032	*
Power Cord (EMEA) (models A2G 11G 71G 72G 73G 74G)	13F9996	*


9216 Power Cords	FRU#	CRU
Power Cord (EMEA, LA) (models A2G 11G 41S 41D 41Y 71G 72G 73G 74G)	14F0068	*
Power Cord (APU) (models 41Y)	36L8879	*
Power Cord (EMEA) (models A2G 11G 71G 72G 73G 74G)	14F0086	*
Power Cord (EMEA, ANZ, ASEAN Eng) (models A2G 11G 71G 72G 73G 74G)	14F0014	*
Power Cord (EMEA) (models A2G 11G 71G 72G 73G 74G)	14F0050	*

9216 Windows XP Home Recovery CDs	FRU#	CRU
US/UK/AP/TH (models 72G)	41D3954	*
FR/CF (models 72G)	41D3956	*
GR (models 72G)	41D3957	*
IT (models 72G)	41D3959	*
SP/LA (models 72G)	41D3958	*
DK (models 72G)	41D3962	*
NL (models 72G)	41D3965	*
AE (models 72G)	41D3969	*
SV (models 72G)	41D3961	*
HE (models 72G)	41D3966	*
FI (models 72G)	41D3963	*
NO (models 72G)	41D3964	*
PL (models 72G)	41D3967	*
PO (models 72G)	41D3973	*
RU (models 72G)	41D3970	*
RE (models 72G)	41D3955	*
HU (models 72G)	41D3972	*
CZ (models 72G)	41D3968	*
TR (models 72G)	41D3971	*
GK (models 72G)	41D3974	*

9216 Windows XP Pro Recovery CDs	FRU#	CRU
US/UK/AP/TH (models A2G 11G 41U 73G 74G)	41D3822	*
FR/CF (models A2G 11G 73G 74G)	41D3824	*
GR (models A2G 11G 73G 74G)	41D3825	*
IT (models A2G 11G 73G 74G)	41D3827	*
SP/LA (models A2G 11G 41S 41D 41Y 73G 74G)	41D3826	*
DK (models A2G 11G 73G 74G)	41D3830	*
NL (models A2G 11G 73G 74G)	41D3833	*
AE (models A2G 11G 73G 74G)	41D3837	*
SV (models A2G 11G 73G 74G)	41D3829	*
HE (models A2G 11G 73G 74G)	41D3834	*
FI (models A2G 11G 73G 74G)	41D3831	*
NO (models A2G 11G 73G 74G)	41D3832	*

9216 Windows XP Pro Recovery CDs	FRU#	CRU
PL (models A2G 11G 73G 74G)	41D3835	*
PO (models A2G 11G 73G 74G)	41D3841	*
RU (models A2G 11G 73G 74G)	41D3838	*
RE (models A2G 11G 73G 74G)	41D3823	*
HU (models A2G 11G 73G 74G)	41D3840	*
CZ (models A2G 11G 73G 74G)	41D3836	*
TR (models A2G 11G 73G 74G)	41D3839	*
GK (models A2G 11G 73G 74G)	41D3842	*
SL (models A2G 11G 73G 74G)	41D3843	*
Multilingual 1 (models A2G 11G 73G 74G)	41D4080	*
Multilingual 2 (models A2G 11G 73G 74G)	41D4086	*

Machine Type 9217

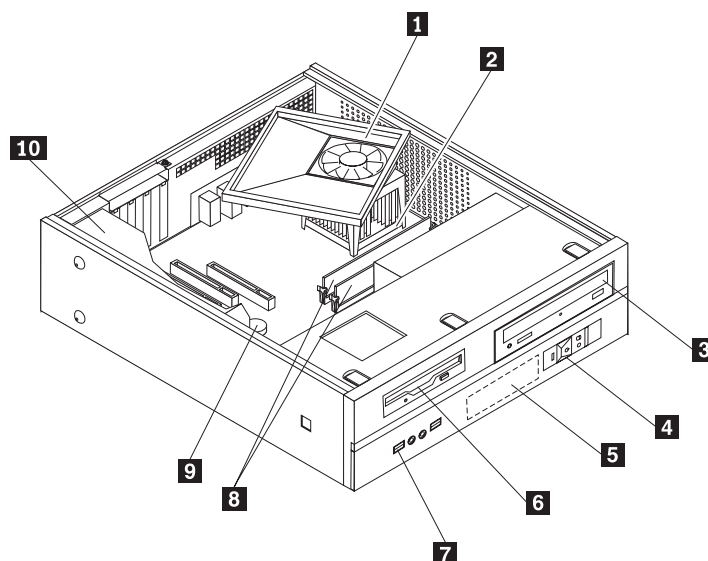

Item #	9217 FRUs	FRU#	CRU
1	Heat sink and fan assembly (models A1U 11U A2G)	41D2001	N
2	Microprocessor, 2.66 Ghz, Celeron D, 533FSB, 256KB L2 (models A1U A2G)	41D1796	N
2	Microprocessor, 2.93 Ghz, Pentium 4, 533FSB, 1MB L2 (models 11U)	41D1802	N
3	CD-ROM Drive 48X - Black w/o jack & vol (models A1U 11U A2G)	40Y8807	N
4	Power switch/LED assembly (all models)	41A7152	N
5	Hard disk drive, 40GB, 7200rpm Serial ATA (models A1U 11U A2G)	41D2034	N
6	Diskette drive, wo/bezel (models A2G)	41D3724	N
7	Front panel card (all models)	41A7153	N
8	Memory module, 256MB, PC3200 (models A1U 11U A2G)	41D2026	**
9	System board, 10-100 Enet (models A1U 11U A2G)	41D1794	N
10	Power supply (all models)	41N3089	N

The FRUs listed in the following table are not illustrated.

9217 FRUs	FRU#	CRU
Shield, EMC, 5.25in. drive bay (all models)	41A7162	N
Cable, Serial-ATA, (18in. RoHs) (all models)	41A7145	N
Shield, EMC, diskette drive bay (all models)	41A7146	N
Cable, diskette drive (all models)	41A7147	N
Cover (all models)	41A7148	**
Chassis assembly (all models)	41A7149	N
Bezel assembly, front (all models)	41A750	N
Fan duct assembly (all models)	41A7151	N
Shield, EMC, system board (all models)	41A7154	N
Miscellaneous hardware kit (all models)	41A7155	N
Retention bracket kit, system board (all models)	41A7156	N
Cable, 1-drop IDE (all models)	41A7158	N
Cable, hard disk drive, 1-drop parallel-ATA (all models)	41A7159	N
Miscellaneous bezel kit (all models)	41A7160	N
Interposer cables (all models)	41A7161	N
Battery (all models)	33F8354	N

9217 Keyboards (Standard PS/2 Black)	FRU#	CRU
US English (models A1U 11U A2G)	89P8300	*
Arabic (models A2G)	89P8301	*
Belgian/French (models A2G)	89P8302	*
Belgian/UK (models A2G)	89P8303	*
Bulgarian (models A2G)	89P8305	*
Czech (models A2G)	89P8307	*
Danish (models A2G)	89P8308	*
Dutch (models A2G)	89P8309	*
French (models A2G)	89P8310	*
German (models A2G)	89P8313	*
Greek (models A2G)	89P8314	*
Hebrew (models A2G)	89P8315	*
Hungarian (models A2G)	89P8316	*
Iceland (models A2G)	89P8317	*
Italian 141 (models A2G)	89P8318	*
Italian 142 (models A2G)	89P8319	*
Norwegian (models A2G)	89P8323	*
Polish (models A2G)	89P8324	*
Portuguese (models A2G)	89P8325	*
Romanian (models A2G)	89P8326	*
Russian/Cy (models A2G)	89P8327	*

9217 Keyboards (Standard PS/2 Black)	FRU#	CRU
Russian/Cy (models A2G)	89P8328	*
Serbian/Cyrillic (models A2G)	89P8329	*
Slovak (models A2G)	89P8330	*
Spanish (models A2G)	89P8331	*
Swedish/Finn (models A2G)	89P8332	*
Swiss F/G (models A2G)	89P8333	*
Turkish 440 (models A2G)	89P8335	*
Turkish 179 (models A2G)	89P8336	*
UK English (models A2G)	89P8337	*
US Euro (models A2G)	89P8338	*
Yugoslav/Latin (models A2G)	89P8339	*


9217 mice	FRU#	CRU
Mouse, Scrollpoint Optical, USB (models A1U 11U A2G)	24P0499	*

9217 Adapters and miscellaneous FRUs	FRU#	CRU
RJ11 connector adapter (Spain, Ireland) (All "G" models)	60H6043	*
RJ11 connector adapter (Austria) (All "G" models)	60H6045	*
RJ11 connector adapter (Belgium) (All "G" models)	60H6046	*
RJ11 connector adapter (Denmark) (All "G" models)	60H6047	*
RJ11 connector adapter (Norway, Finland) (All "G" models)	60H6048	*
RJ11 connector adapter (France) (All "G" models)	60H6049	*
RJ11 connector adapter (Germany) (All "G" models)	60H6050	*
RJ11 connector adapter (UK, NZ, HK) (All "G", "M", "B", "H" models)	60H6051	*
RJ11 connector adapter (Italy) (All "G" models)	60H6052	*
RJ11 connector adapter (Netherlands) (All "G" models)	60H6053	*
RJ11 connector adapter (Sweden) (All "G" models)	60H6054	*
RJ11 connector adapter (Switzerland) (All "G" models)	60H6055	*

9217Power Cords	FRU#	CRU
Power Cord (models A1U 11U A2G)	6952301	*
Power Cord (EMEA, ANZ, ASEAN Eng, Korea) (models A2G)	13F9978	*
Power Cord (EMEA, ANZ, ASEAN Eng, HK Eng) (models A2G)	14F0032	*
Power Cord (EMEA) (models A2G)	13F9996	*
Power Cord (EMEA, LA) (models A2G)	14F0068	*
Power Cord (EMEA) (models A2G)	14F0086	*
Power Cord (EMEA, ANZ, ASEAN Eng) (models A2G)	14F0014	*
Power Cord (EMEA) (models A2G)	14F0050	*

9217 Windows XP Home Recovery CDs	FRU#	CRU
US/UK/AP/TH (models A1U 11U)	41D3954	*

Machine Type 9218

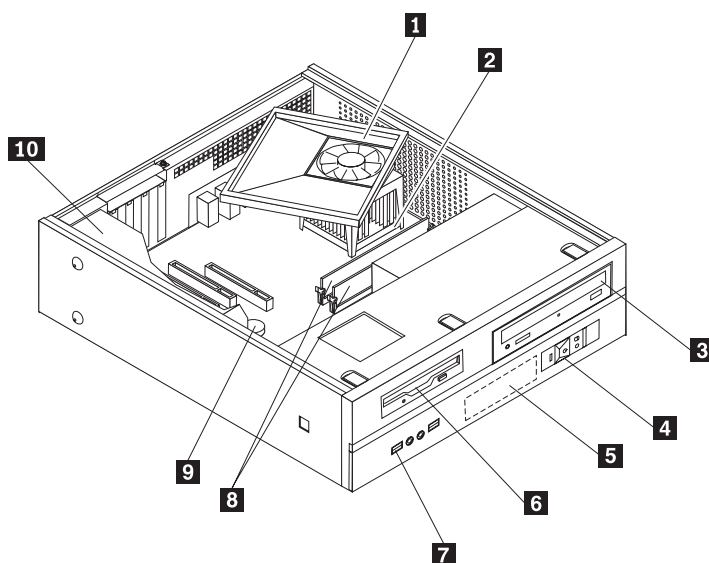

Item #	9218 FRUs	FRU#	CRU
1	Heat sink and fan assembly (models A1U A1F A1S A1P A2S A2P A3G 11S 11P 12U D1U D1F D2G A1L A1D A1Y A2L A2D A2Y 11L 11D 11Y 22L 22D 22Y 41L 41D 41Y 71G 72G)	41D2001	N
2	Microprocessor, 2.66 Ghz, Celeron D, 533FSB, 256KB L2 (models A1U A1F A1S A1P A2S A2P A3G A1L A1D A1Y A2L A2D A2Y)	41D1796	N
2	Microprocessor, 2.93 Ghz, Celeron D, 533FSB, 256KB L2 (models 71G)	41D1798	N
2	Microprocessor, 2.93 Ghz, Pentium 4, 533FSB, 1MB L2 (models 11S 11P 12U 11L 11D 11Y 72G)	41D1802	N
2	Microprocessor, 3.06 Ghz, Pentium 4, 533FSB, 1MB L2 (models 22S 22P 22L 22D 22Y)	41D1803	N
2	Microprocessor, 3.0 Ghz, Pentium 4, 800FSB, 1MB L2 (models 41U 41F 41S 41P 41L 41D 41Y)	41D1805	N
2	Microprocessor, 3.0 Ghz, Pentium 4, 800FSB, 2MB L2 (models D1U D1F D2G)	41D2244	N
3	CD-ROM Drive 48X - Black w/o jack & vol (models A2S A2P 11S 11P 12U 22S 22P A2L A2D A2Y 11L 11D 11Y 22L 22D 22Y)	40Y8807	N
3	DVD-ROM 16X-48X (models A3G D2G 72G)	40Y8933	N
3	DVD-ROM 16X-48X (models A3G D2G 72G)	40Y8935	N
3	CD-RW 48X-32X-48X (models A1U A1F A1S A1P 41U 41F 41S 41P A1L A1D A1Y 41L 41D 41Y)	40Y8937	N
3	CD-RW 48X-32X-48X (models A1U A1F A1S A1P 41U 41F 41S 41P A1L A1D A1Y 41L 41D 41Y)	40Y8901	N
3	DVD - ROM - CDRW Combo 48X-32X-48X-16X (models D1U D1F 71G)	41D8919	N
4	Power switch/LED assembly (all models)	41A7152	N
5	Hard disk drive, 40GB, 7200rpm Parallel ATA (models 12U)	41D2034	N
5	Hard disk drive, 80GB, 7200rpm Parallel ATA (models A1U A1F A1S A1P A2S A2P A3G 11S 11P 22S 22P 41U 41F 41S 41P D1U D1F D2G A1L A1D A1Y A2L A2D A2Y 11L 11D 11Y 22L 22D 22Y 41L 41D 41Y 71G 72G)	41D2035	N

Item #	9218 FRUs	FRU#	CRU
6	Diskette drive, wo/bezel (models A2S A2P A2L A2D A2Y A3G 11S 11P 11L 11D 11Y 22S 22P 22L 22D 22Y 71G)	41D3724	N
7	Front panel card (models)	41A7153	N
8	Memory module, 256MB, PC 3200 (models A1U A1F A1S A1P A2S A2P A3G 11S 11P 22S 22P 41U 41F 41S 41P A1L A1D A1Y A2L A2D A2Y 11L 11D 11Y 22L 22D 22Y 41L 41D 41Y 71G 72G)	41D2026	**
8	Memory module, 512MB, PC 3200 (models 12U D1U D1F D2G)	41D2027	**
9	System board, 10-100 Enet (models A1U A1F A1S A1P A2S A2P A3G 11S 11P 12U 22S 22P 41U 41F 41S 41P D1U D1F D2G A1L A1D A1Y A2L A2D A2Y 11L 11D 11Y 22L 22D 22Y 41L 41D 41Y 71G 72G)	41D1794	N
10	Power supply (all models)	41N3089	N

The FRUs listed in the following table are not illustrated.

9218 FRUs	FRU#	CRU
Shield, EMC, 5.25in. drive bay (all models)	41A7162	N
Cable, Serial-ATA, (18in. RoHs) (all models)	41A7145	N
Shield, EMC, diskette drive bay (all models)	41A7146	N
Cable, diskette drive (all models)	41A7147	N
Cover (all models)	41A7148	**
Chassis assembly (all models)	41A7149	N
Bezel assembly, front (all models)	41A750	N
Fan duct assembly (all models)	41A7151	N
Shield, EMC, system board (all models)	41A7154	N
Miscellaneous hardware kit (all models)	41A7155	N
Retention bracket kit, system board (all models)	41A7156	N
Heat sink (all models)	41A7157	N
Cable, 1-drop IDE (all models)	41A7158	N
Cable, hard disk drive, 1-drop parallel-ATA (all models)	41A7159	N
Miscellaneous bezel kit (all models)	41A7160	N
Interposer cables (all models)	41A7161	N
Battery (all models)	33F8354	N

9218 Keyboards (Standard PS/2 Black)	FRU#	CRU
US English (models A1U A3G 12U 41U D1U D2G A1L A2L 11L 22L 41L 71G 72G)	89P8300	*
Arabic (models A3G D2G 71G 72G)	89P8301	*
Belgian/French (models A3G D2G 71G 72G)	89P8302	*
Belgian/UK (models A3G D2G 71G 72G)	89P8303	*
Bulgarian (models A3G D2G 71G 72G)	89P8305	*
Czech (models A3G D2G 71G 72G)	89P8307	*
Danish (models A3G D2G 71G 72G)	89P8308	*
Dutch (models A3G D2G 71G 72G)	89P8309	*
French (models A3G D2G 71G 72G)	89P8310	*

9218 Keyboards (Standard PS/2 Black)	FRU#	CRU
French Canadian 445 (models A1F 41F D1F)	89P8311	*
French Canadian 58 (models A1F 41F D1F)	89P8312	*
German (models A3G D2G 71G 72G)	89P8313	*
Greek (models A3G D2G 71G 72G)	89P8314	*
Hebrew (models A3G D2G 71G 72G)	89P8315	*
Hungarian (models A3G D2G 71G 72G)	89P8316	*
Iceland (models A3G D2G 71G 72G)	89P8317	*
Italian 141 (models A3G D2G 71G 72G)	89P8318	*
Italian 142 (models A3G D2G 71G 72G)	89P8319	*
LA Spanish (models A1S A2S 11S 22S 41S A1D A1Y A2D A2Y 11D 11Y 22D 22Y 41D 41Y)	89P8322	*
Norwegian (models A3G D2G 71G 72G)	89P8323	*
Polish (models A3G D2G 71G 72G)	89P8324	*
Portuguese (models A3G D2G 71G 72G)	89P8325	*
Romanian (models A3G D2G 71G 72G)	89P8326	*
Russian/Cy (models A3G D2G 71G 72G)	89P8327	*
Russian/Cy (models A3G D2G 71G 72G)	89P8328	*
Serbian/Cyrillic (models A3G D2G 71G 72G)	89P8329	*
Slovak (models A3G D2G 71G 72G)	89P8330	*
Spanish (models A3G D2G 71G 72G)	89P8331	*
Swedish/Finn (models A3G D2G 71G 72G)	89P8332	*
Swiss F/G (models A3G D2G 71G 72G)	89P8333	*
Turkish 440 (models A3G D2G 71G 72G)	89P8335	*
Turkish 179 (models A3G D2G 71G 72G)	89P8336	*
UK English (models A3G D2G 71G 72G)	89P8337	*
US Euro (models A3G D2G 71G 72G)	89P8338	*
Yugoslav/Latin (models A3G D2G 71G 72G)	89P8339	*
Brazil/Portuguese (models A1P A2P 11P 22P 41P)	89P8304	*

9218 mice	FRU#	CRU
Mouse, Scrollpoint Optical, USB (models A1U A1F A1S A1P A2S A2P A3G 11S 11P 12U 22S 22P 41U 41F 41S 41P D1U D1F D2G A1L A1D A1Y A2L A2D A2Y 11L 11D 11Y 22L 22D 22Y 41L 41D 41Y 71G 72G)	24P0499	*

9218 Adapters and miscellaneous FRUs	FRU#	CRU
RJ11 connector adapter (Spain, Ireland) (All "G" models)	60H6043	*
RJ11 connector adapter (Austria) (All "G" models)	60H6045	*
RJ11 connector adapter (Belgium) (All "G" models)	60H6046	*
RJ11 connector adapter (Denmark) (All "G" models)	60H6047	*
RJ11 connector adapter (Norway, Finland) (All "G" models)	60H6048	*
RJ11 connector adapter (France) (All "G" models)	60H6049	*
RJ11 connector adapter (Germany) (All "G" models)	60H6050	*

9218 Adapters and miscellaneous FRUs	FRU#	CRU
RJ11 connector adapter (UK, NZ, HK) (All "G", "M", "B", "H" models)	60H6051	*
RJ11 connector adapter (Italy) (All "G" models)	60H6052	*
RJ11 connector adapter (Netherlands) (All "G" models)	60H6053	*
RJ11 connector adapter (Sweden) (All "G" models)	60H6054	*
RJ11 connector adapter (Switzerland) (All "G" models)	60H6055	*


9218 Power Cords	FRU#	CRU
Power Cord (models A1U A1F A1S A1P A2S A2P A3G 11S 11P 12U 22S 22P 41U 41F 41S 41P D1U D1F D2G A1L A1D A2L A2D 11L 11D 22L 22D 41L 41D 71G 72G)	6952301	*
Power Cord (EMEA, ANZ, ASEAN Eng, Korea) (models A3G D2G 71G 72G)	13F9978	*
Power Cord (EMEA, ANZ, ASEAN Eng, HK Eng) (models A3G D2G 71G 72G)	14F0032	*
Power Cord (EMEA) (models A3G D2G 71G 72G)	13F9996	*
Power Cord (EMEA, LA) (models A1S A1P A2S A2P A3G 11S 11P 22S 22P 41S 41P D2G A1L A1D A1Y A2L A2D A2Y 11L 11D 11Y 22L 22D 22Y 41L 41D 41Y 71G 72G)	14F0068	*
Power Cord (APU) (models A1Y A2Y 11Y 22Y 41Y)	36L8879	*
Power Cord (EMEA) (models A3G D2G 71G 72G)	14F0086	*
Power Cord (EMEA, ANZ, ASEAN Eng) (models A3G D2G 71G 72G)	14F0014	*
Power Cord (EMEA) (models A3G D2G 71G 72G)	14F0050	*

9218 Windows XP Home Recovery CDs	FRU#	CRU
US/UK/AP/TH (models A1U A1L)	41D3954	*
FR/CF (models A1F)	41D3956	*
BR (models A1P)	41D3960	*
SP/LA (models A1S A1D A1Y)	41D3958	*

9218 Windows XP Pro Recovery CDs	FRU#	CRU
US/UK/AP/TH (models A3G 12U 41U D1U D2G A2L 11L 22L 41L 71G 72G)	41D3822	*
FR/CF (models A3G 41F D1F D2G 71G 72G)	41D3824	*
GR (models A3G D2G 71G 72G)	41D3825	*
IT (models A3G D2G 71G 72G)	41D3827	*
BR (models 41P)	41D3828	*
SP/LA (models A2S A3G 11S 22S 41S D2G A2D A2Y 11D 11Y 22D 22Y 41D 41Y 71G 72G)	41D3826	*
DK (models A3G D2G 71G 72G)	41D3830	*
NL (models A3G D2G 71G 72G)	41D3833	*
AE (models A3G D2G 71G 72G)	41D3837	*
SV (models A3G D2G 71G 72G)	41D3829	*
HE (models A3G D2G 71G 72G)	41D3834	*
FI (models A3G D2G 71G 72G)	41D3831	*
NO (models A3G D2G 71G 72G)	41D3832	*
PL (models A3G D2G 71G 72G)	41D3835	*
PO (models A3G D2G 71G 72G)	41D3841	*

9218 Windows XP Pro Recovery CDs	FRU#	CRU
RU (models A3G D2G 71G 72G)	41D3838	*
RE (models A3G D2G 71G 72G)	41D3823	*
HU (models A3G D2G 71G 72G)	41D3840	*
CZ (models A3G D2G 71G 72G)	41D3836	*
TR (models A3G D2G 71G 72G)	41D3839	*
GK (models A3G D2G 71G 72G)	41D3842	*
SL (models A3G D2G 71G 72G)	41D3843	*
Multilingual 1 (models A3G D2G 71G 72G)	41D4080	*
Multilingual 2 (models A3G D2G 71G 72G)	41D4086	*

Machine Type 9219

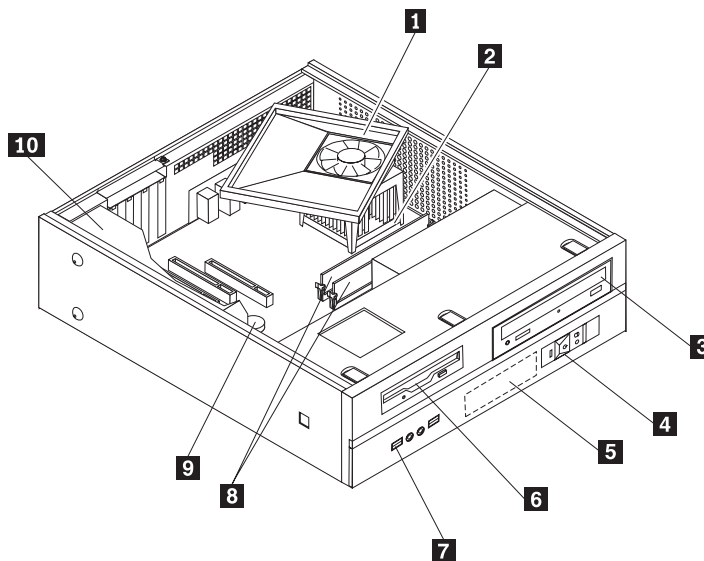

Item #	9219 FRUs	FRU#	CRU
1	Heat sink and fan assembly (models A1G 11G 41S 41P 41Y 71G 72G)	41D2001	N
2	Microprocessor, 2.66 Ghz, Celeron D, 533FSB, 256KB L2 (models A1G)	41D1796	N
2	Microprocessor, 2.93 Ghz, Celeron D, 533FSB, 256KB L2 (models 71G)	41D1798	N
2	Microprocessor, 2.93 Ghz, Pentium 4, 533FSB, 1MB L2 (models 11G 72G)	41D1802	N
2	Microprocessor, 3.0 Ghz, Pentium 4, 800FSB, 1MB L2 (models 41U 41S 41P 41Y)	41D1805	N
3	CD-ROM Drive 48X - Black w/o jack & vol (models A1G 41U 41S 41P 41Y)	40Y8807	N
3	DVD-ROM 16X-48X (models 11G)	40Y8933	N
3	DVD-ROM 16X-48X (models 11G)	40Y8935	N
3	Combo 48X-32X-48X-16X DVD - ROM - CDRW (models 71G)	40Y8919	N
4	Power switch/LED assembly (all models)	41A7152	N
5	Hard disk drive, 40GB, 7200rpm Parallel ATA (models A1G 11G 41U 41S 41P 41Y)	41D2034	N
5	Hard disk drive, 80GB, 7200rpm Parallel ATA (models 71G 72G)	41D2035	N
6	Diskette drive, wo/bezel (models D1G 71G)	41D3724	N

Item #	9219 FRUs	FRU#	CRU
7	Front panel card (all models)	41A7153	N
8	Memory module, 256MB PC 3200 (models A1G 11G 71G 72G)	41D2026	**
8	Memory module, 512MB PC 3200 (models 41U 41S 41P 41Y)	41D2027	**
9	System board, 10-100 Enet (models A1G 11G 41U 41S 41P 41Y 71G 72G)	41D1794	N
10	Power supply (all models)	41N3089	N

The FRUs listed in the following table are not illustrated.

9219 FRUs	FRU#	CRU
Shield, EMC, 5.25in. drive bay (all models)	41A7162	N
Cable, Serial-ATA, (18in. RoHs) (all models)	41A7145	N
Shield, EMC, diskette drive bay (all models)	41A7146	N
Cable, diskette drive (all models)	41A7147	N
Cover (all models)	41A7148	**
Chassis assembly (all models)	41A7149	N
Bezel assembly, front (all models)	41A750	N
Fan duct assembly (all models)	41A7151	N
Shield, EMC, system board (all models)	41A7154	N
Miscellaneous hardware kit (all models)	41A7155	N
Retention bracket kit, system board (all models)	41A7156	N
Cable, 1-drop IDE (all models)	41A7158	N
Cable, hard disk drive, 1-drop parallel-ATA (all models)	41A7159	N
Miscellaneous bezel kit (all models)	41A7160	N
Interposer cables (all models)	41A7161	N
Battery (all models)	33F8354	N

9219 Keyboards (Standard PS/2 Black)	FRU#	CRU
US English (models A1G 11G 41U 71G 72G)	89P8300	*
Arabic (models A1G 11G 71G 72G)	89P8301	*
Belgian/French (models A1G 11G 71G 72G)	89P8302	*
Belgian/UK (models A1G 11G 71G 72G)	89P8303	*
Bulgarian (models A1G 11G 71G 72G)	89P8305	*
Czech (models A1G 11G 71G 72G)	89P8307	*
Danish (models A1G 11G 71G 72G)	89P8308	*
Dutch (models A1G 11G 71G 72G)	89P8309	*
French (models A1G 11G 71G 72G)	89P8310	*
German (models A1G 11G 71G 72G)	89P8313	*
Greek (models A1G 11G 71G 72G)	89P8314	*
Hebrew (models A1G 11G 71G 72G)	89P8315	*
Hungarian (models A1G 11G 71G 72G)	89P8316	*
Iceland (models A1G 11G 71G 72G)	89P8317	*

9219 Keyboards (Standard PS/2 Black)	FRU#	CRU
Italian 141 (models A1G 11G 71G 72G)	89P8318	*
Italian 142 (models A1G 11G 71G 72G)	89P8319	*
LA Spanish (models 41S 41Y)	89P8322	*
Norwegian (models A1G 11G 71G 72G)	89P8323	*
Polish (models A1G 11G 71G 72G)	89P8324	*
Portuguese (models A1G 11G 71G 72G)	89P8325	*
Romanian (models A1G 11G 71G 72G)	89P8326	*
Russian/Cy (models A1G 11G 71G 72G)	89P8327	*
Russian/Cy (models A1G 11G 71G 72G)	89P8328	*
Serbian/Cyrillic (models A1G 11G 71G 72G)	89P8329	*
Slovak (models A1G 11G 71G 72G)	89P8330	*
Spanish (models A1G 11G 71G 72G)	89P8331	*
Swedish/Finn (models A1G 11G 71G 72G)	89P8332	*
Swiss F/G (models A1G 11G 71G 72G)	89P8333	*
Turkish 440 (models A1G 11G 71G 72G)	89P8335	*
Turkish 179 (models A1G 11G 71G 72G)	89P8336	*
UK English (models A1G 11G 71G 72G)	89P8337	*
US Euro (models A1G 11G 71G 72G)	89P8338	*
Yugoslav/Latin (models A1G 11G 71G 72G)	89P8339	*
Brazil/Portuguese (models 41P)	89P8304	*

9219 mice	FRU#	CRU
Mouse, Scrollpoint Optical, USB (models A1G 11G 41U 41S 41P 41Y 71G 72G)	24P0499	*

9219 Adapters and miscellaneous FRUs	FRU#	CRU
RJ11 connector adapter (Spain, Ireland) (All "G" models)	60H6043	*
RJ11 connector adapter (Austria) (All "G" models)	60H6045	*
RJ11 connector adapter (Belgium) (All "G" models)	60H6046	*
RJ11 connector adapter (Denmark) (All "G" models)	60H6047	*
RJ11 connector adapter (Norway, Finland) (All "G" models)	60H6048	*
RJ11 connector adapter (France) (All "G" models)	60H6049	*
RJ11 connector adapter (Germany) (All "G" models)	60H6050	*
RJ11 connector adapter (UK, NZ, HK) (All "G", "M", "B", "H" models)	60H6051	*
RJ11 connector adapter (Italy) (All "G" models)	60H6052	*
RJ11 connector adapter (Netherlands) (All "G" models)	60H6053	*
RJ11 connector adapter (Sweden) (All "G" models)	60H6054	*
RJ11 connector adapter (Switzerland) (All "G" models)	60H6055	*

9219 Power Cords	FRU#	CRU
Power Cord (models A1G 11G 41U 41S 41P 71G 72G)	6952301	*
Power Cord (EMEA, ANZ, ASEAN Eng, Korea) (models A1G 11G 71G 72G)	13F9978	*

9219 Power Cords	FRU#	CRU
Power Cord (EMEA, ANZ, ASEAN Eng, HK Eng) (models A1G 11G 71G 72G)	14F0032	*
Power Cord (EMEA) (models A1G 11G 71G 72G)	13F9996	*
Power Cord (EMEA, LA) (models A1G 11G 41S 41P 41Y 71G 72G)	14F0068	*
Power Cord (APU) (models 41Y)	36L8879	*
Power Cord (EMEA) (models A1G 11G 71G 72G)	14F0086	*
Power Cord (EMEA, ANZ, ASEAN Eng) (models A1G 11G 71G 72G)	14F0014	*
Power Cord (EMEA) (models A1G 11G 71G 72G)	14F0050	*

9219 Windows XP Pro Recovery CDs	FRU#	CRU
US/UK/AP/TH (models A1G 11G 41U 71G 72G)	41D3822	*
FR/CF (models A1G 11G 71G 72G)	41D3824	*
GR (models A1G 11G 71G 72G)	41D3825	*
IT (models A1G 11G 71G 72G)	41D3827	*
BR (models 41P)	41D3828	*
SP/LA (models A1G 11G 41S 41Y 71G 72G)	41D3826	*
DK (models A1G 11G 71G 72G)	41D3830	*
NL (models A1G 11G 71G 72G)	41D3833	*
AE (models A1G 11G 71G 72G)	41D3837	*
SV (models A1G 11G 71G 72G)	41D3829	*
HE (models A1G 11G 71G 72G)	41D3834	*
FI (models A1G 11G 71G 72G)	41D3831	*
NO (models A1G 11G 71G 72G)	41D3832	*
PL (models A1G 11G 71G 72G)	41D3835	*
PO (models A1G 11G 71G 72G)	41D3841	*
RU (models A1G 11G 71G 72G)	41D3838	*
RE (models A1G 11G 71G 72G)	41D3823	*
HU (models A1G 11G 71G 72G)	41D3840	*
CZ (models A1G 11G 71G 72G)	41D3836	*
TR (models A1G 11G 71G 72G)	41D3839	*
GK (models A1G 11G 71G 72G)	41D3842	*
SL (models A1G 11G 71G 72G)	41D3843	*
Multilingual 1 (models A1G 11G 71G 72G)	41D4080	*
Multilingual 2 (models A1G 11G 71G 72G)	41D4086	*

Chapter 11. Additional Service Information

This chapter provides additional information that the service representative might find helpful.

Security features

Security features in this section include the following:

- Passwords
- Vital Product Data
- Management Information Format (MIF)

Hardware controlled Passwords

Hardware controlled passwords are set using the CMOS Setup Utility program. For more information about passwords, see “Using passwords” on page 51.

Operating system password

An operating system password is very similar to a power-on password and denies access to the computer by an unauthorized user when the password is activated. The computer is unusable until the password is entered and recognized by the computer.

Vital product data

Each computer has a unique Vital Product Data (VPD) code stored in the nonvolatile memory on the system board. After you replace the system board, the VPD must be updated. To update the VPD, see “Flash update procedures” on page 184.

Management Information Format (MIF)

Management Information Format (MIF) is a file used to maintain a list of the system unit serial number along with all serialized components (for example, system board, riser card, memory, and processor).

At the time of computer manufacture, the EPROM is loaded with the serial numbers of the system and all major components.

A company called Retain-a-Group is a central data warehouse offering serial number data management. Retain-a-Group acts as a focal point to law enforcement. The customer has the option to purchase serial number information and services from Retain-a-Group. It is the customer’s responsibility to maintain the MIF file and to inform Retain-a-Group of any changes to the file.

Some customers might request that their servicers assist them in maintaining the MIF file when serialized components are replaced during hardware service. This assistance is between the customer and the servicer. The servicer can use the DMI MIF Browser to update the MIF information in the EPROM. It is anticipated that some servicers might charge for this service.

To update the EPROM using the DMI MIF Browser, use the following procedure.

1. Click **Start** from the desktop, then **Programs**.

2. Select **SystemView Agent**
3. Select the **Serial Number Information** icon
4. Click the plus sign to expand.
5. Select the component you want to view or edit.
6. Double click on the component you want to change.
7. Enter new data in the *Value* field, then click **Apply**.

BIOS levels

An incorrect level of BIOS can cause false errors and unnecessary FRU replacement. Use the following information to determine the current level of BIOS installed in the computer, the latest BIOS available for the computer, and where to obtain the latest level of BIOS.

- To determine the current Level of BIOS:
 - Start the CMOS Setup Utility.
 - Select Standard CMOS Features.
- Sources for obtaining the latest level BIOS available
 1. Lenovo support web site:
<http://www.lenovo.com/think/support/>
 2. Lenovo Customer Support Center
 3. Levels 1 and 2 Support

To update (flash) the BIOS, see “Flash update procedures.”

Flash update procedures

This section details how to flash (update) the BIOS.

Updating (flashing) BIOS from a diskette

1. Insert a system program update (flash) diskette into the diskette drive. system program updates are available at <http://www.lenovo.com/think/support> on the World Wide Web.
2. Turn on the computer. If it is already on, you must turn it off and back on. The update begins.
3. Follow the instructions on the screen to complete the update.

Recovering from a POST/BIOS update failure

Attention: If an interruption occurs during a POST/BIOS update (flash update), the computer might not restart correctly. If this occurs, perform the following procedure (also known as a Boot-block recovery).

Note: If your computer has no internal diskette drive, an optional USB diskette drive must be connected to use the BIOS flash diskette.

1. Turn the computer off and insert the special recovery BIOS flash diskette in the diskette drive.
2. Turn the computer on.
3. The recovery session takes two to three minutes. During this time you will hear a series of beeps. After the update session completes, the series of beeps ends and the computer automatically turns off. There is no video during the recovery session.

4. Remove the special recovery BIOS flash diskette from the diskette drive.

Power management

Power management reduces the power consumption of certain components of the computer such as the system power supply, processor, hard disk drives, and some monitors.

Automatic configuration and power interface (ACPI) BIOS

Being an ACPI BIOS system, the operating system is allowed to control the power management features of the computer and the setting for Advanced Power Management (APM) BIOS mode is ignored. Not all operating systems support ACPI BIOS mode.

Automatic Power-On features

The Automatic Power-On features within the Power Management menu allow you to enable and disable features that turn on the computer automatically.

- **Serial Port A Ring Detect:** With this feature set to **Enabled** and an external modem connected to serial port (COM1), the computer will turn on automatically when a ring is detected on the modem.
- **PCI Modem Ring Detect:** With this feature set to **Enabled**, the computer will turn on automatically when a ring is detected on the internal modem.
- **PCI Wake Up:** This feature allows PCI cards that support this capability to wake the system.
- **Wake Up on Alarm:** You can specify a date and time at which the computer will be turned on automatically. This can be either a single event or a daily event.
- **Wake on LAN:** If the computer has a properly configured token-ring or Ethernet LAN adapter card that is Wake on LAN-enabled and there is remote network management software, you can use the Wake on LAN feature. When you set Wake on LAN to **Enabled**, the computer will turn on when it receives a specific signal from another computer on the local area network (LAN).

Recovering software using the Rescue and Recovery program

The Rescue and Recovery program provides an environment that runs independently of the Windows operating system and is hidden from the Windows operating system. Because the Rescue and Recovery workspace is hidden, it is immune from most virus attacks and provides a safe place to perform rescue and recovery operations that might not be possible in the Windows environment. The following recovery solutions are provided by the Rescue and Recovery program:

- Create Product Recovery discs.
- Create rescue media.
- Back up your hard disk periodically.
- Create a Recovery Repair diskette.

If a problem with the software is encountered, you can use the recovery tools from either the Windows environment or from the Rescue and Recovery workspace to do one of the two recovery operations:

- Rescue files
- Restore your backups

Starting the Rescue and Recovery workspace

To start the program:

1. If your computer is already on when you start this procedure, shut down the operating system and turn off the computer.
2. Repeatedly press the F11 key as you turn on the computer.

Note: If a user password or an administrator password has been set, the Rescue and Recovery workspace is not displayed until you type the password.

3. The Rescue and Recovery workspace is displayed.

Refer to the *Quick Reference* that comes with the computer and the Rescue and Recovery help system for additional information about using the Rescue and Recovery program.

Appendix. Notices

Lenovo may not offer the products, services, or features discussed in this document in all countries. Consult your local Lenovo representative for information on the products and services currently available in your area. Any reference to a Lenovo product, program, or service is not intended to state or imply that only that Lenovo product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any Lenovo intellectual property right may be used instead. However, it is the user's responsibility to evaluate and verify the operation of any other product, program, or service.

Lenovo may have patents or pending patent applications covering subject matter described in this document. The furnishing of this document does not give you any license to these patents. You can send license inquiries, in writing, to:

*Lenovo (United States), Inc.
500 Park Offices Drive, Hwy. 54
Research Triangle Park, NC 27709
U.S.A.
Attention: Lenovo Director of Licensing*

LENOVO GROUP LTD. PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some jurisdictions do not allow disclaimer of express or implied warranties in certain transactions, therefore, this statement may not apply to you.

This information could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in new editions of the publication. Lenovo may make improvements and/or changes in the product(s) and/or the program(s) described in this publication at any time without notice.

The products described in this document are not intended for use in implantation or other life support applications where malfunction may result in injury or death to persons. The information contained in this document does not affect or change Lenovo product specifications or warranties. Nothing in this document shall operate as an express or implied license or indemnity under the intellectual property rights of Lenovo or third parties. All information contained in this document was obtained in specific environments and is presented as an illustration. The result obtained in other operating environments may vary.

Lenovo may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you.

Any references in this publication to non-Lenovo Web sites are provided for convenience only and do not in any manner serve as an endorsement of those Web sites. The materials at those Web sites are not part of the materials for this Lenovo product, and use of those Web sites is at your own risk.

Any performance data contained herein was determined in a controlled environment. Therefore, the result obtained in other operating environments may

vary significantly. Some measurements may have been made on development-level systems and there is no guarantee that these measurements will be the same on generally available systems. Furthermore, some measurements may have been estimated through extrapolation. Actual results may vary. Users of this document should verify the applicable data for their specific environment.

Television output notice

The following notice applies to models that have the factory-installed television-output feature.

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

Trademarks

The following terms are trademarks of Lenovo in the United States, other countries, or both:

- Lenovo
- ThinkCentre
- PS/2
- Rescue and Recovery

The following terms are trademarks of International Business Machines Corporation in the United States, other countries, or both:

- Asset ID
- Alert on LAN
- IBM (used under license)
- Wake on LAN

Intel and Pentium are trademarks of Intel Corporation in the United States, other countries, or both.

Microsoft and Windows are trademarks of Microsoft Corporation in the United States, other countries, or both.

Other company, product, or service names may be trademarks or service marks of others.

ThinkCentre®

Part Number: 41D2779

Printed in USA

(1P) P/N: 41D2779

